
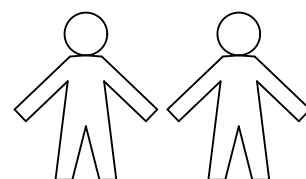





1.

M1919_03














rauch

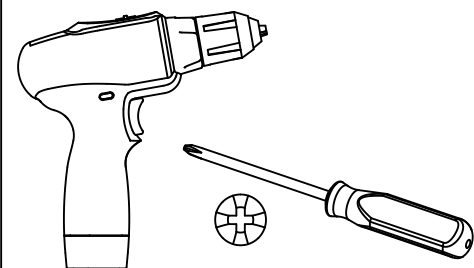

ABD-FOLIE
147x46

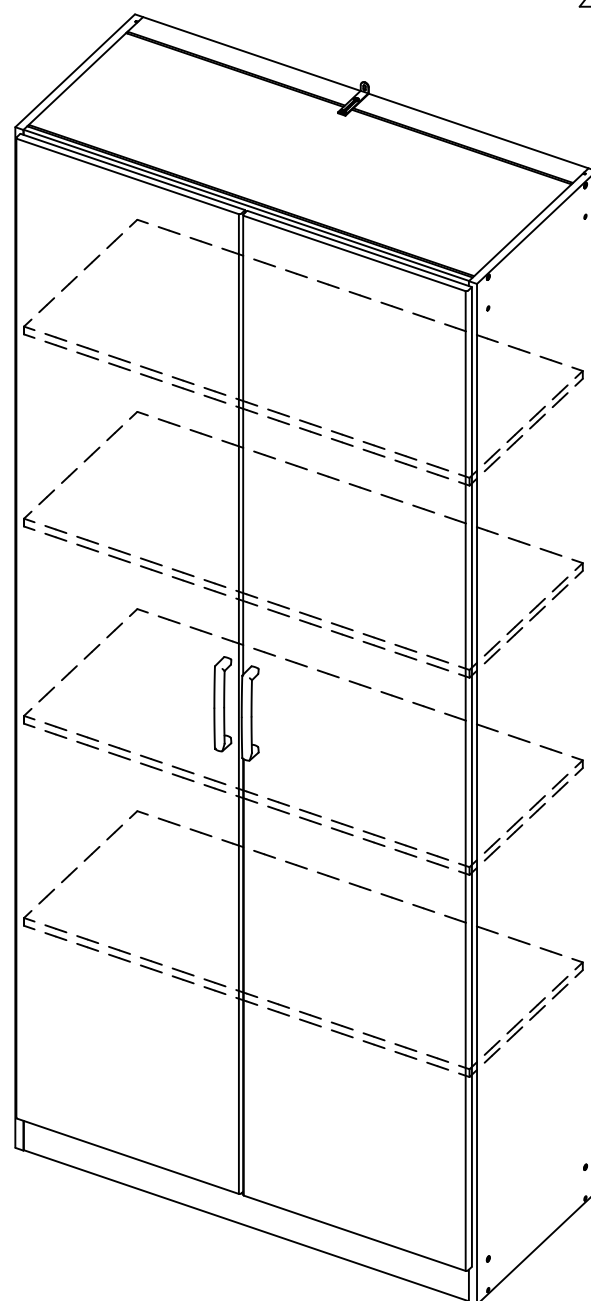
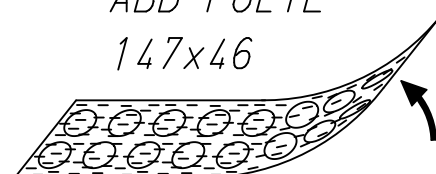


2.

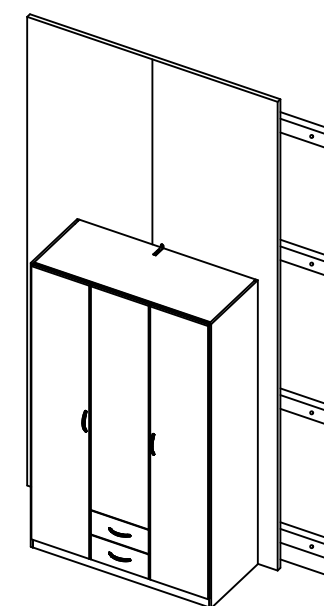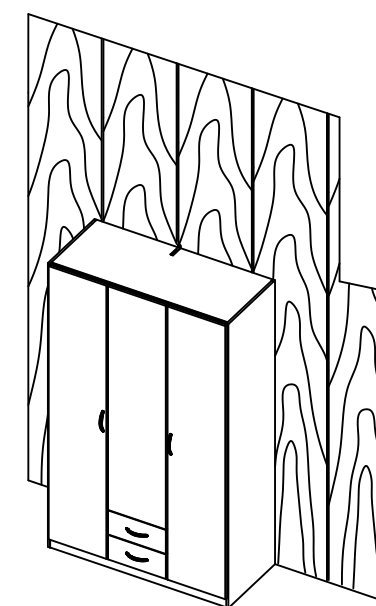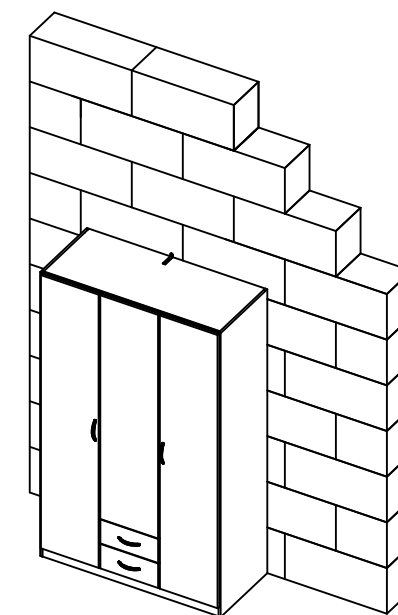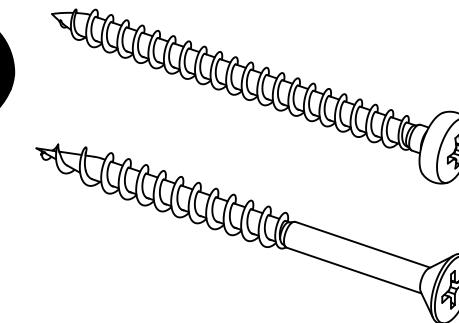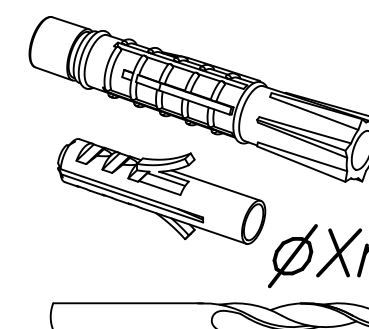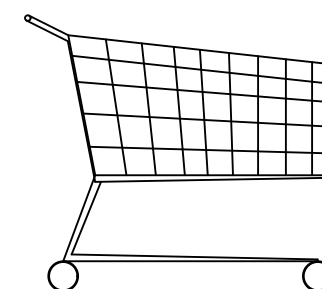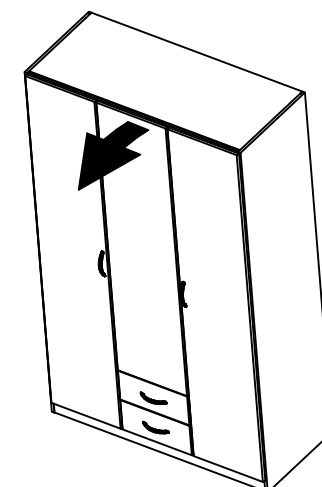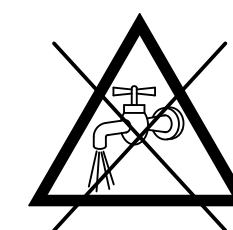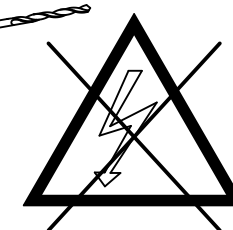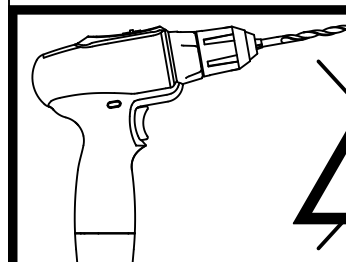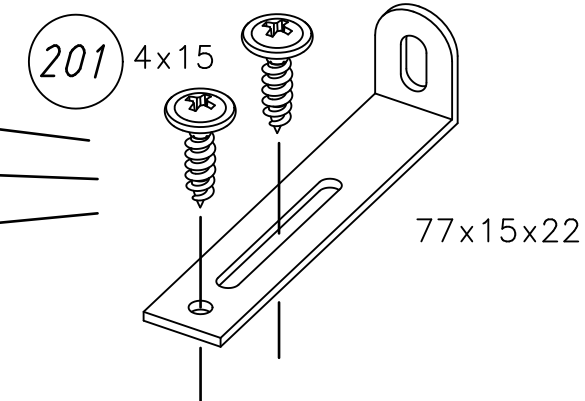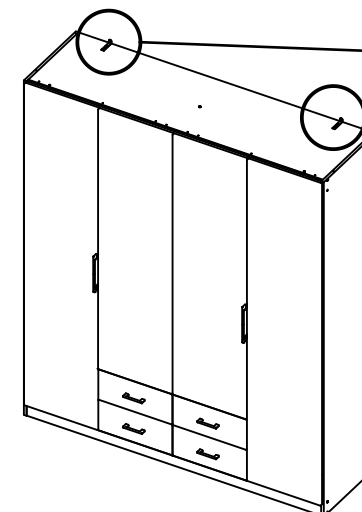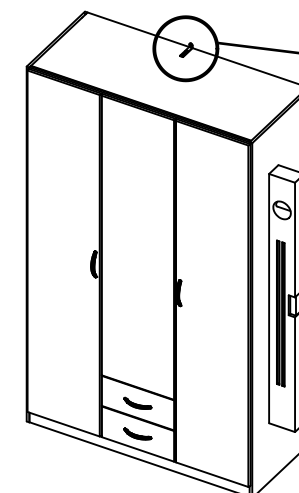


This diagram illustrates the exploded view of a cabinet assembly. The components are labeled as follows:

- Tu1**: Top panel (left side)
- Tu2**: Top panel (right side)
- Se1**: Side panel (left side)
- Wa**: Wall panel
- Rw**: Rear panel
- Se2**: Side panel (right side)
- Bo1**: Bottom panel (left side)
- Bo2**: Bottom panel (right side)
- So1**: Support leg (left side)
- So2**: Support leg (right side)


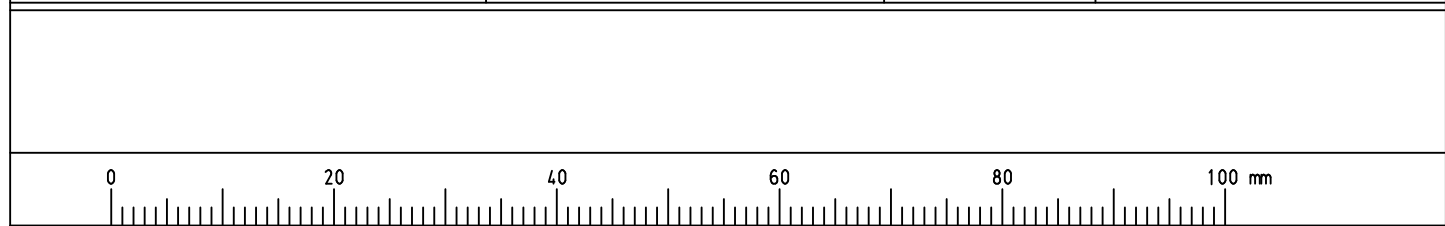
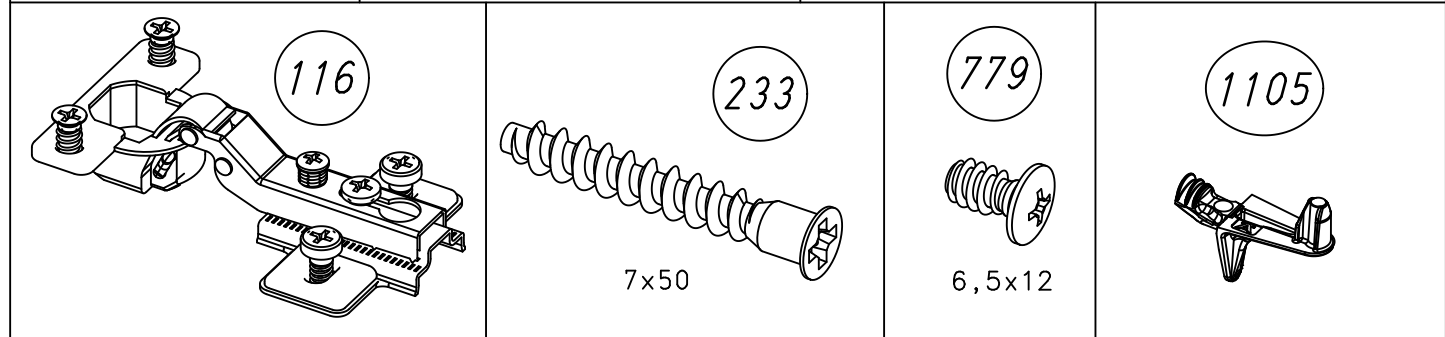
[illegible]

M1919

5.

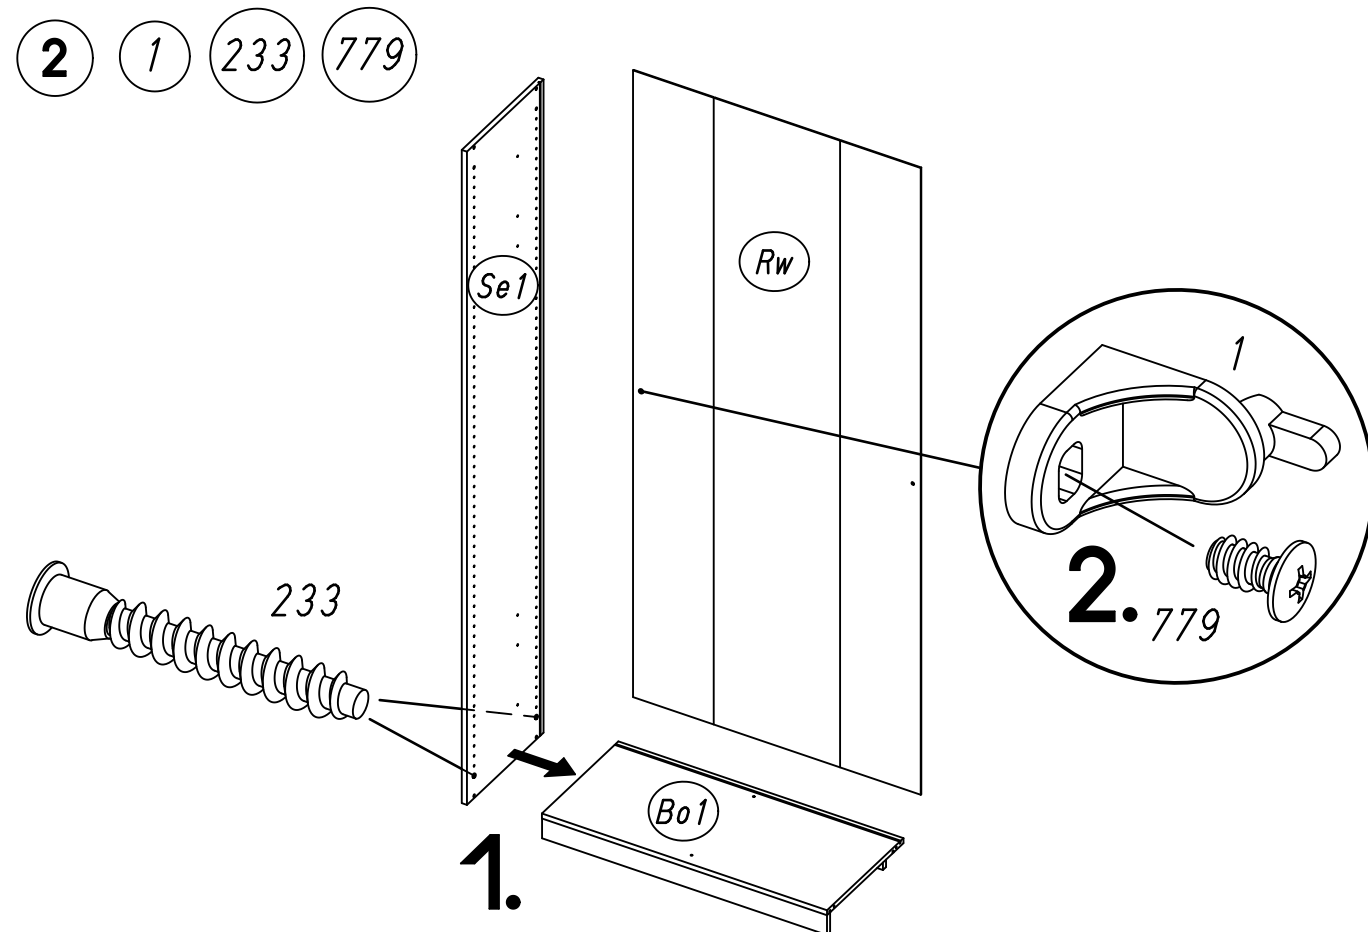


6.

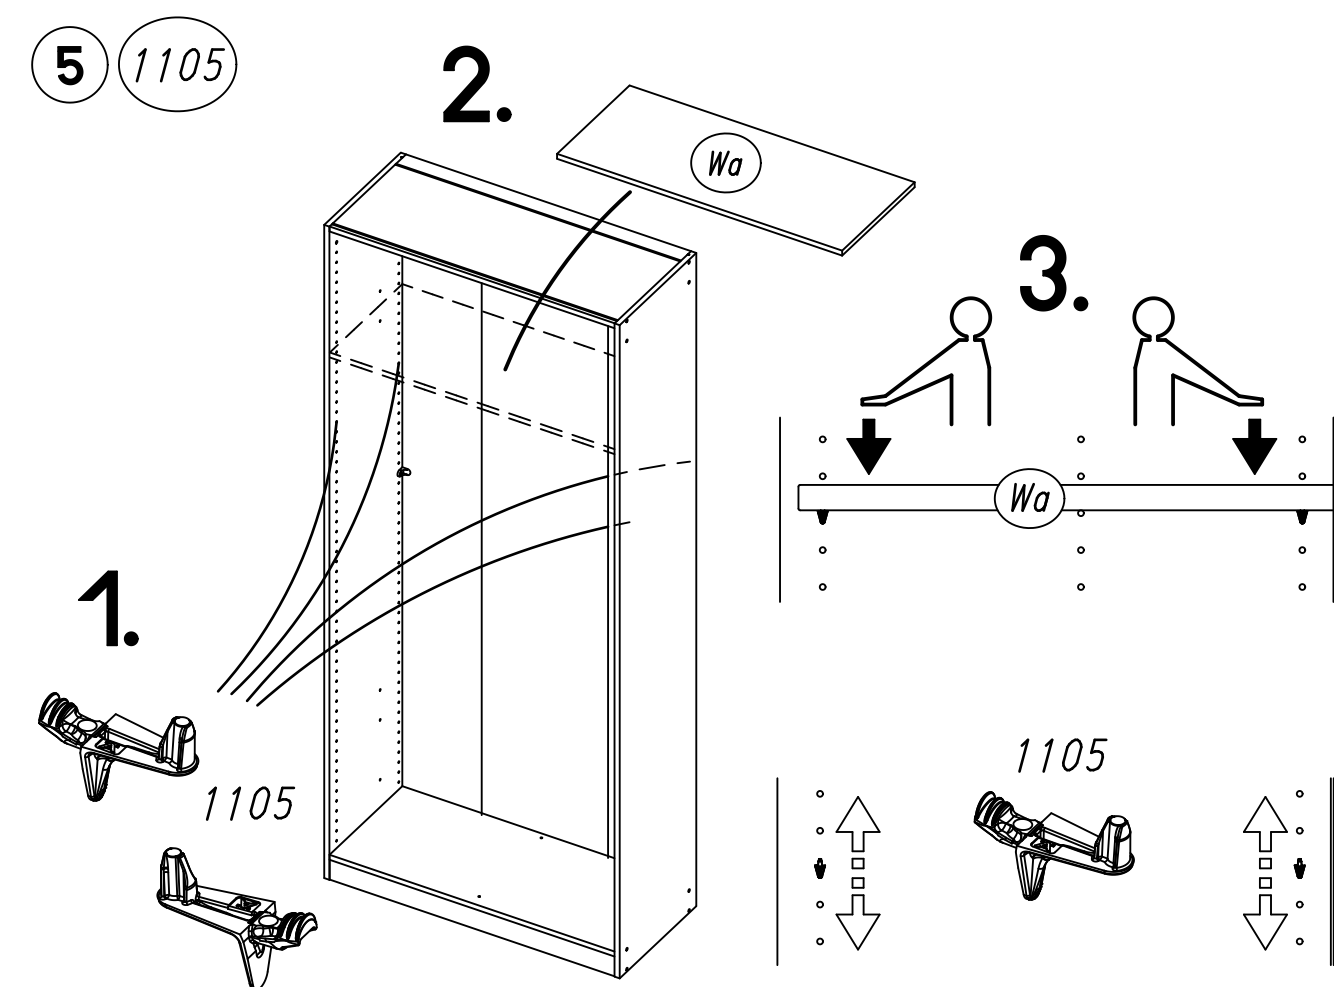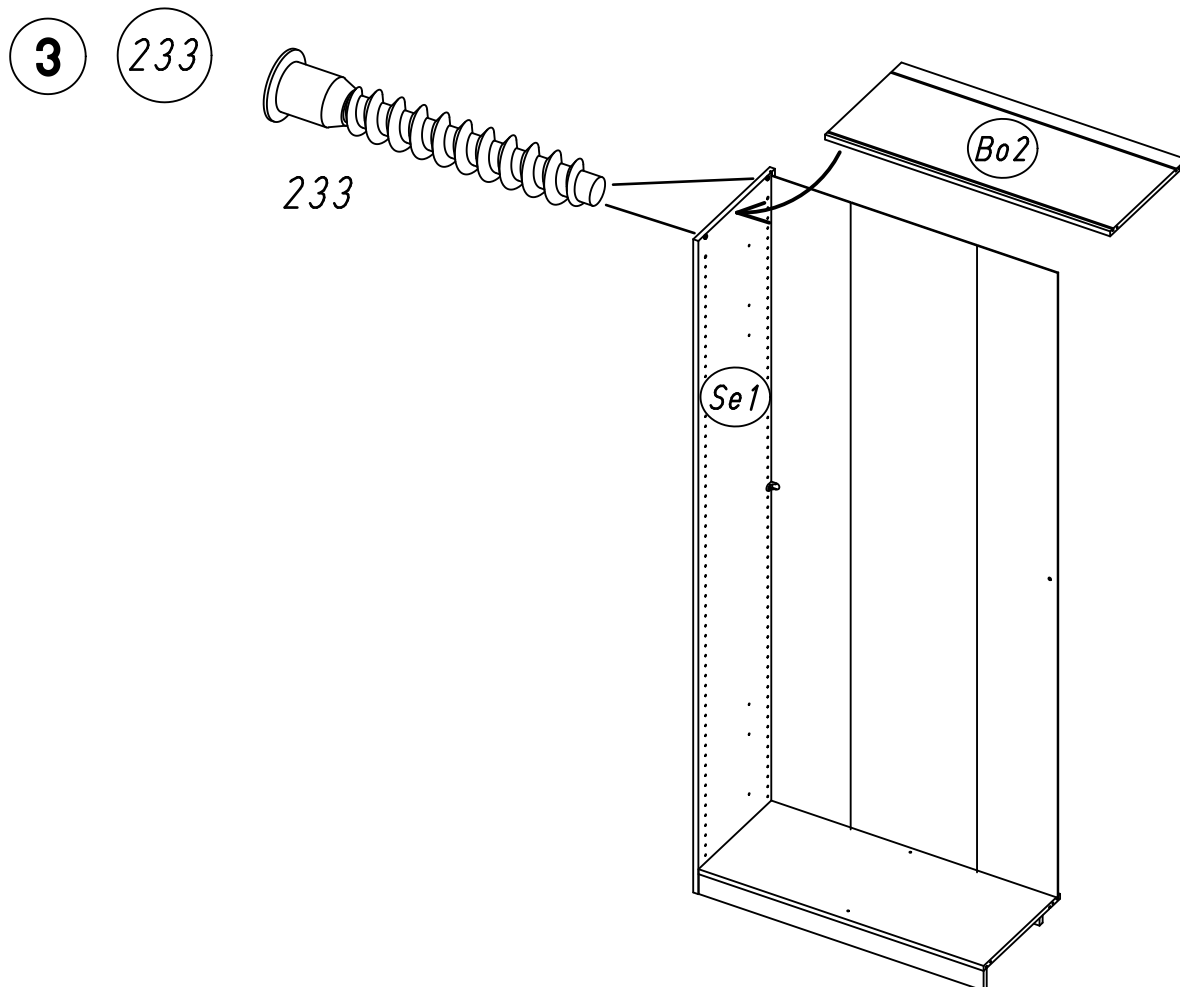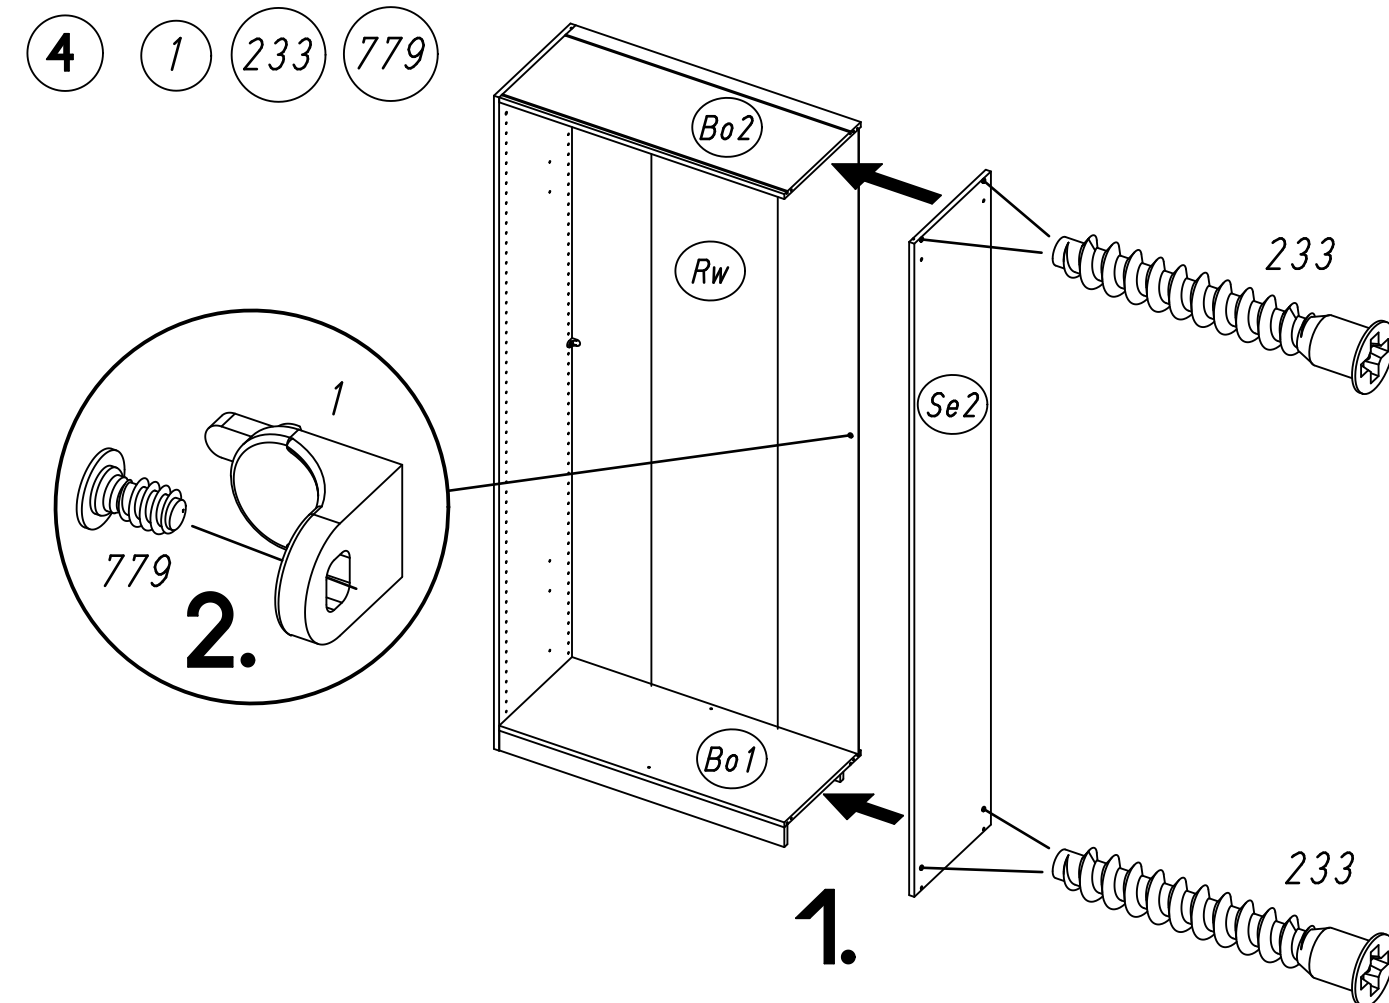





7.

6

116

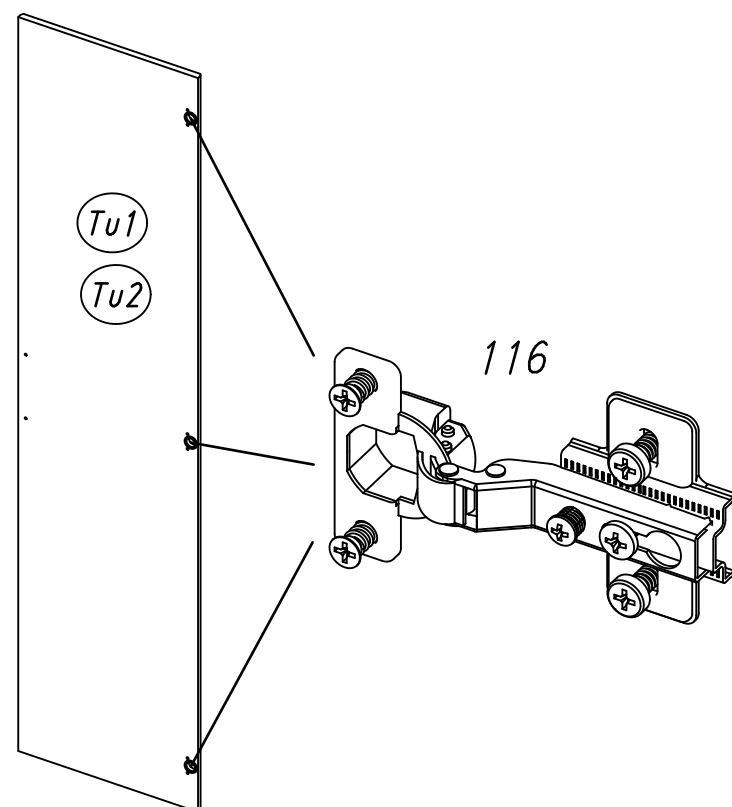

7

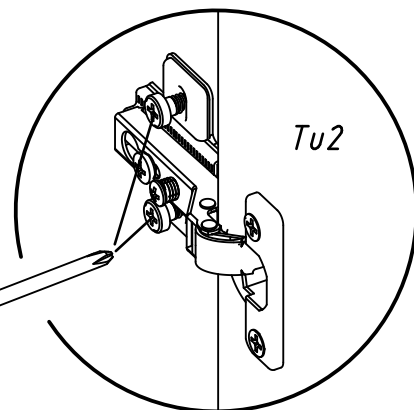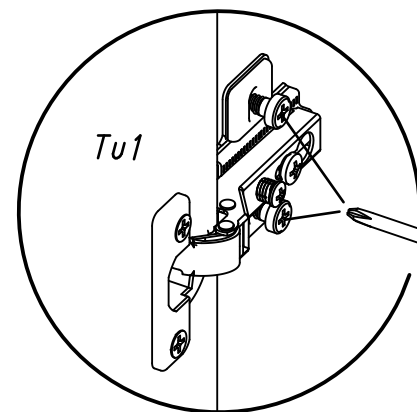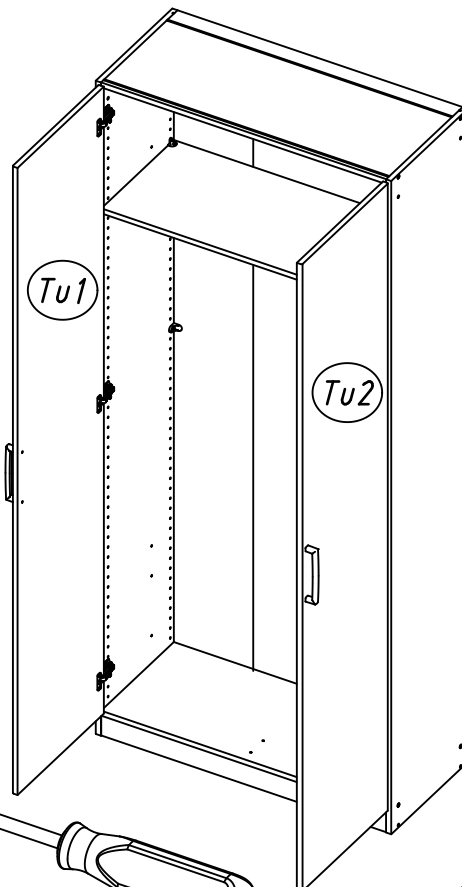
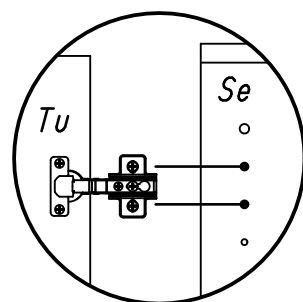


M1919

8.




8

12

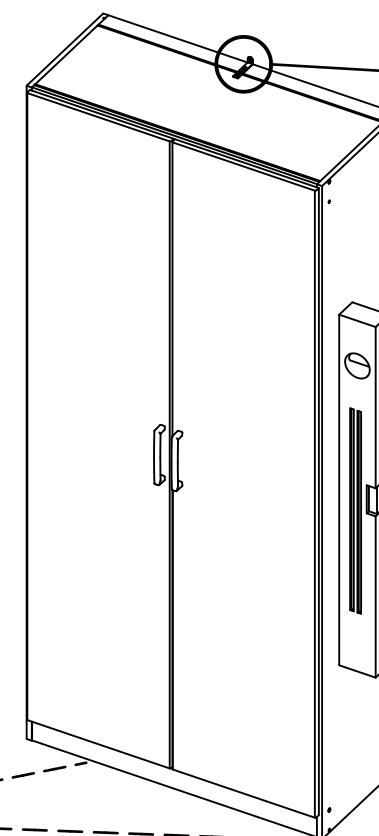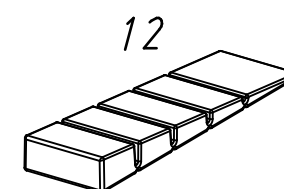

9

ABD-FOLIE
147x46

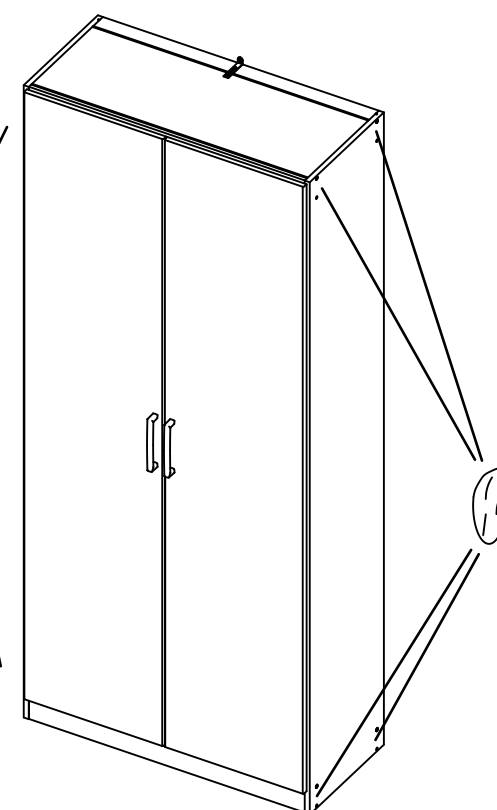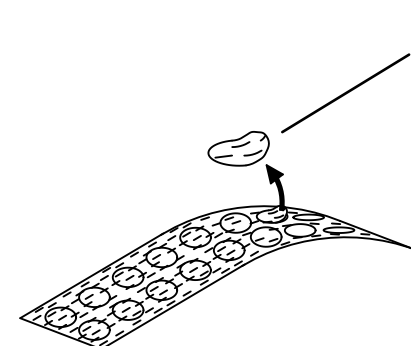

M1919

10

