
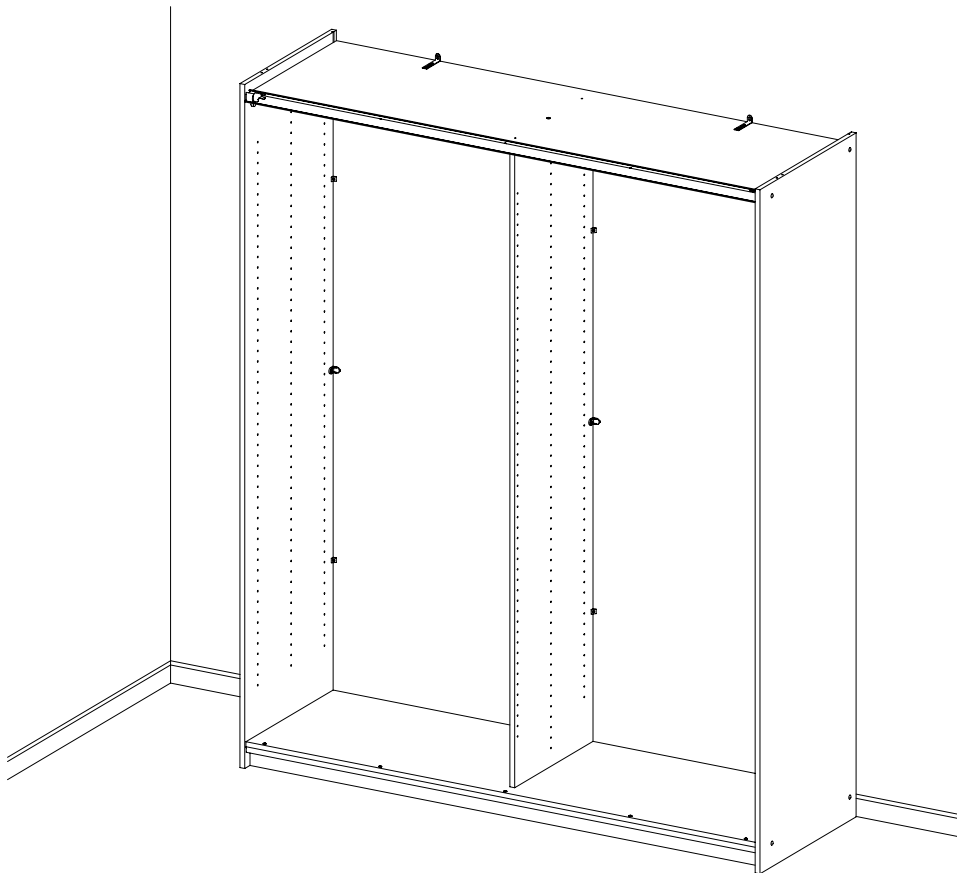
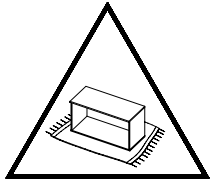
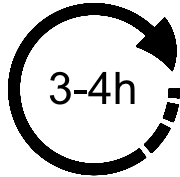




1.

M2660_02

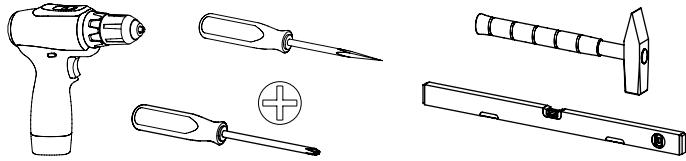

M2660

2.

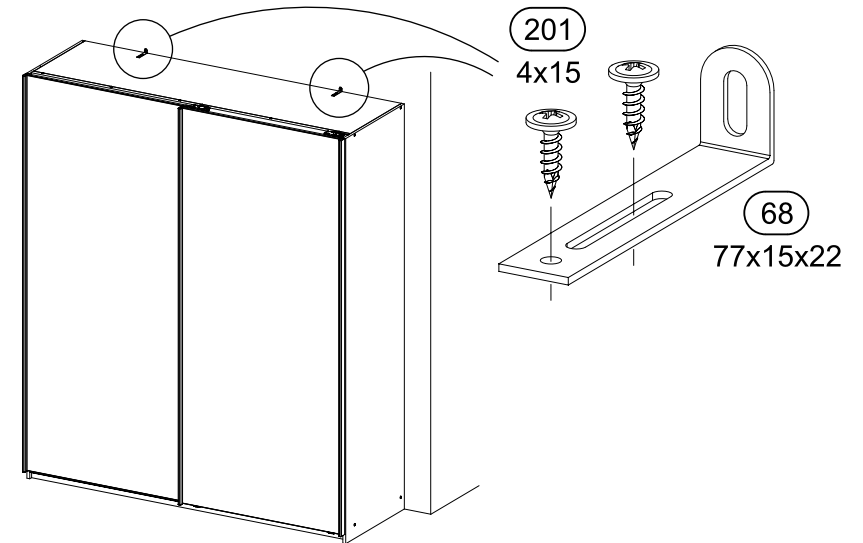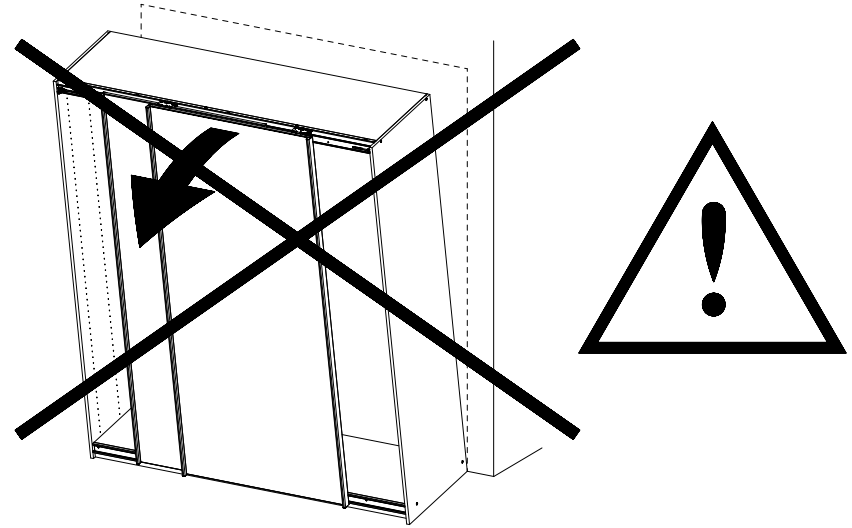


VIDEO




SCAN ME


M2660

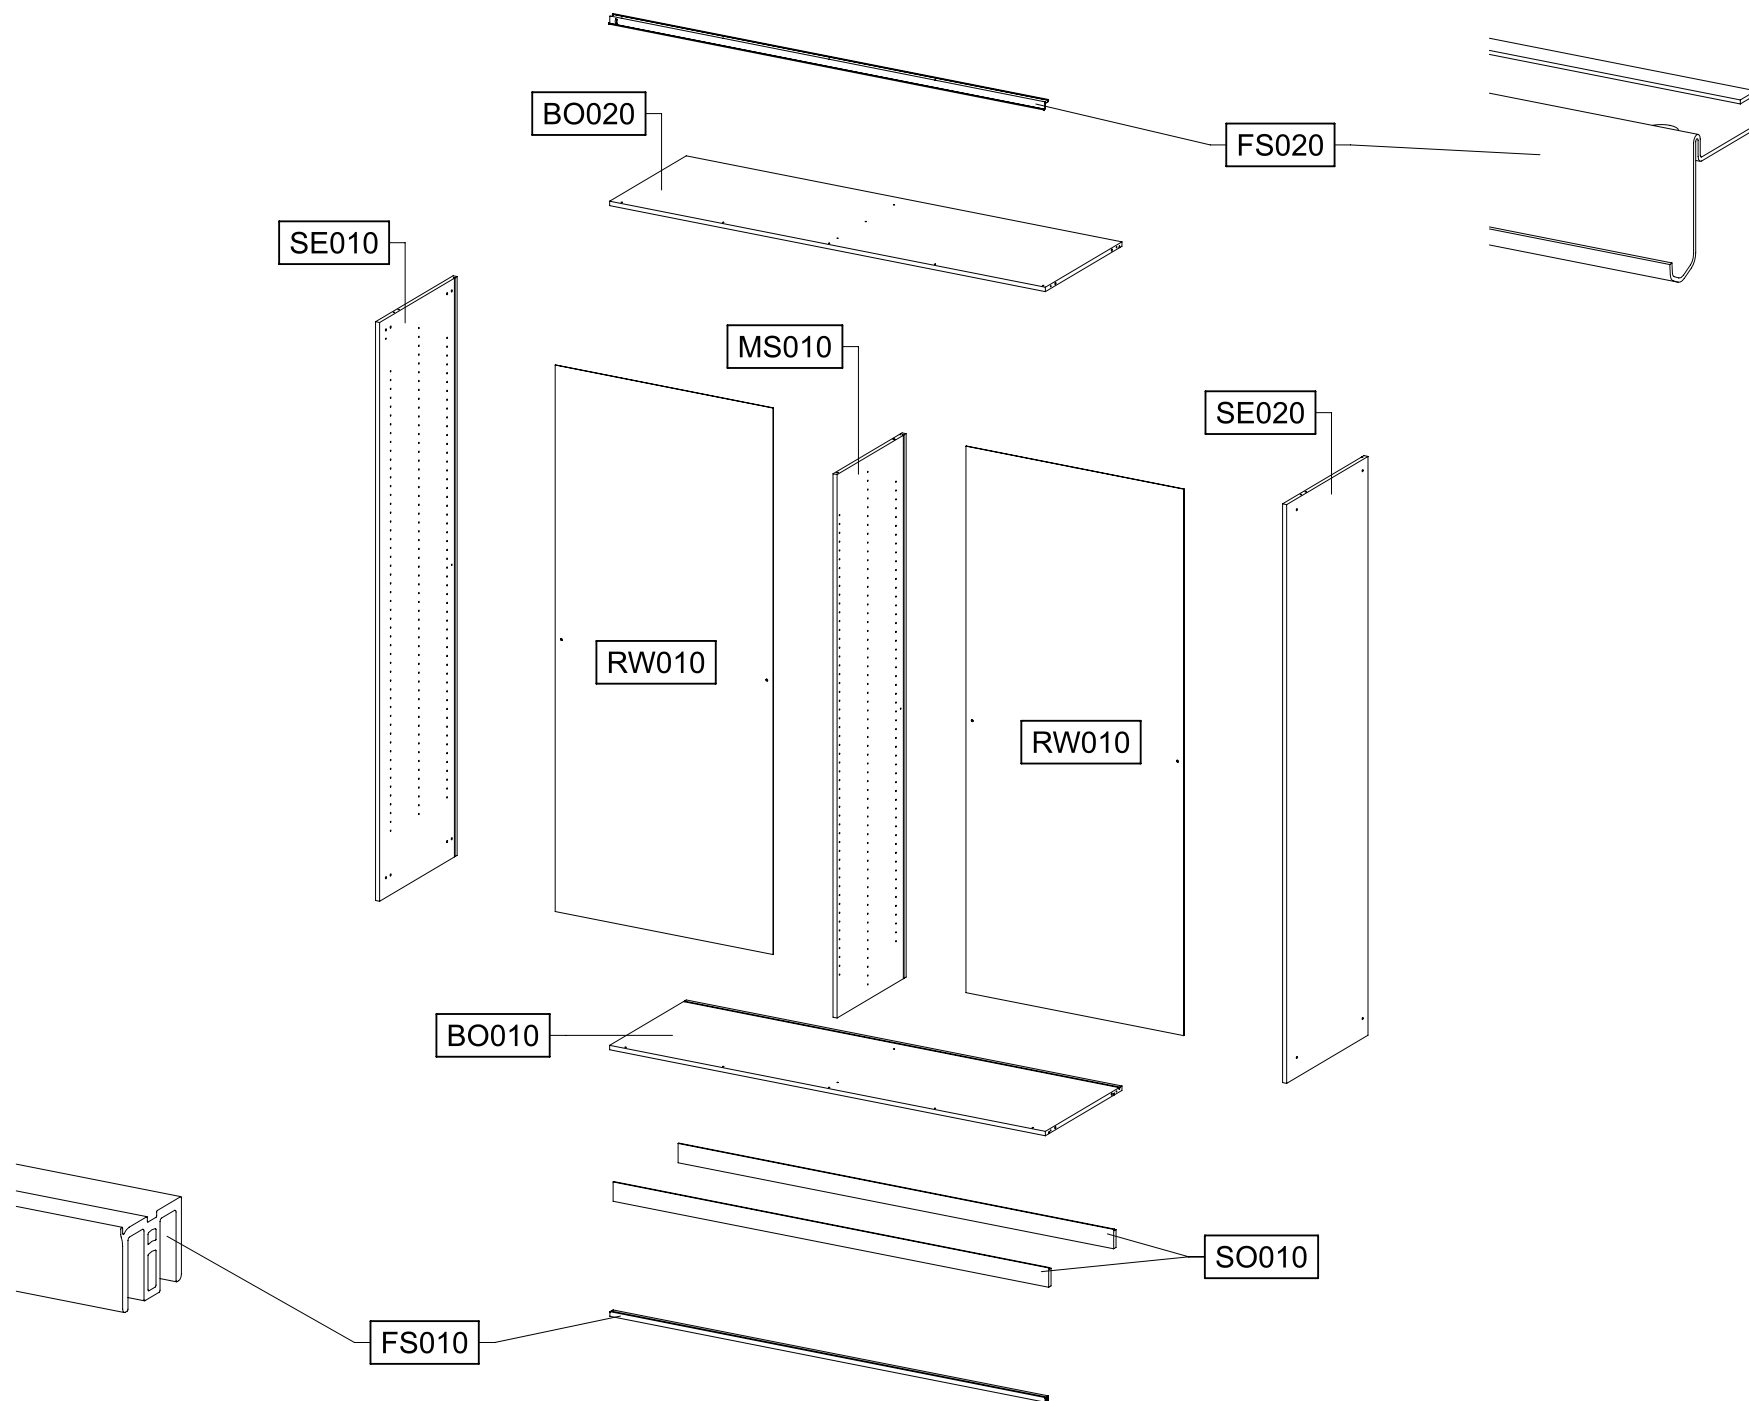


M2660

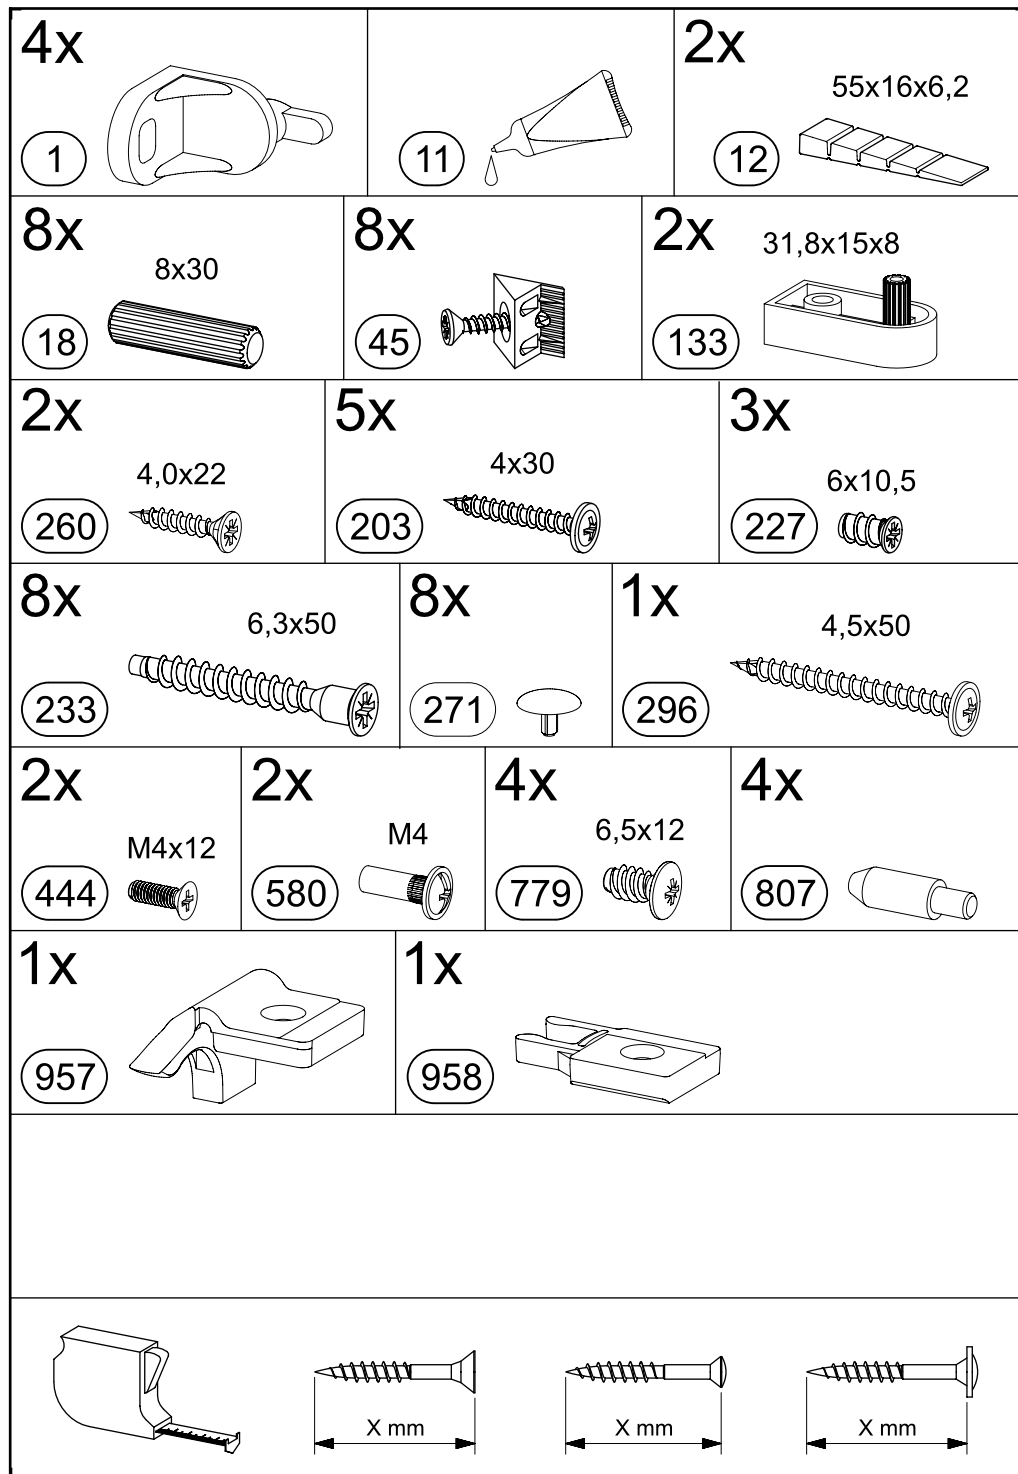

M2660

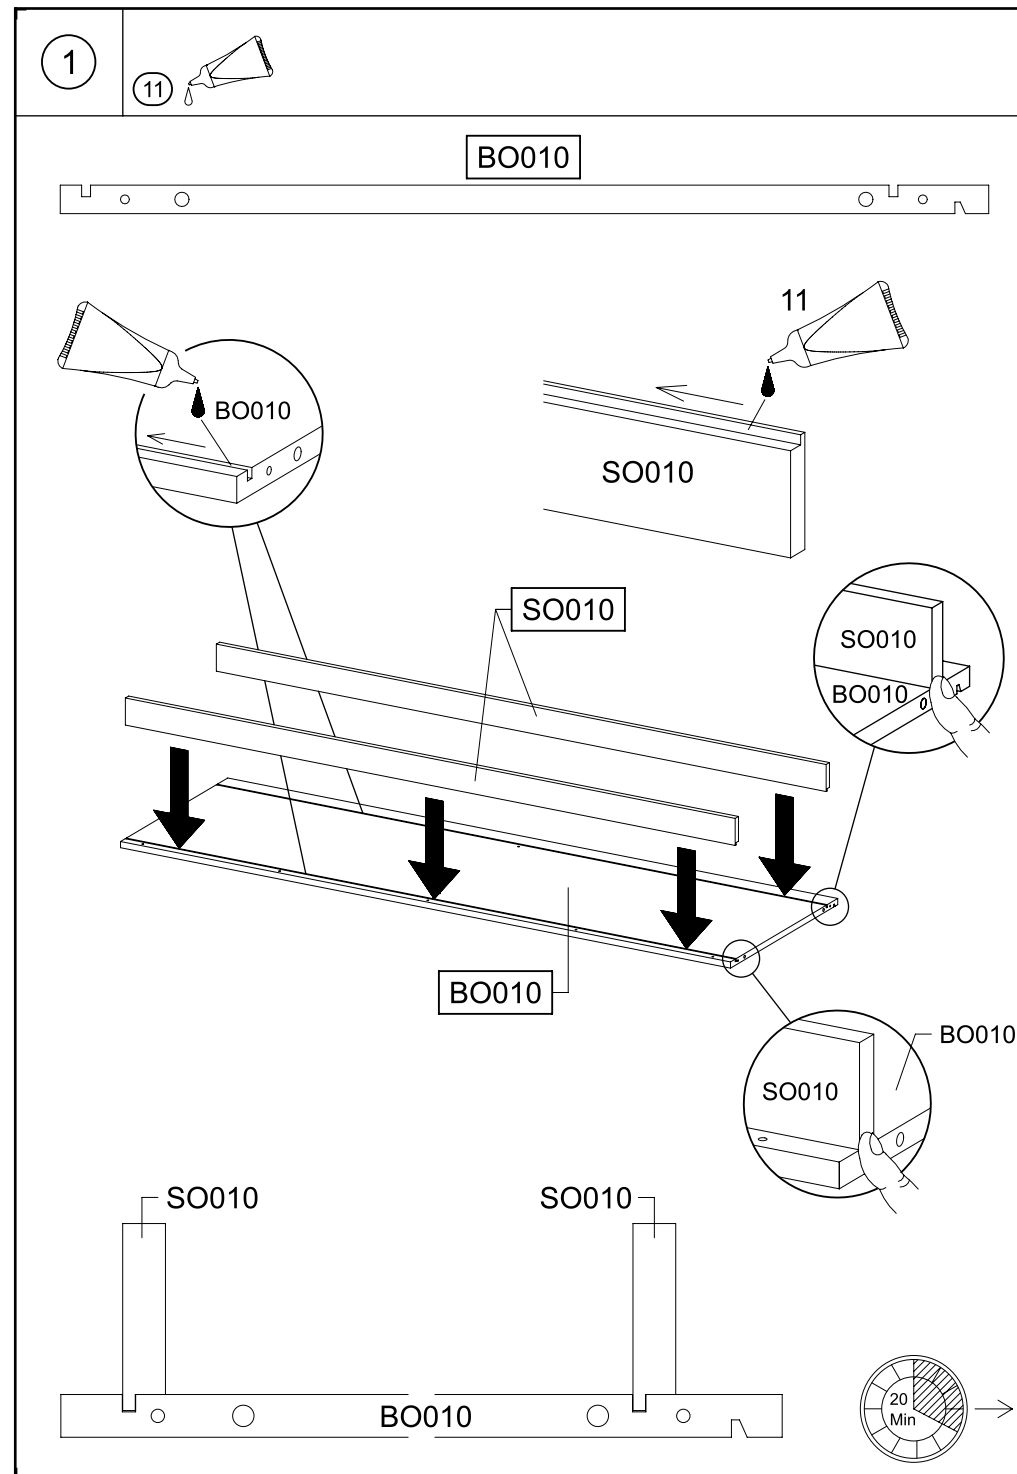


7.


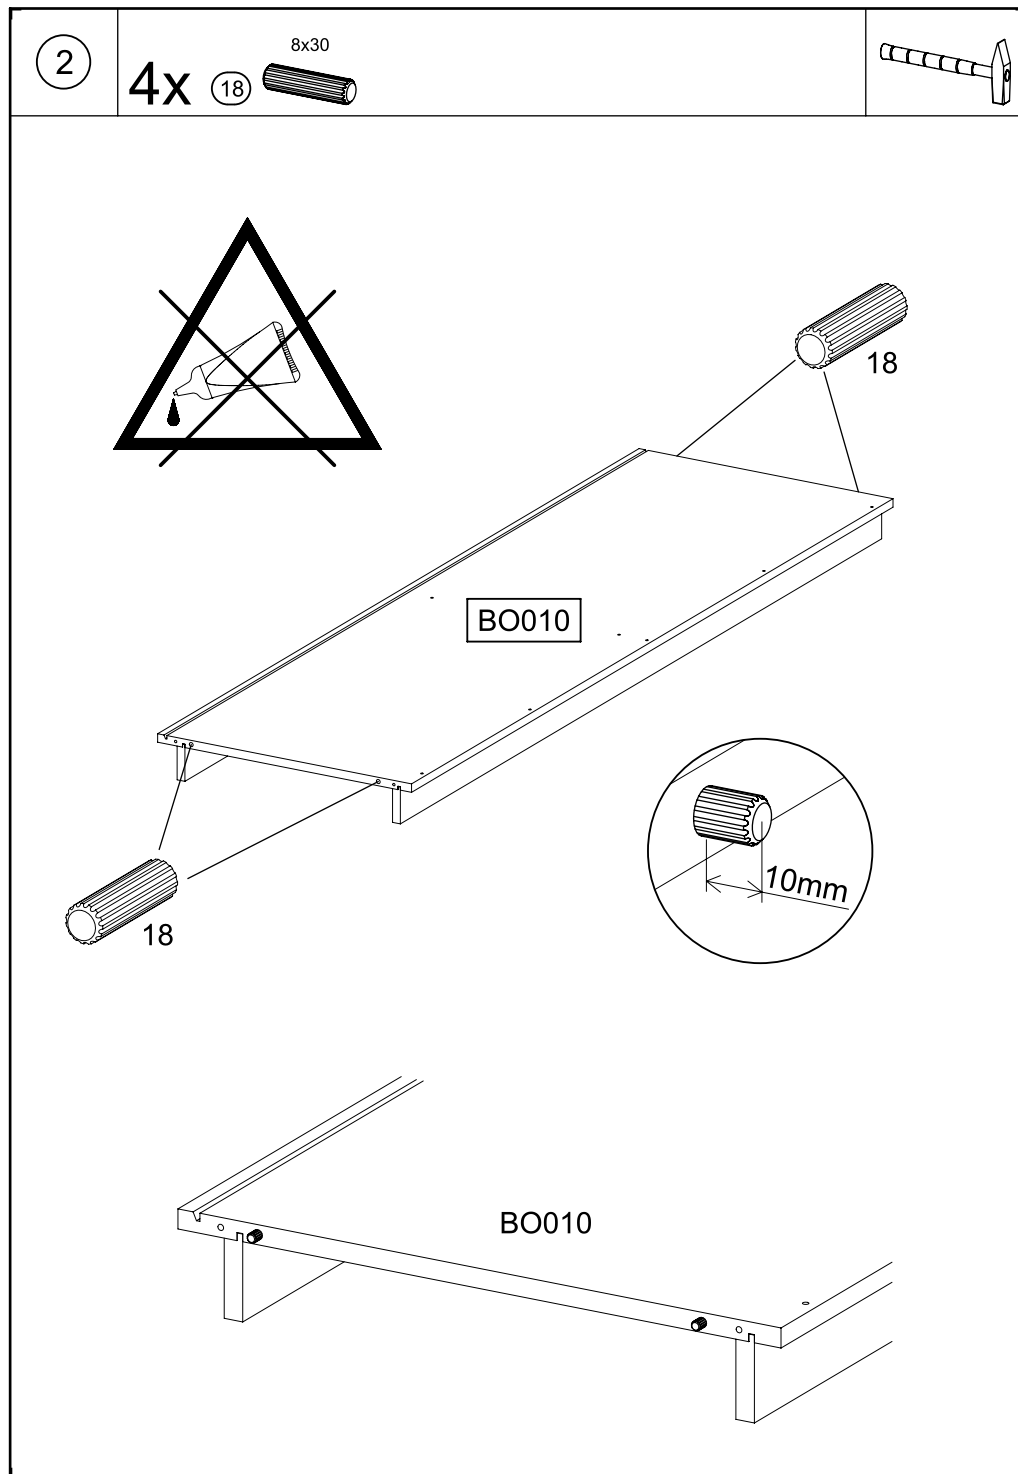




M2660



8.


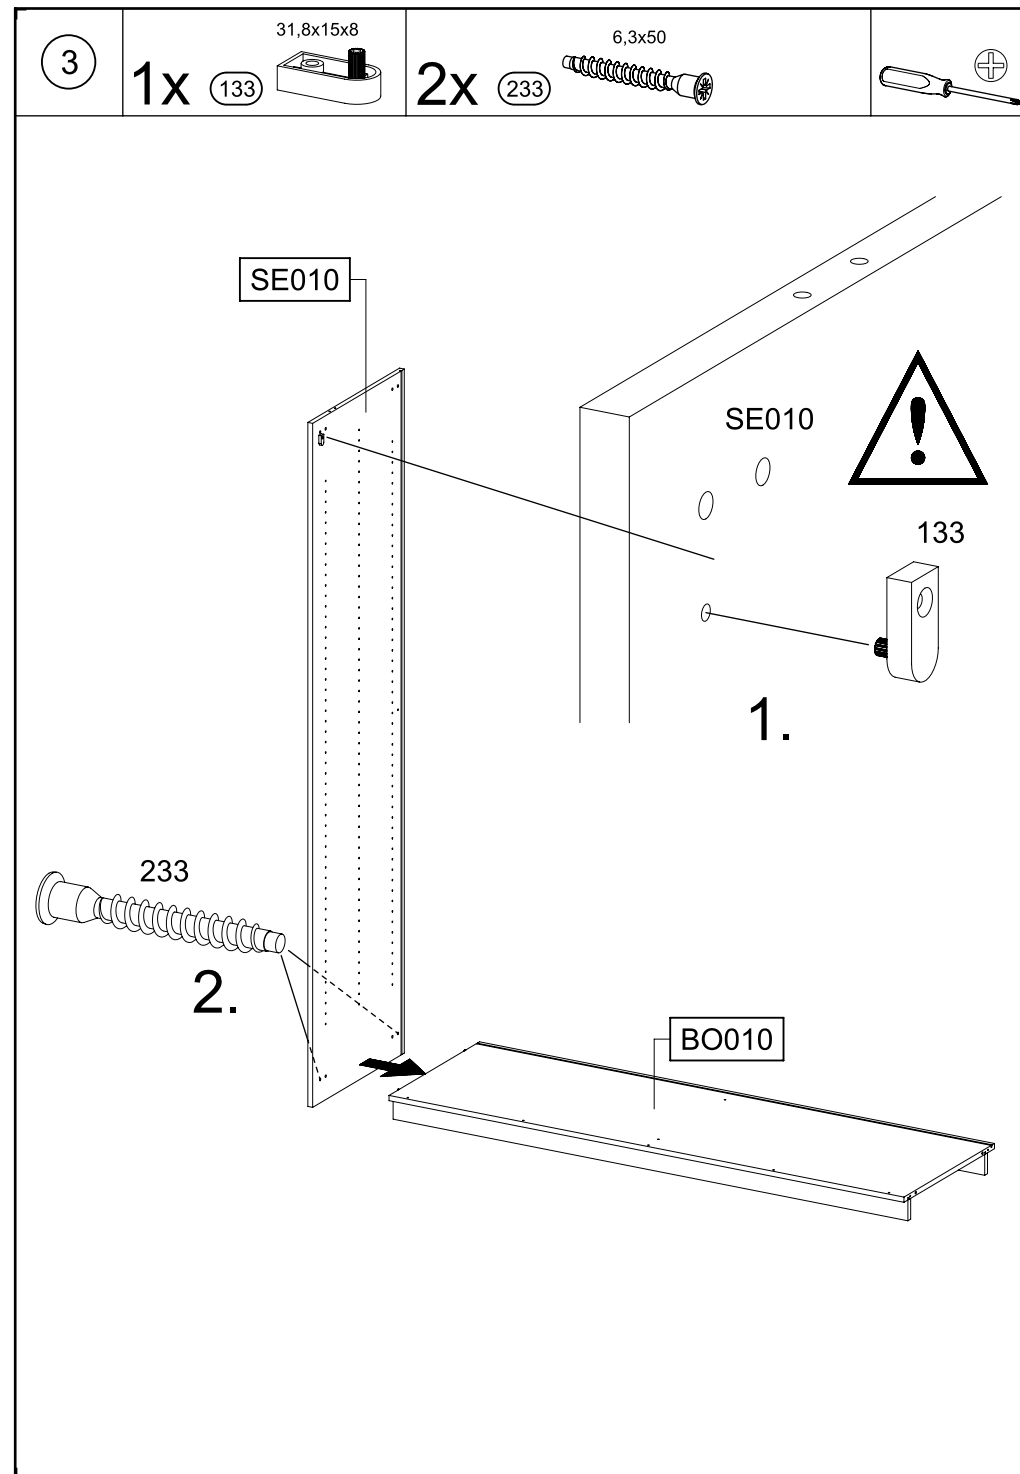




M2660

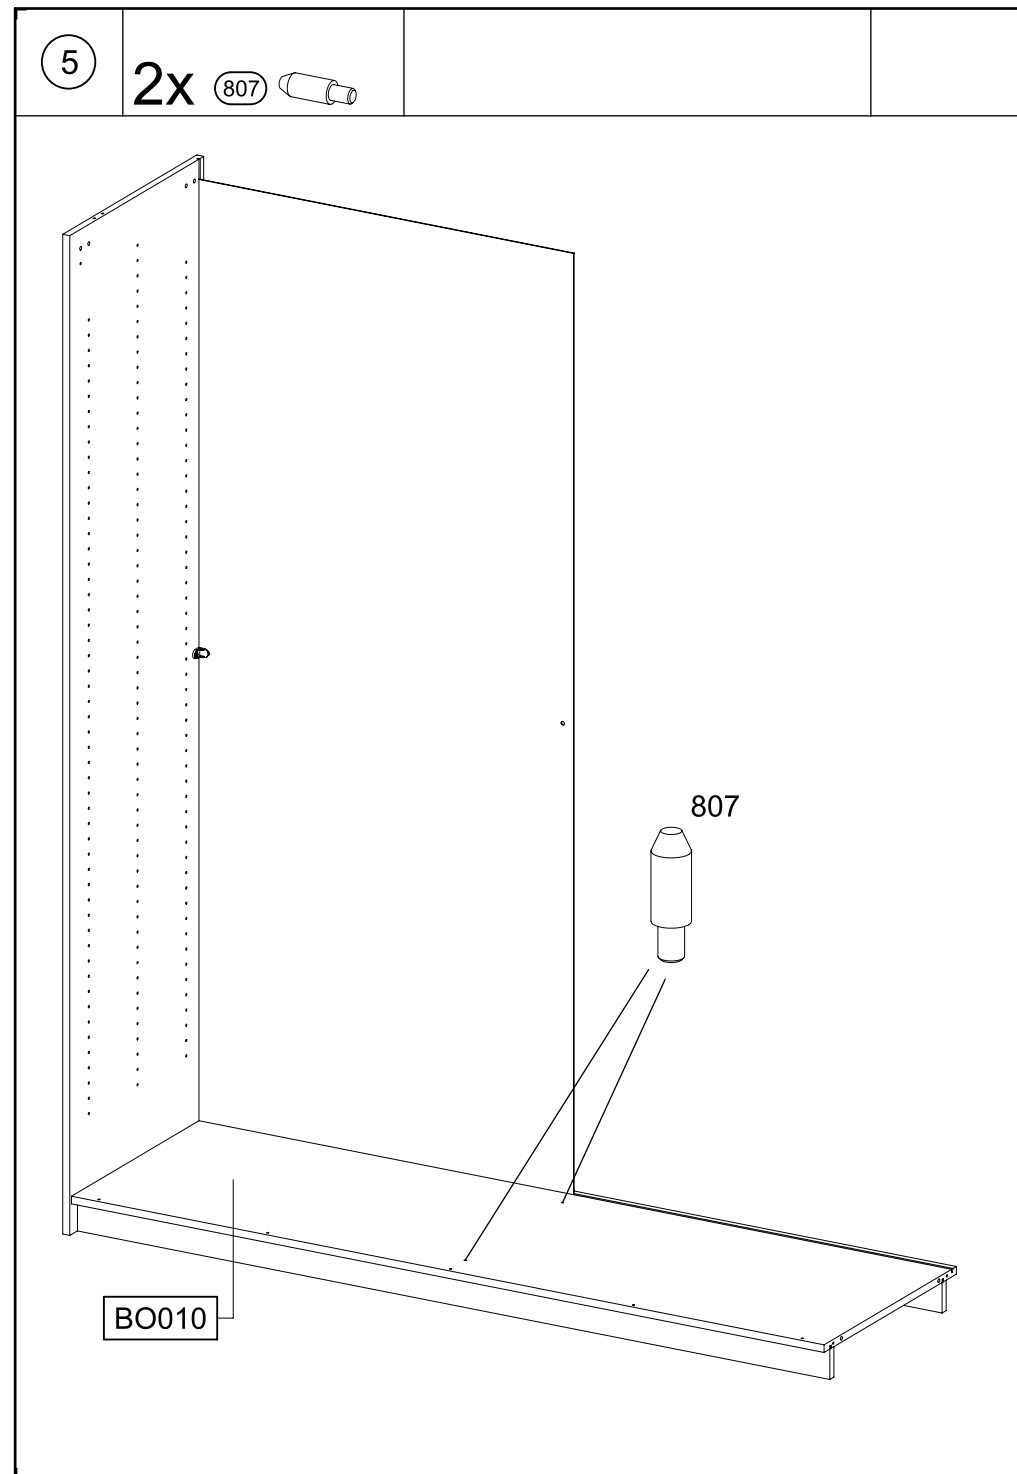
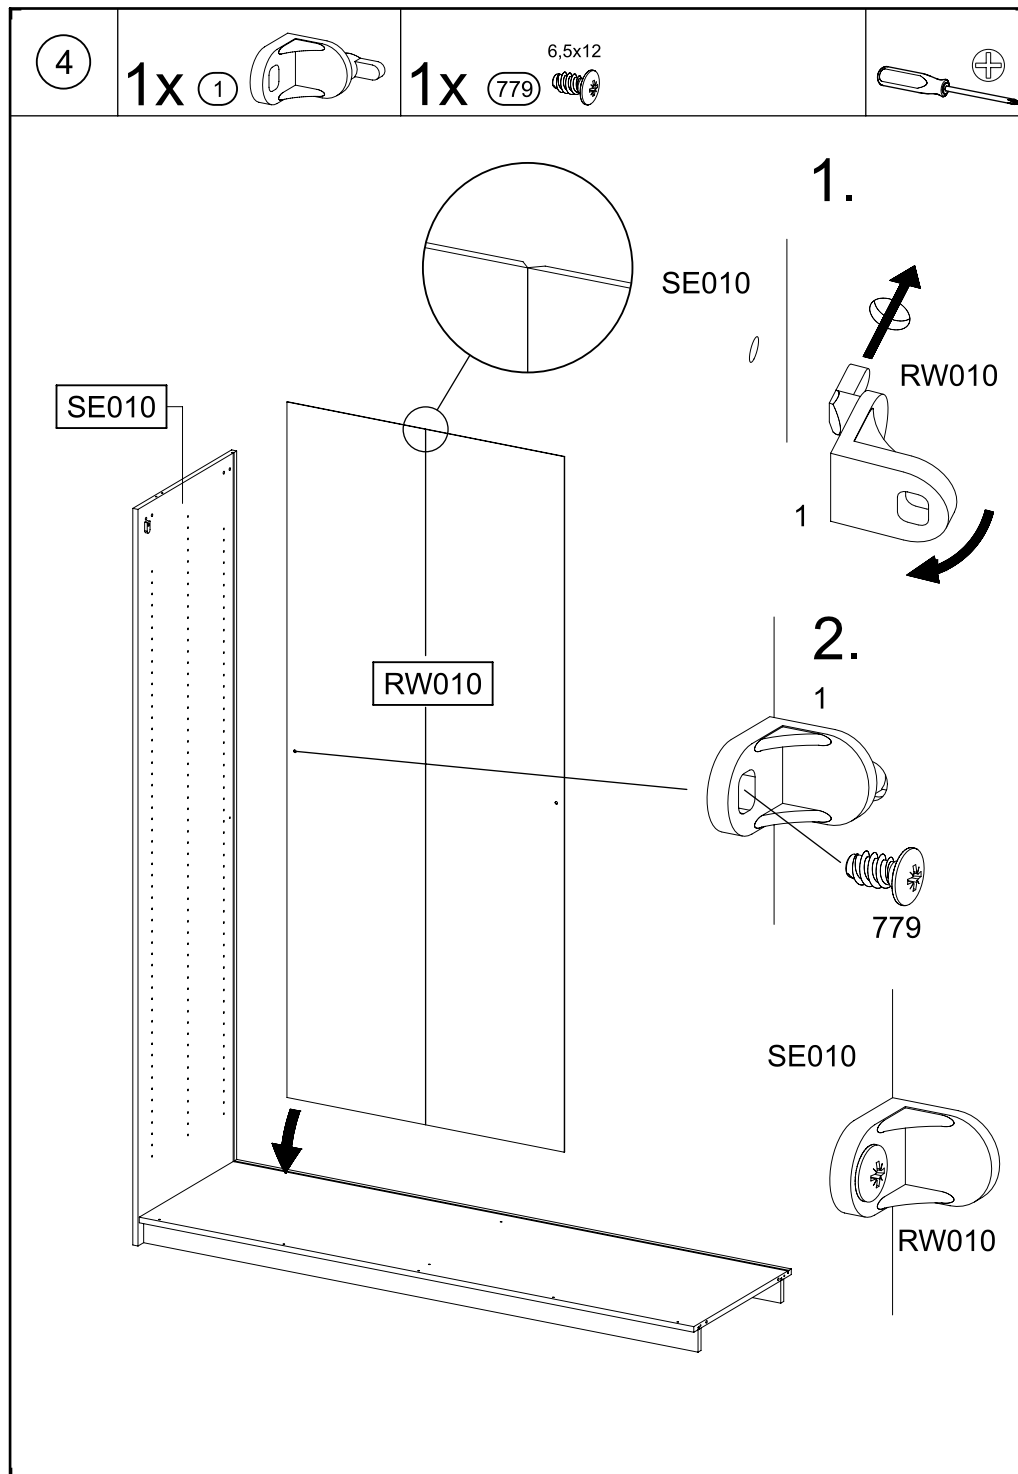




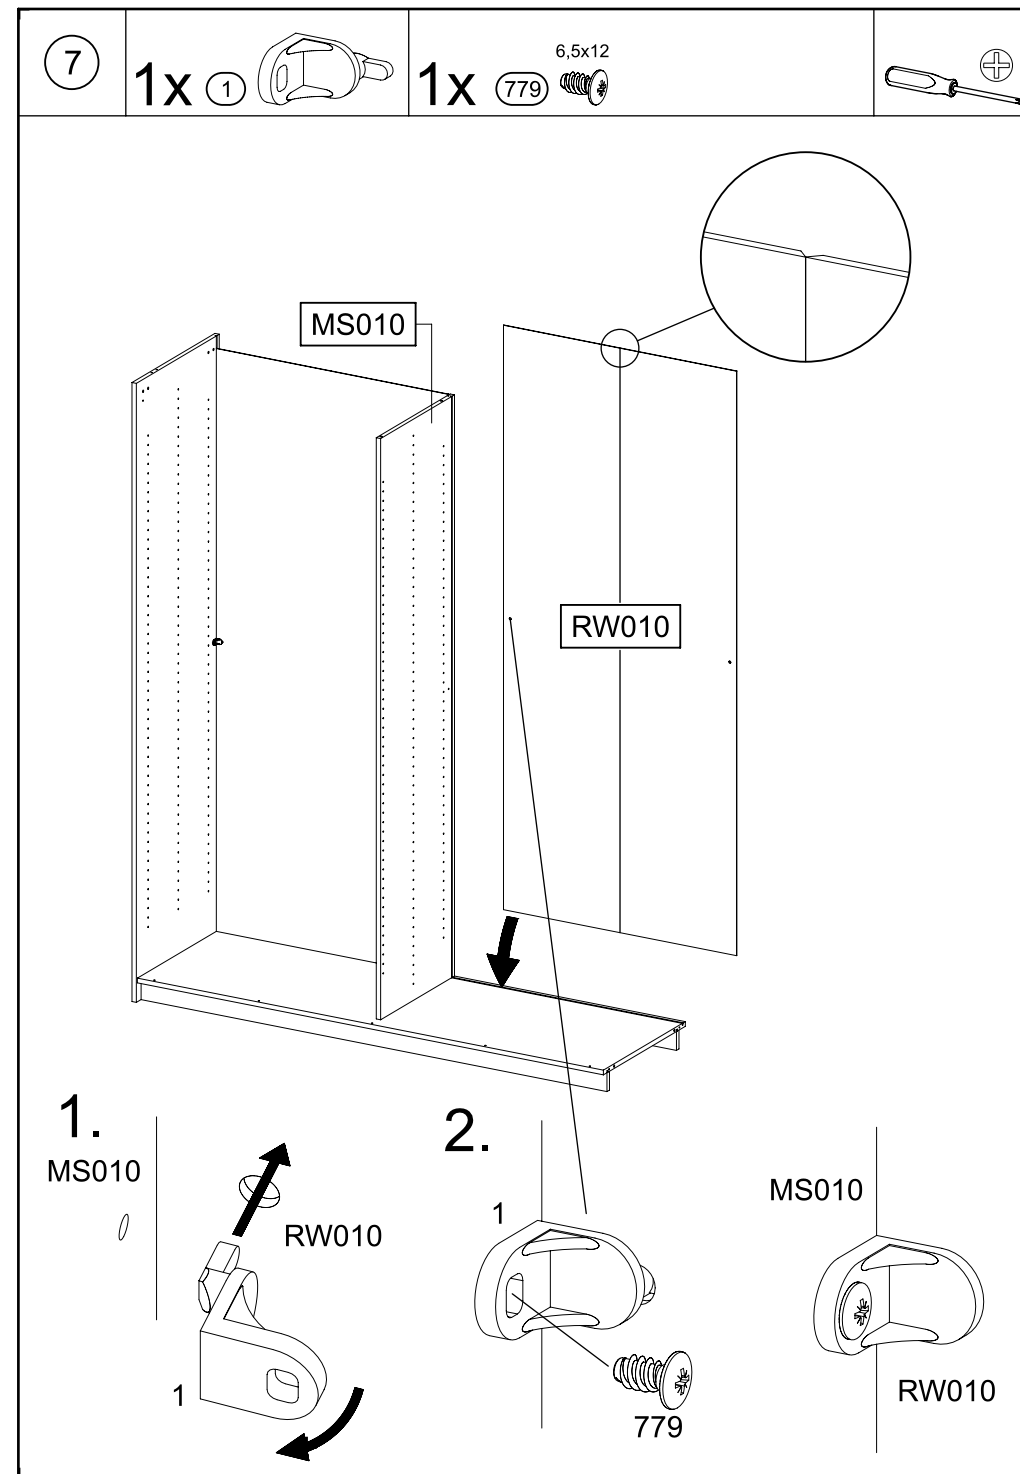
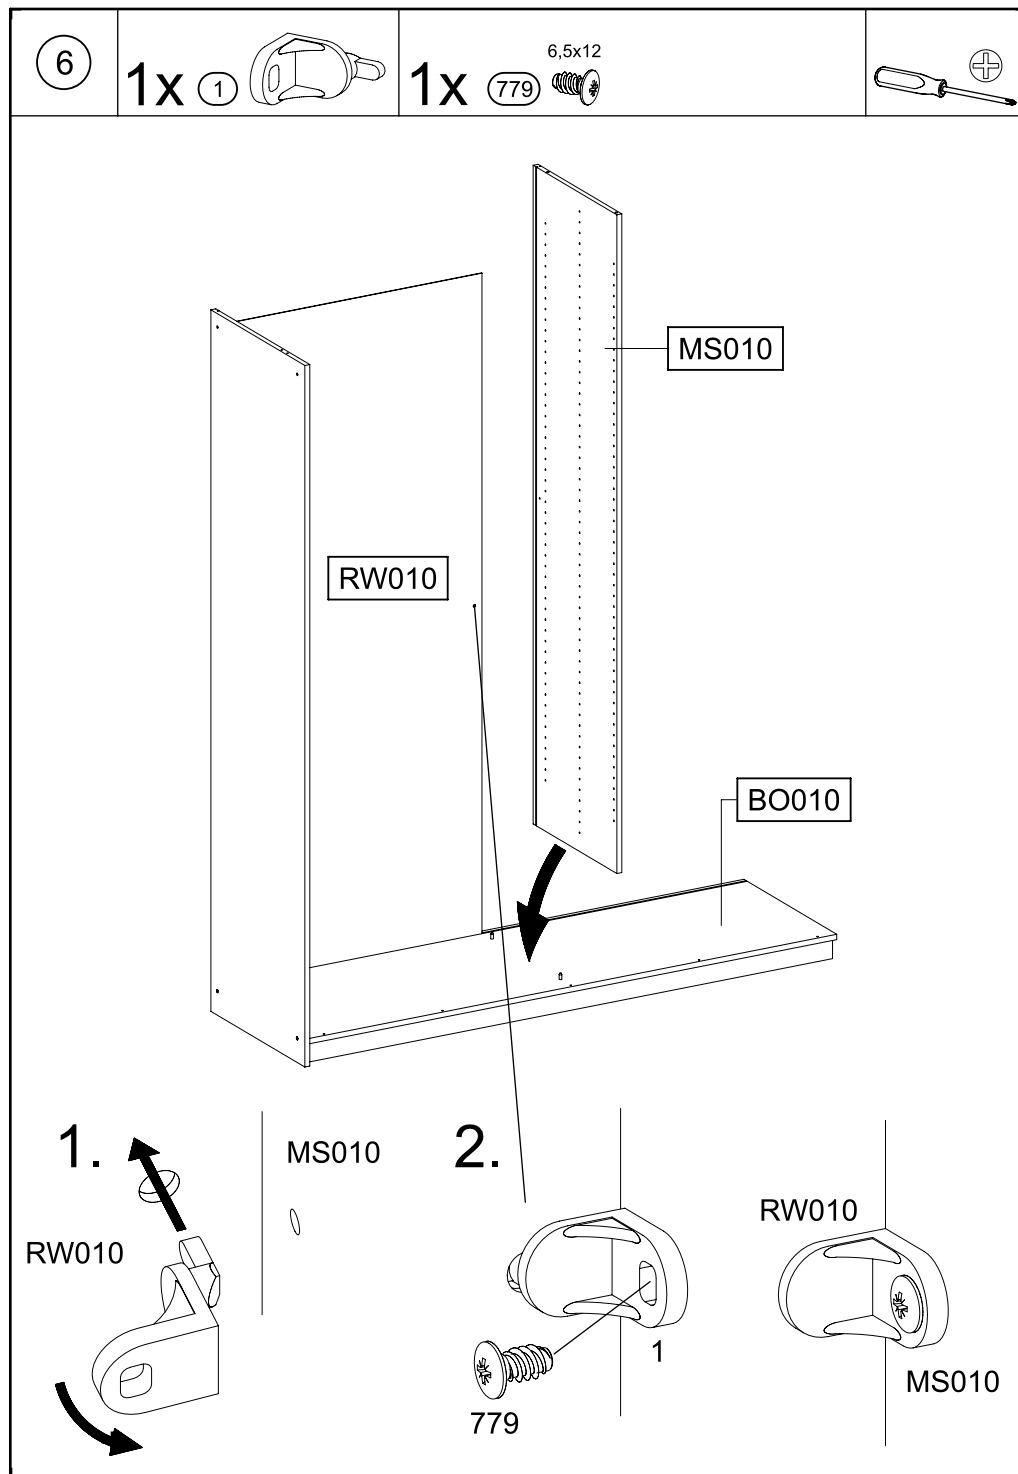


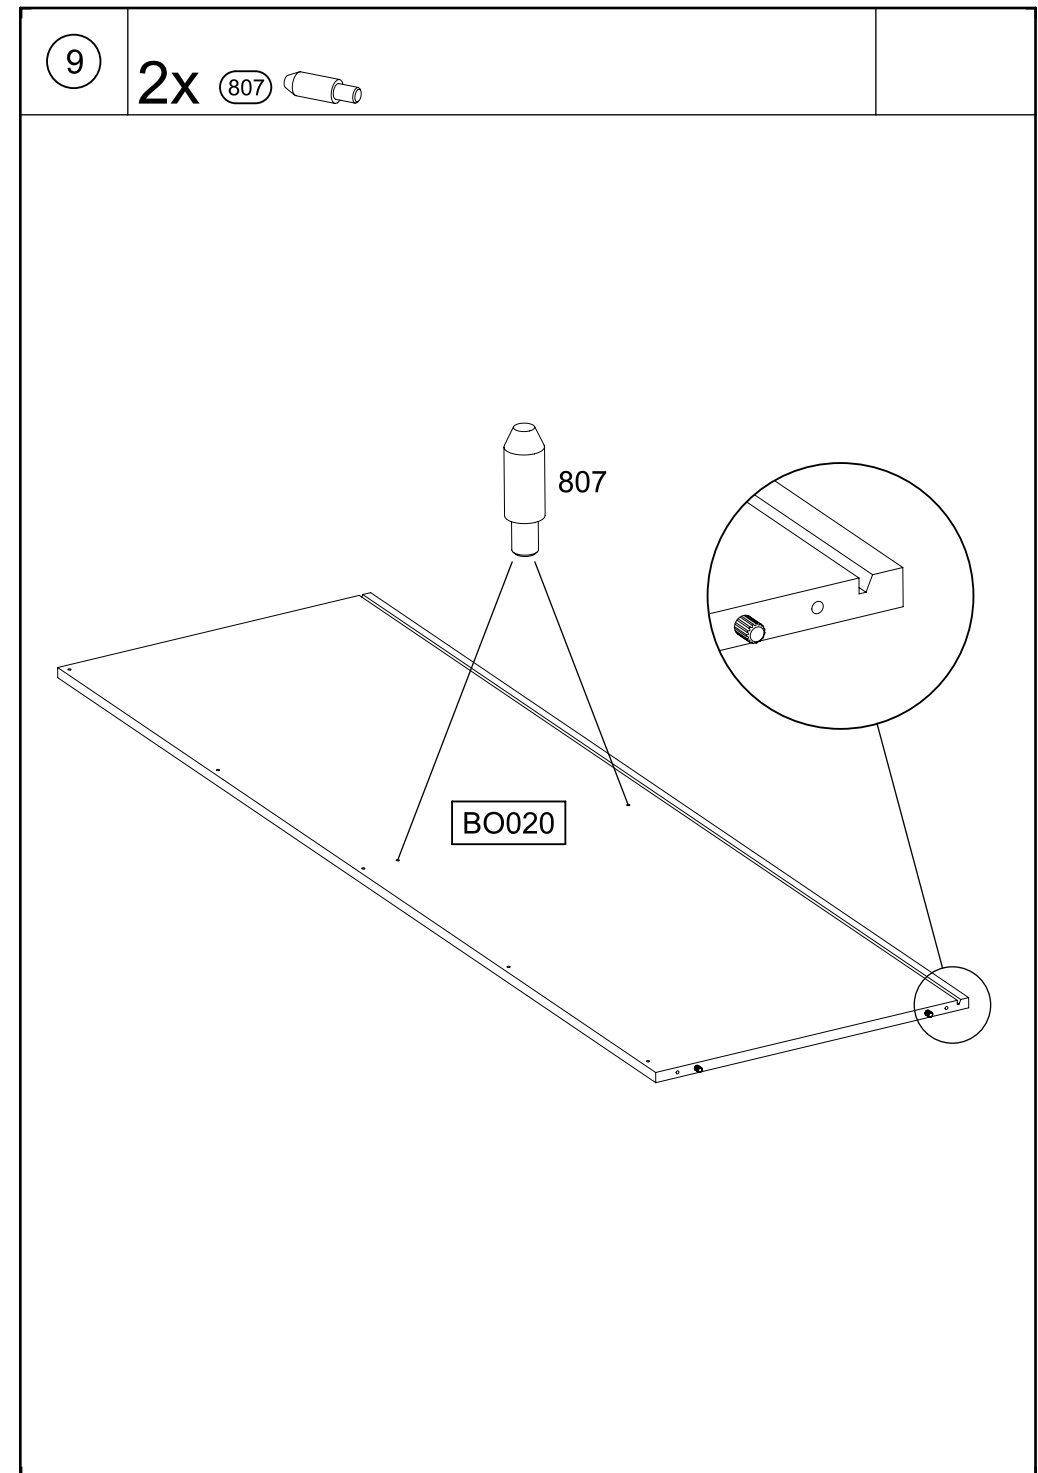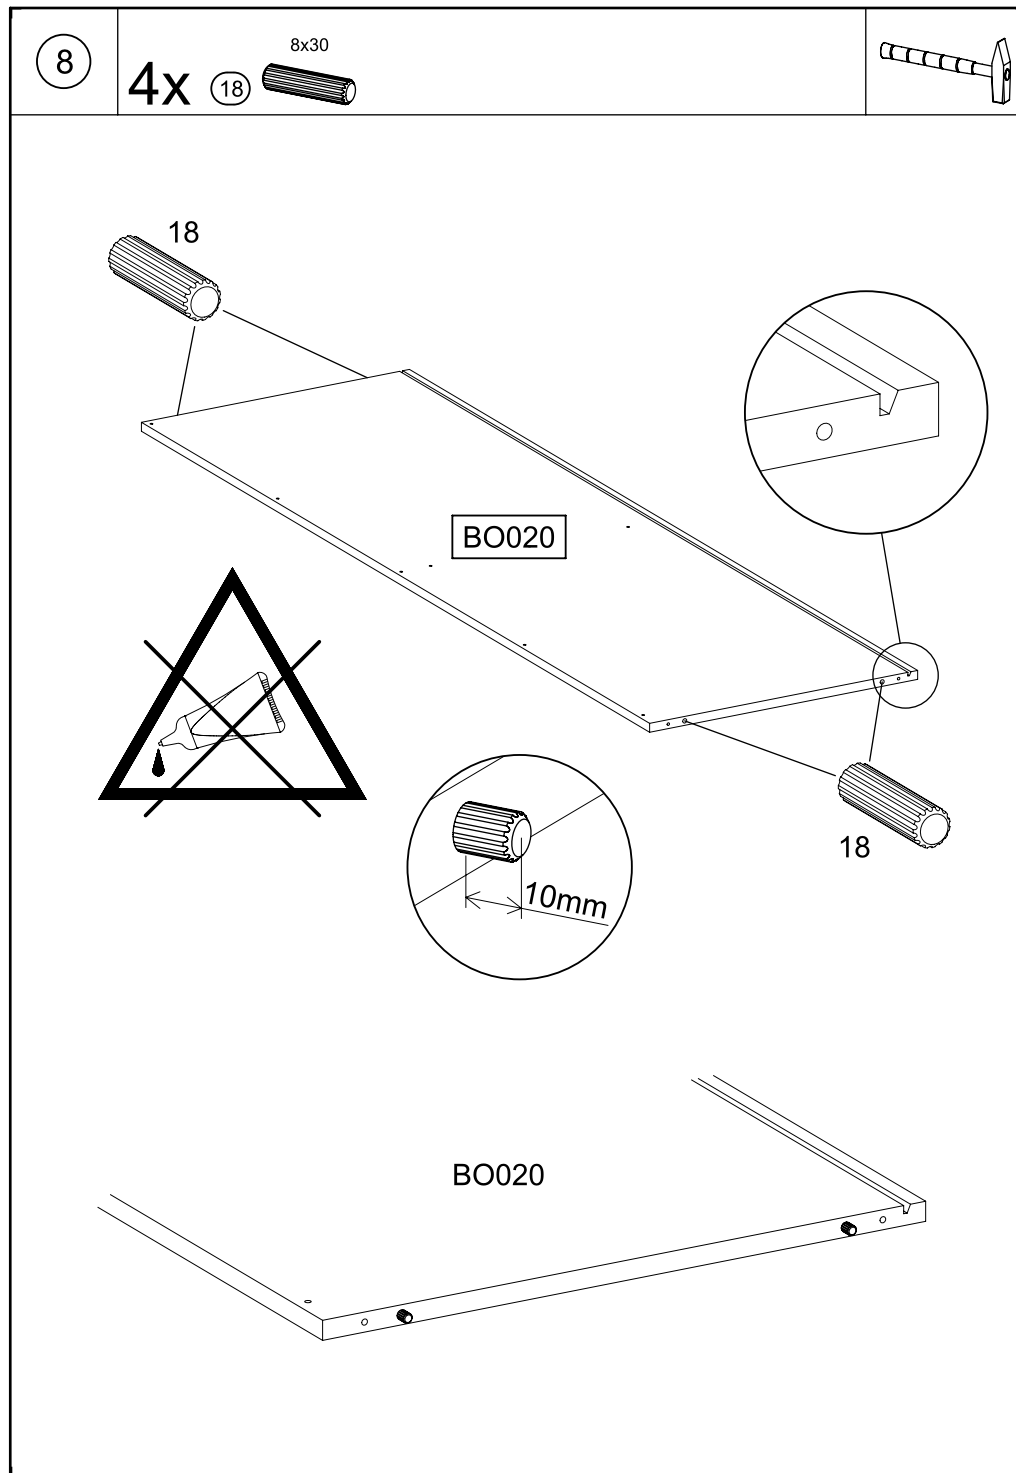

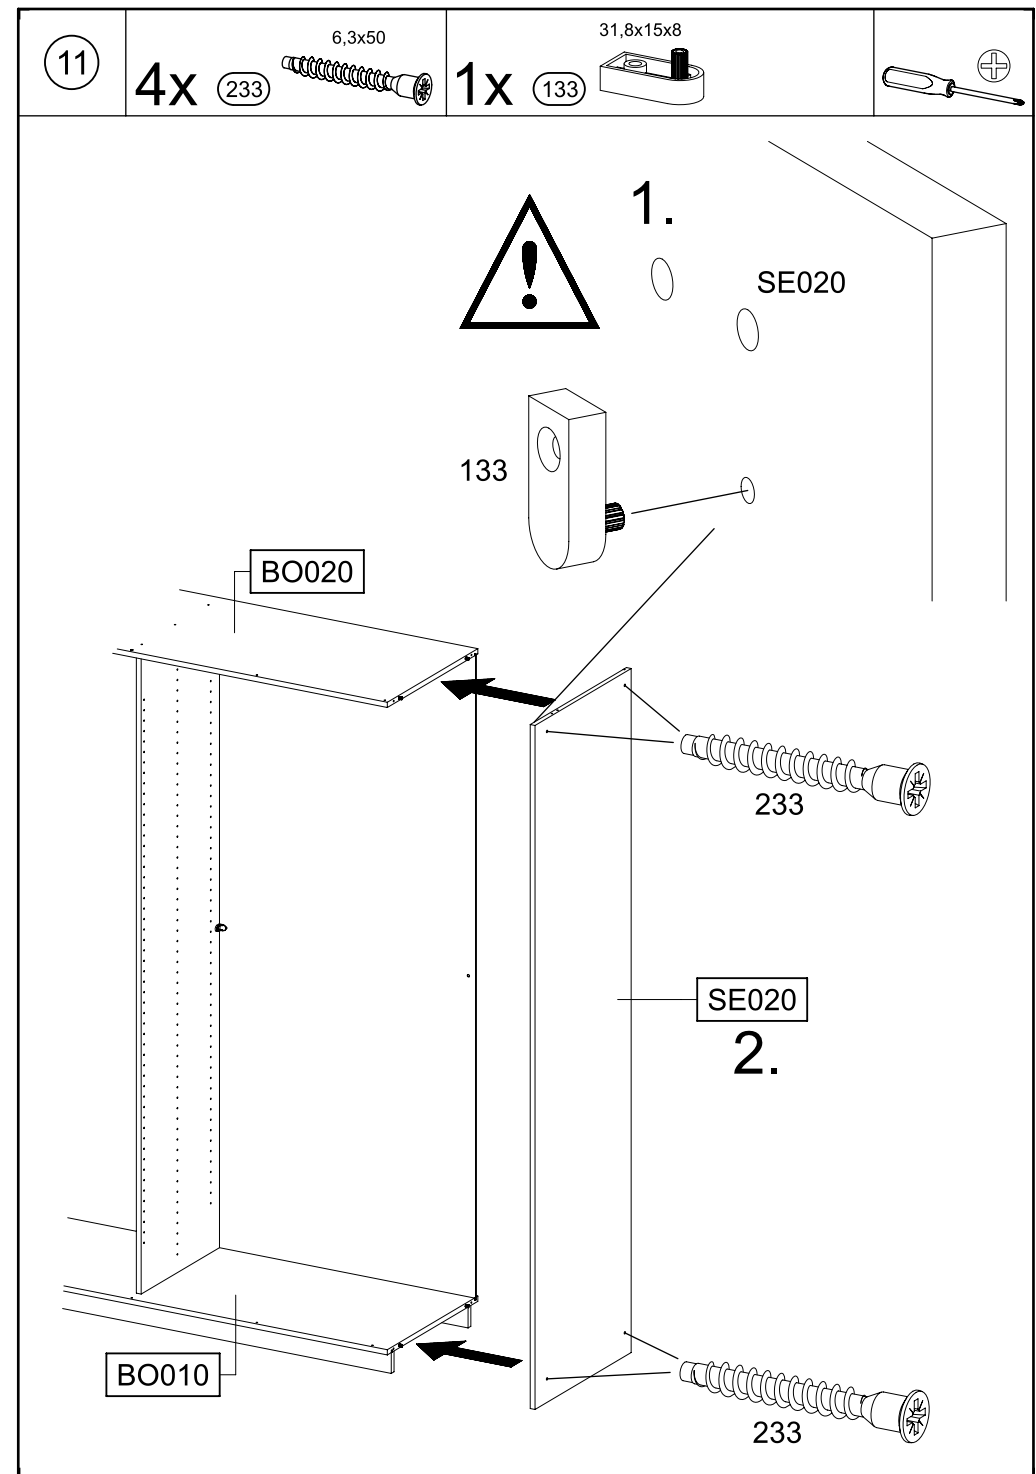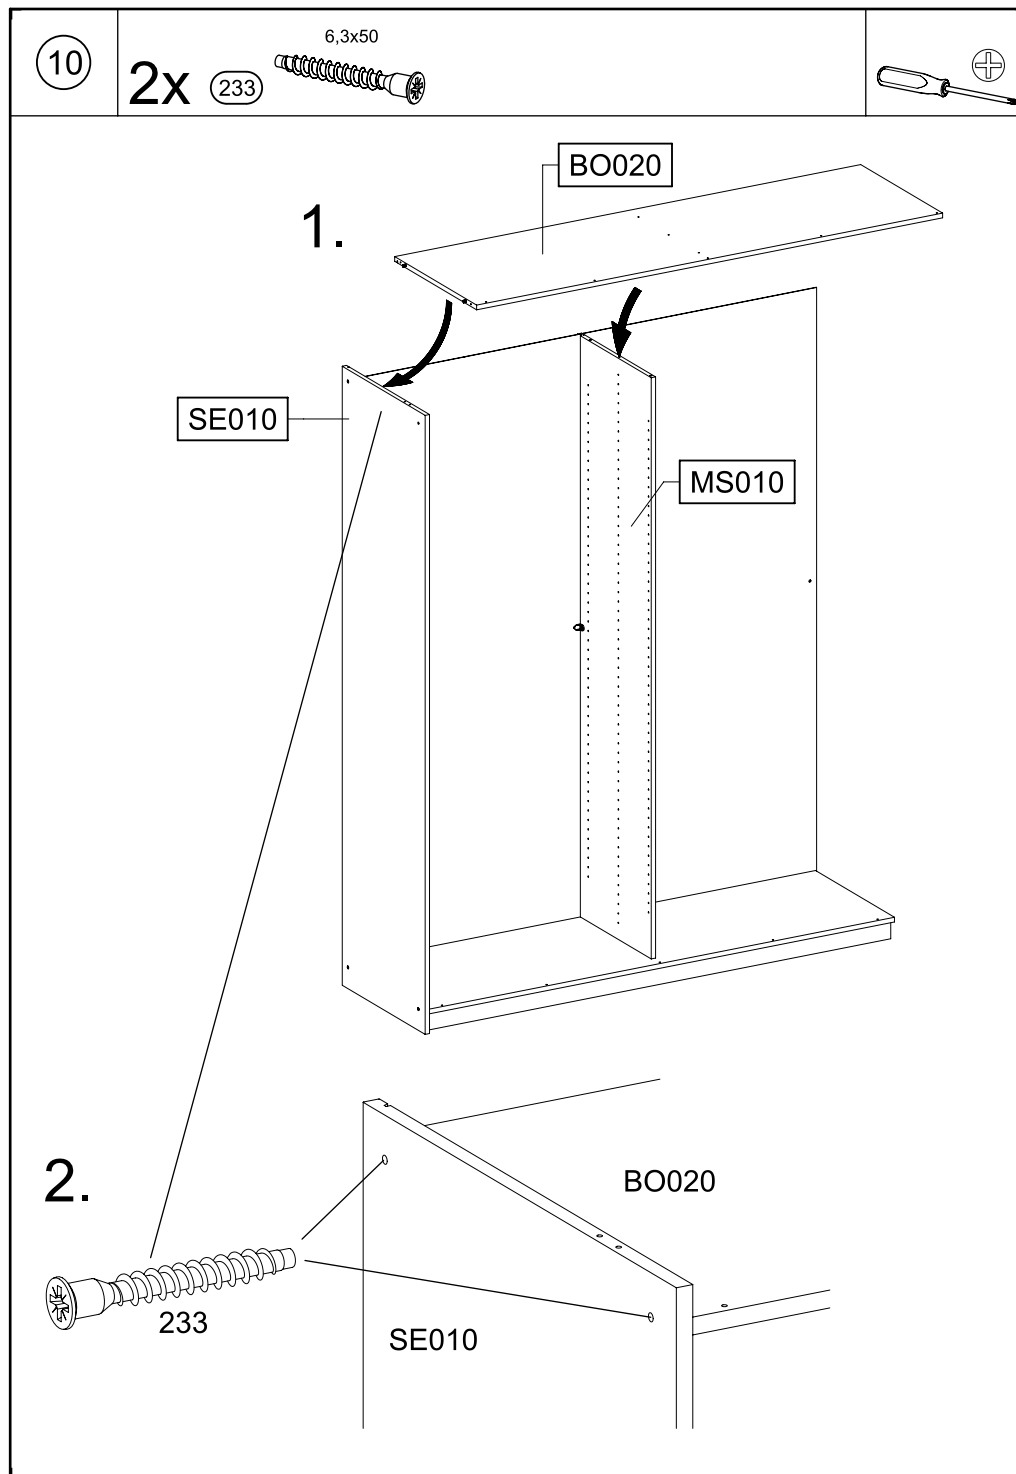

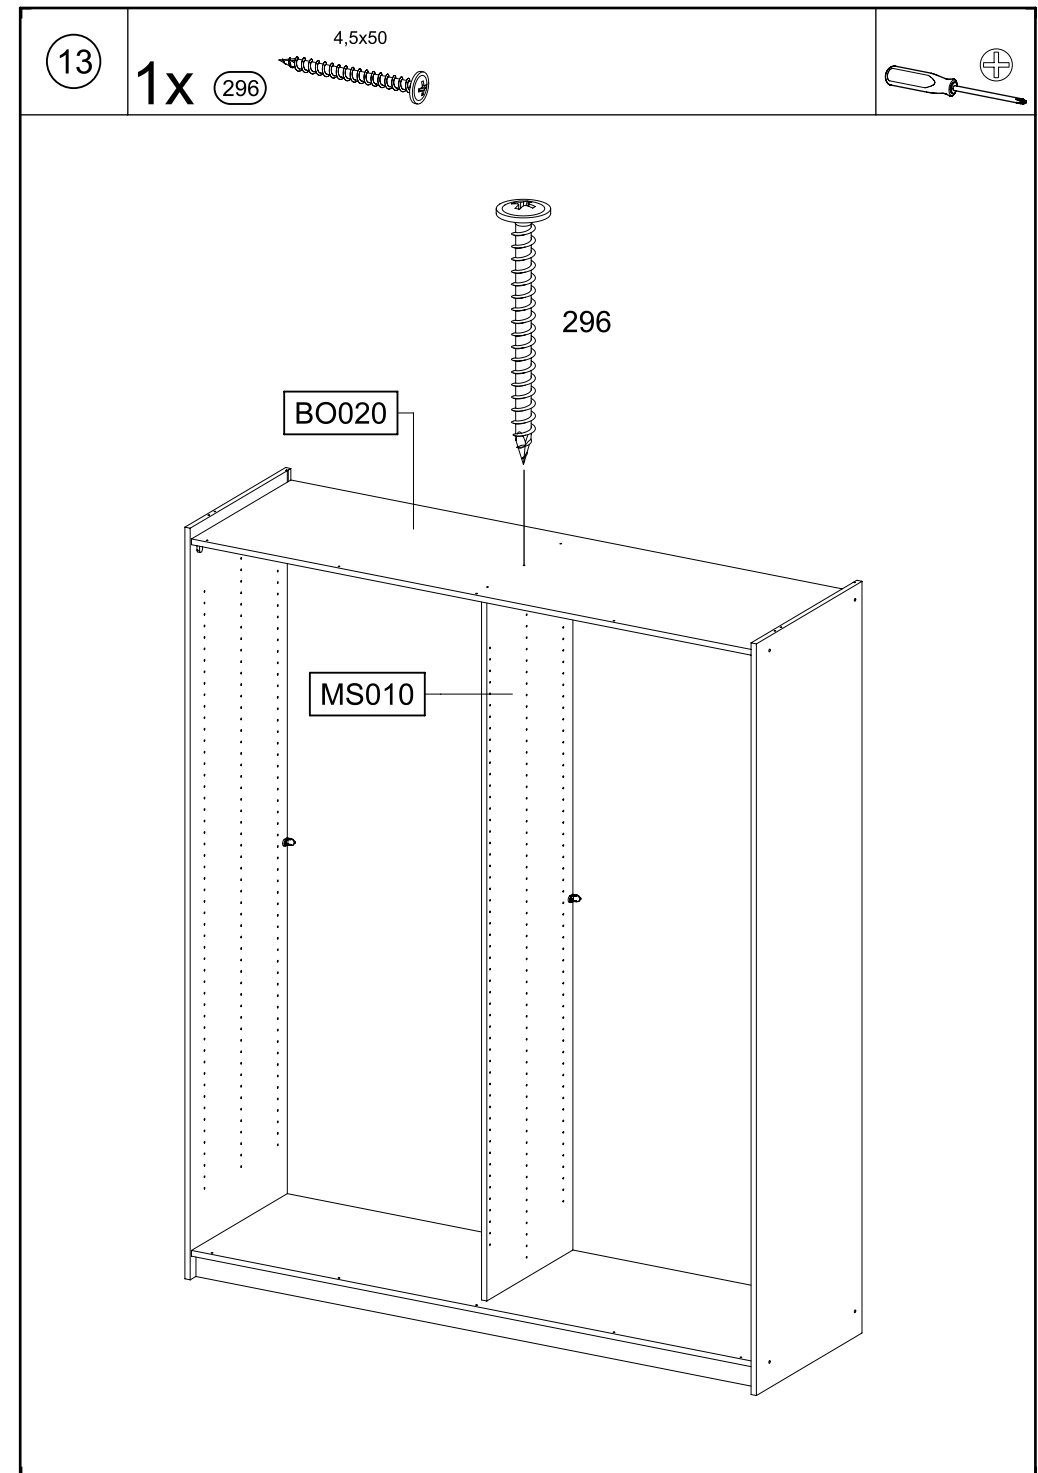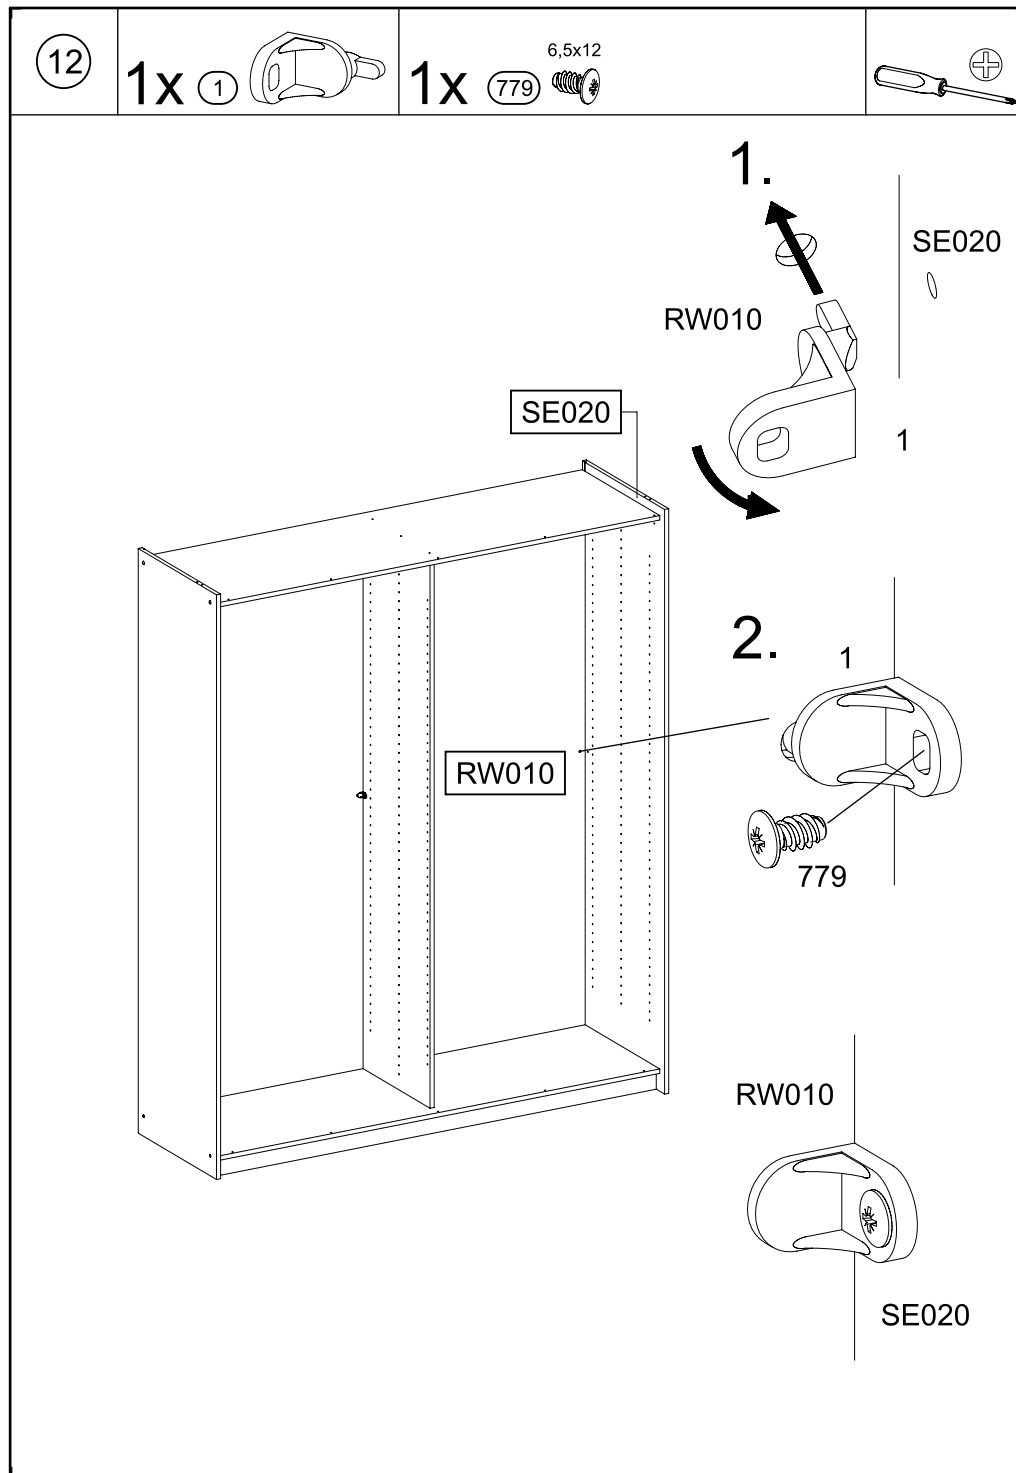

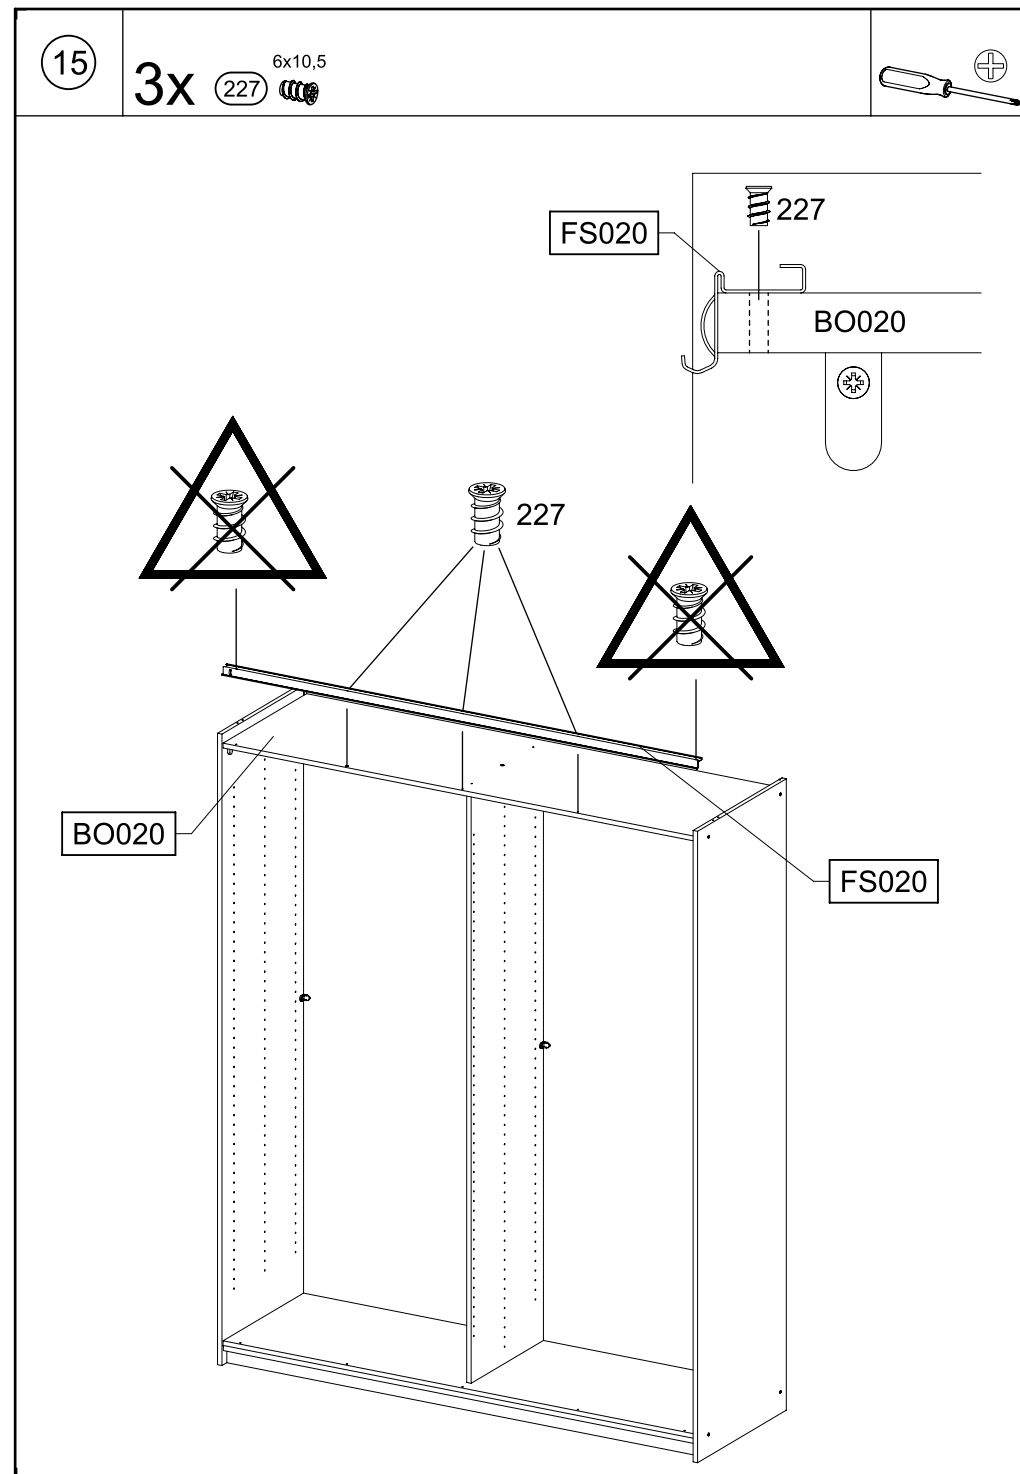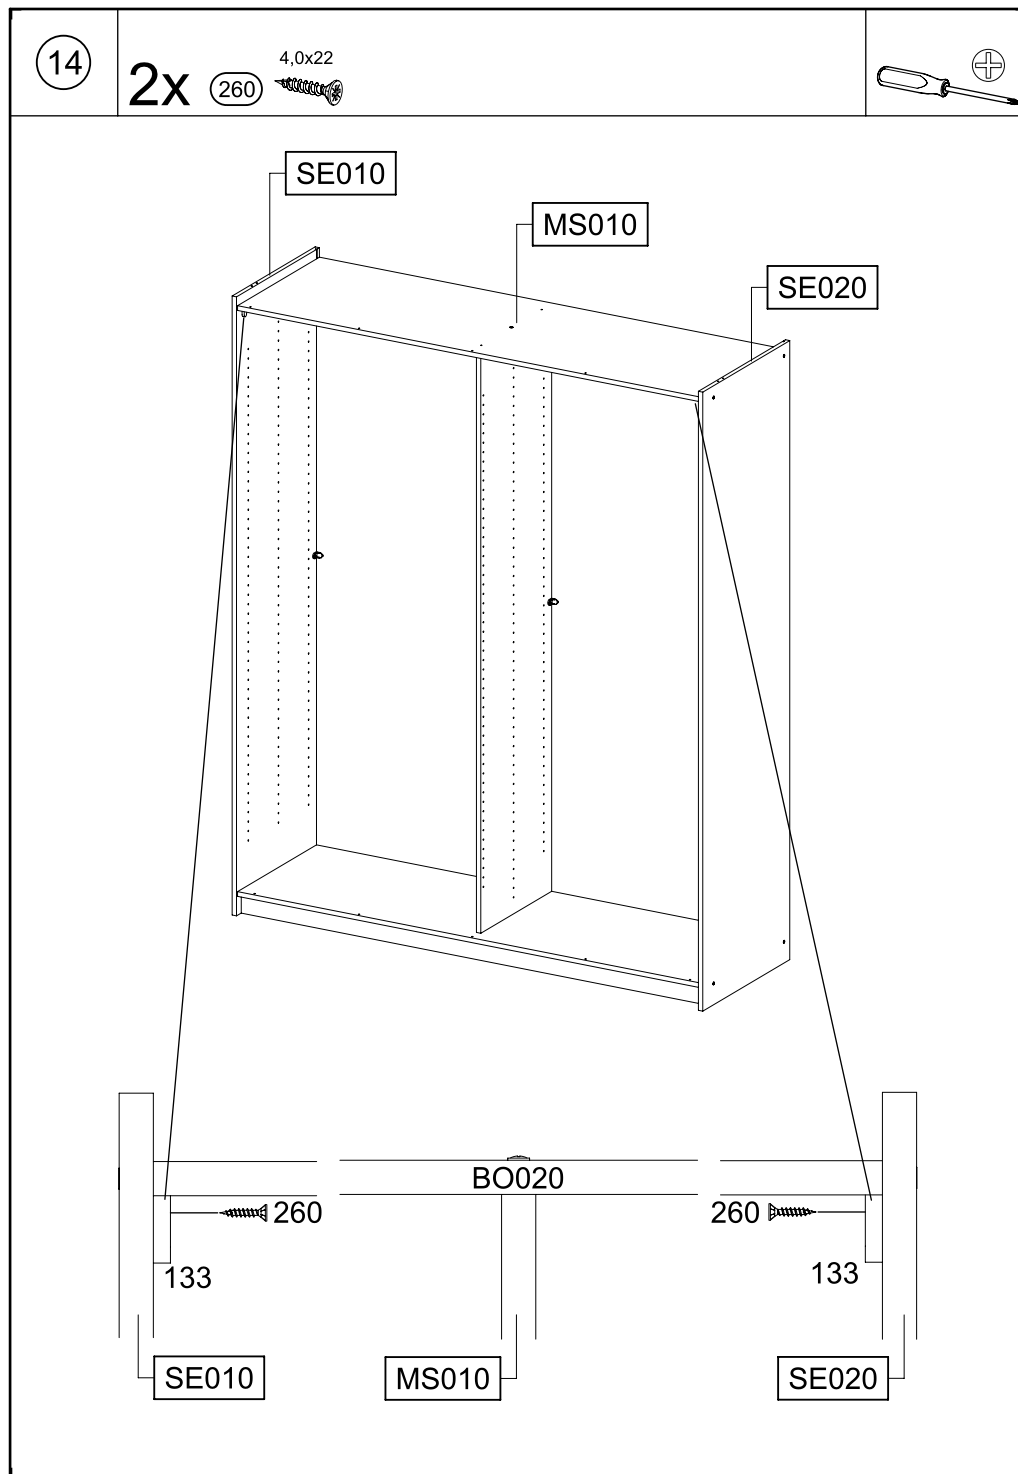

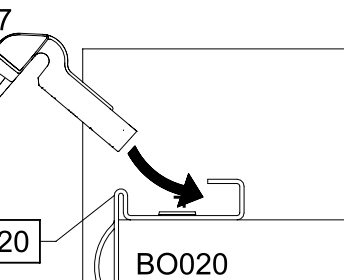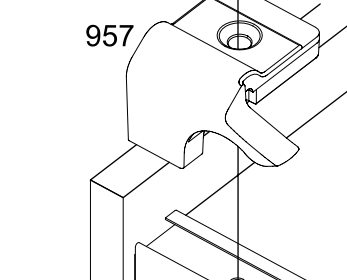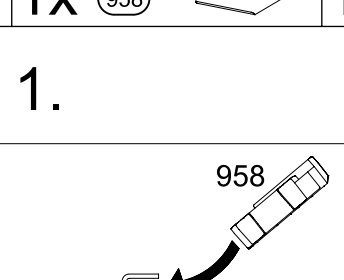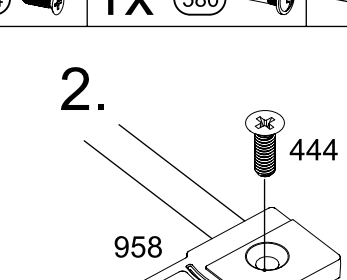16	1x 	1x 	1x 	
1.  2. 				
17	1x 	1x 	1x 	
1.  2. 				

18

5x

203

4x30

203

BO010

FS010



BO010

The diagram illustrates the final step of installing a shelf. In the perspective view, a shelf labeled BO010 is being pushed into the cabinet frame, as indicated by the three large black arrows. Two screws, labeled 203, are shown being driven into the side panels of the cabinet to secure the shelf. A detailed view below shows the shelf (BO010) being secured by a bracket (FS010) with a screw (203).

19





0-2x 12

55x16x6,2

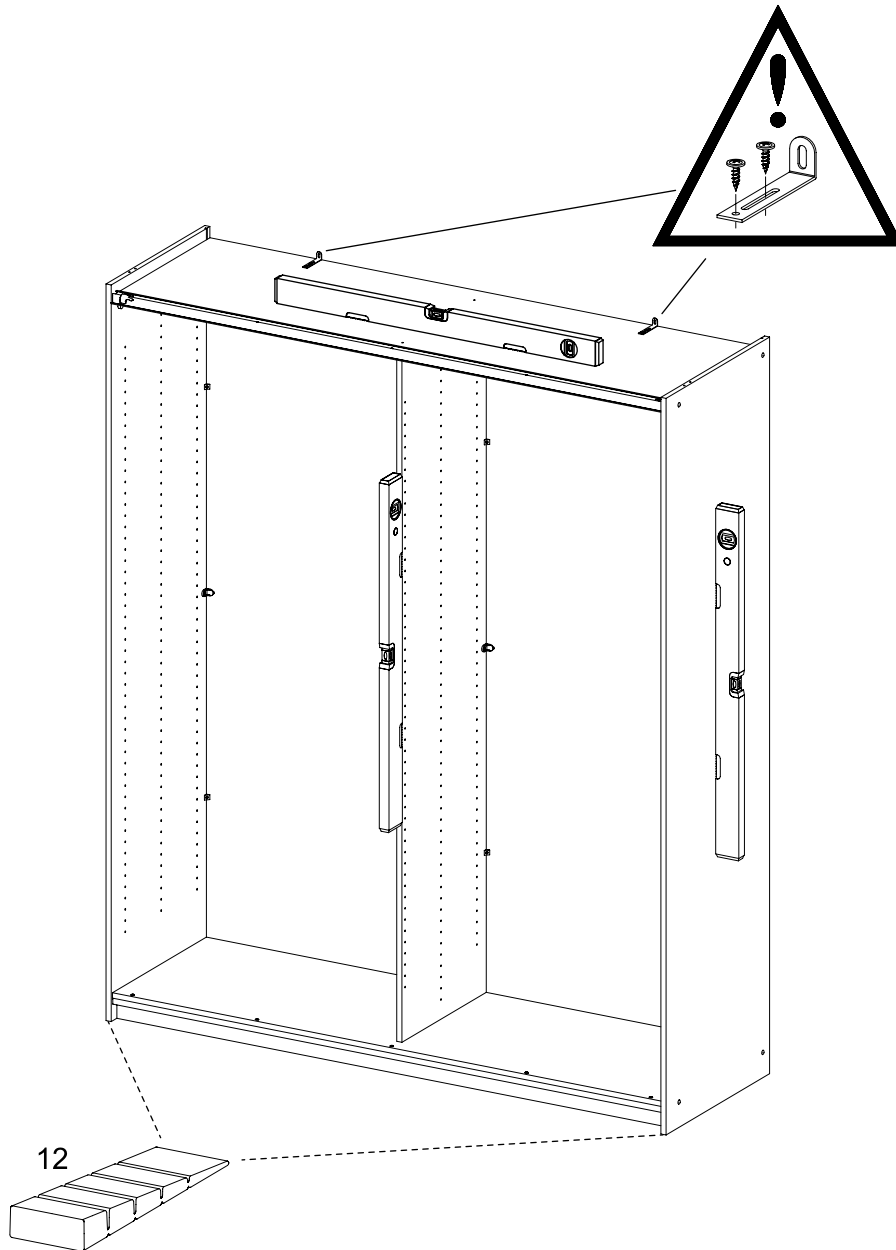

20

8x 45

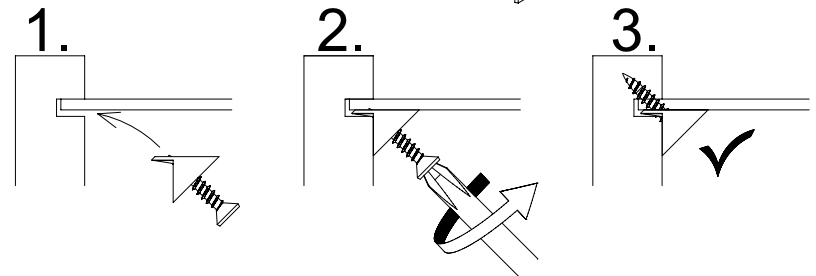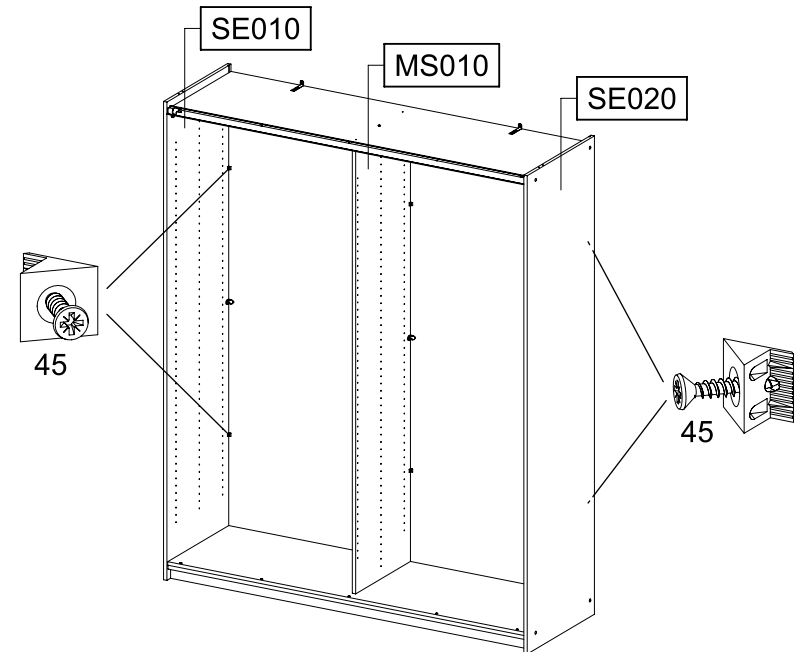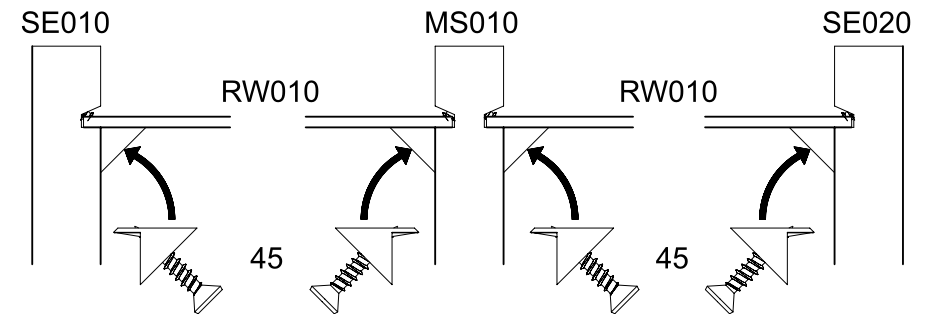

(21)

8x

(271)

