
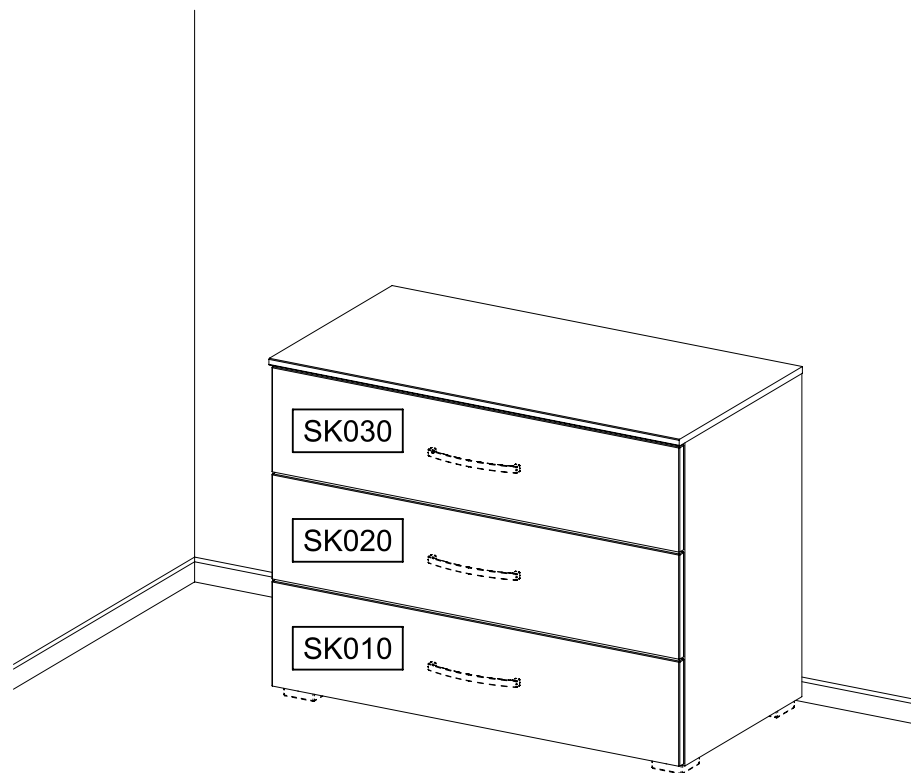
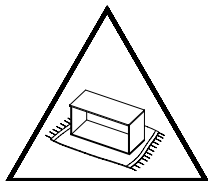
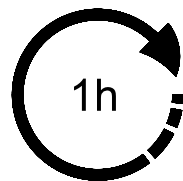



1.

M3093_01

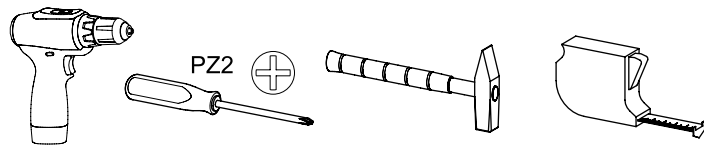


M3093

2.

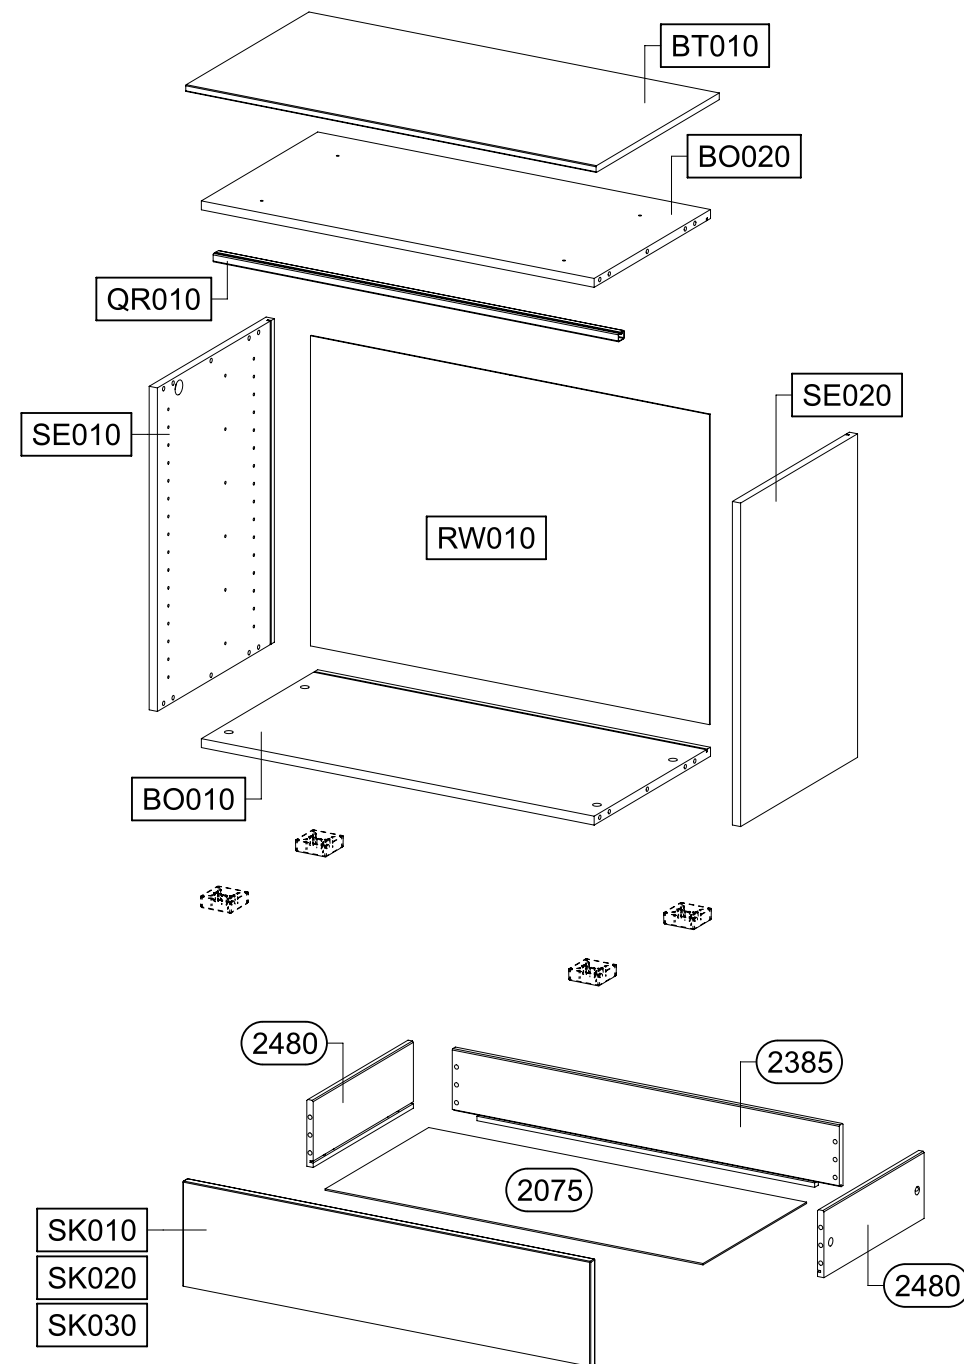


M3093

3.


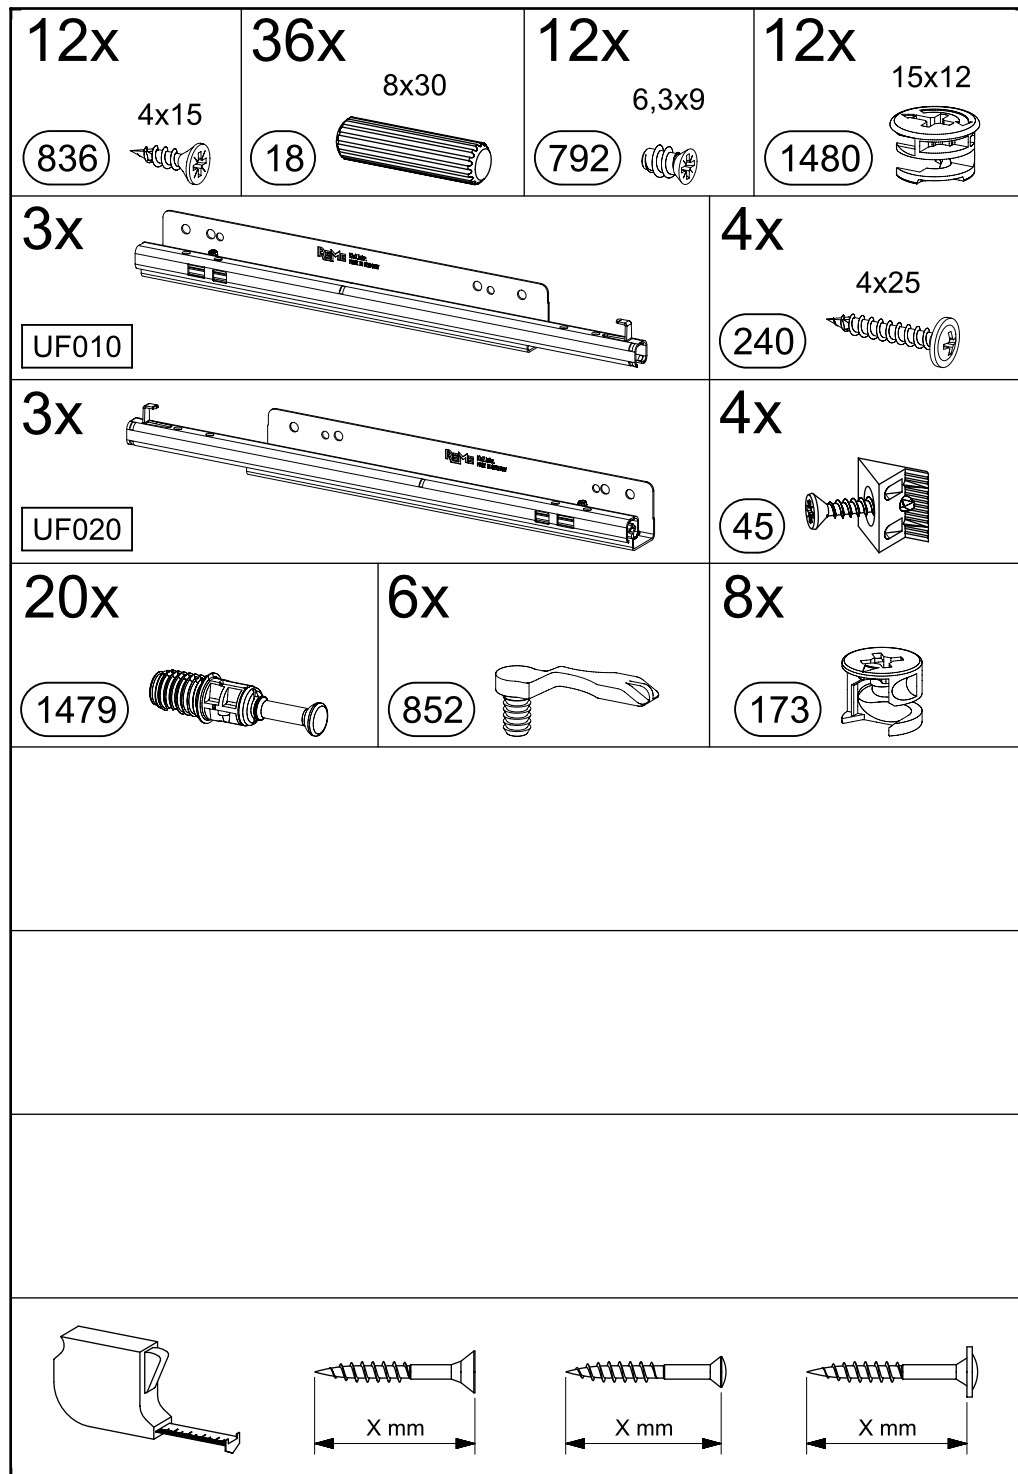




M3093



4.


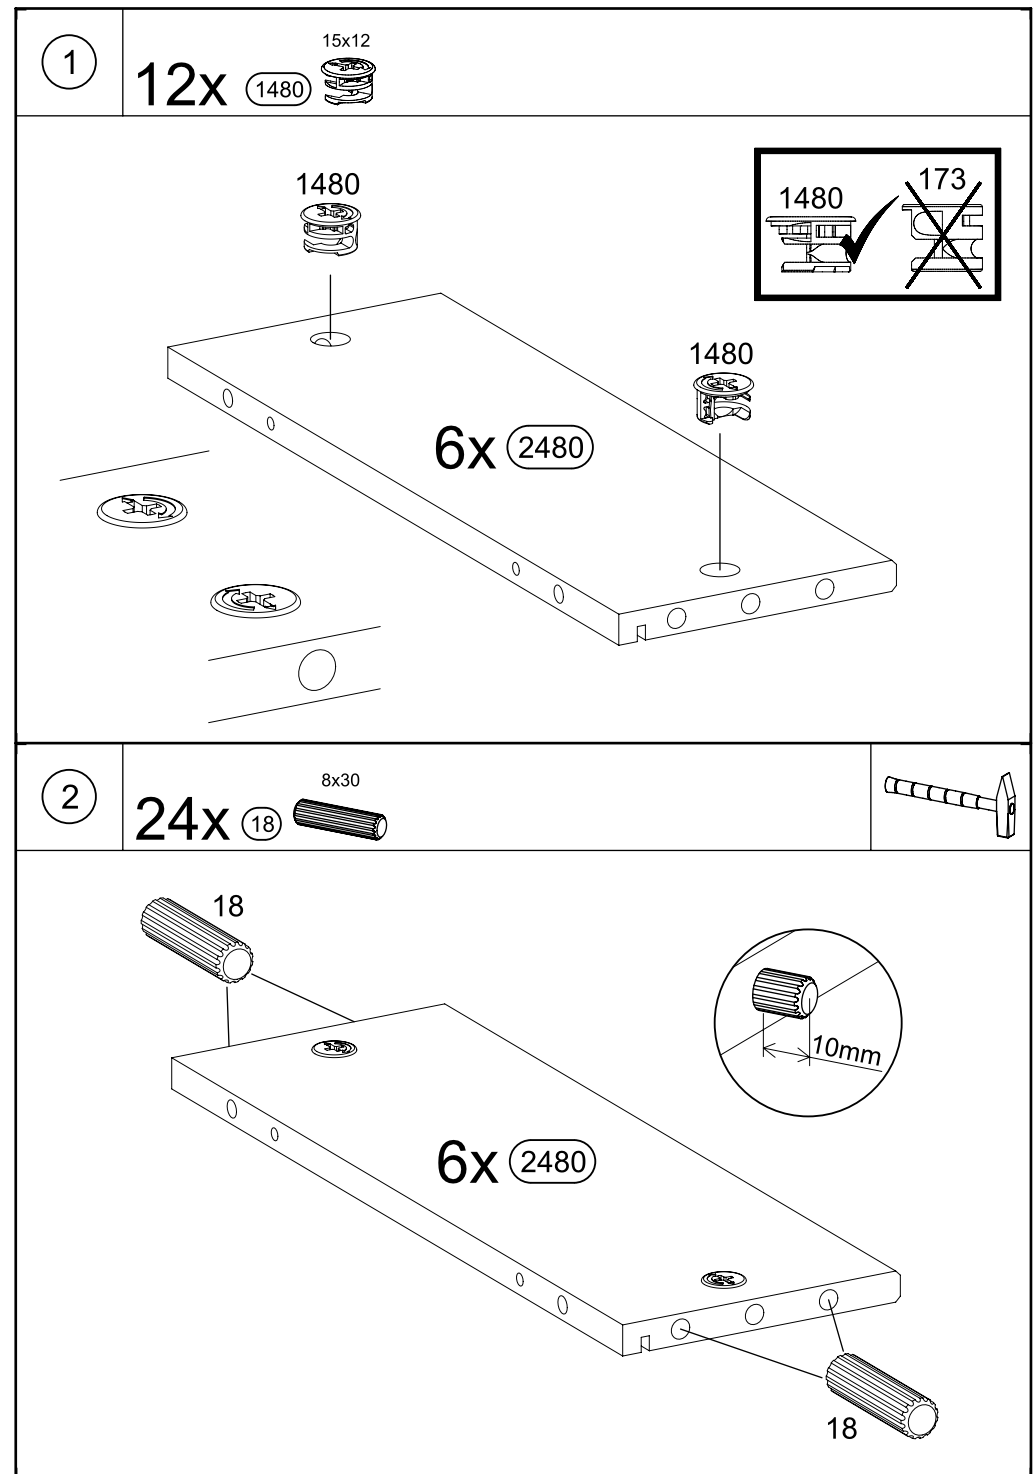


M3093

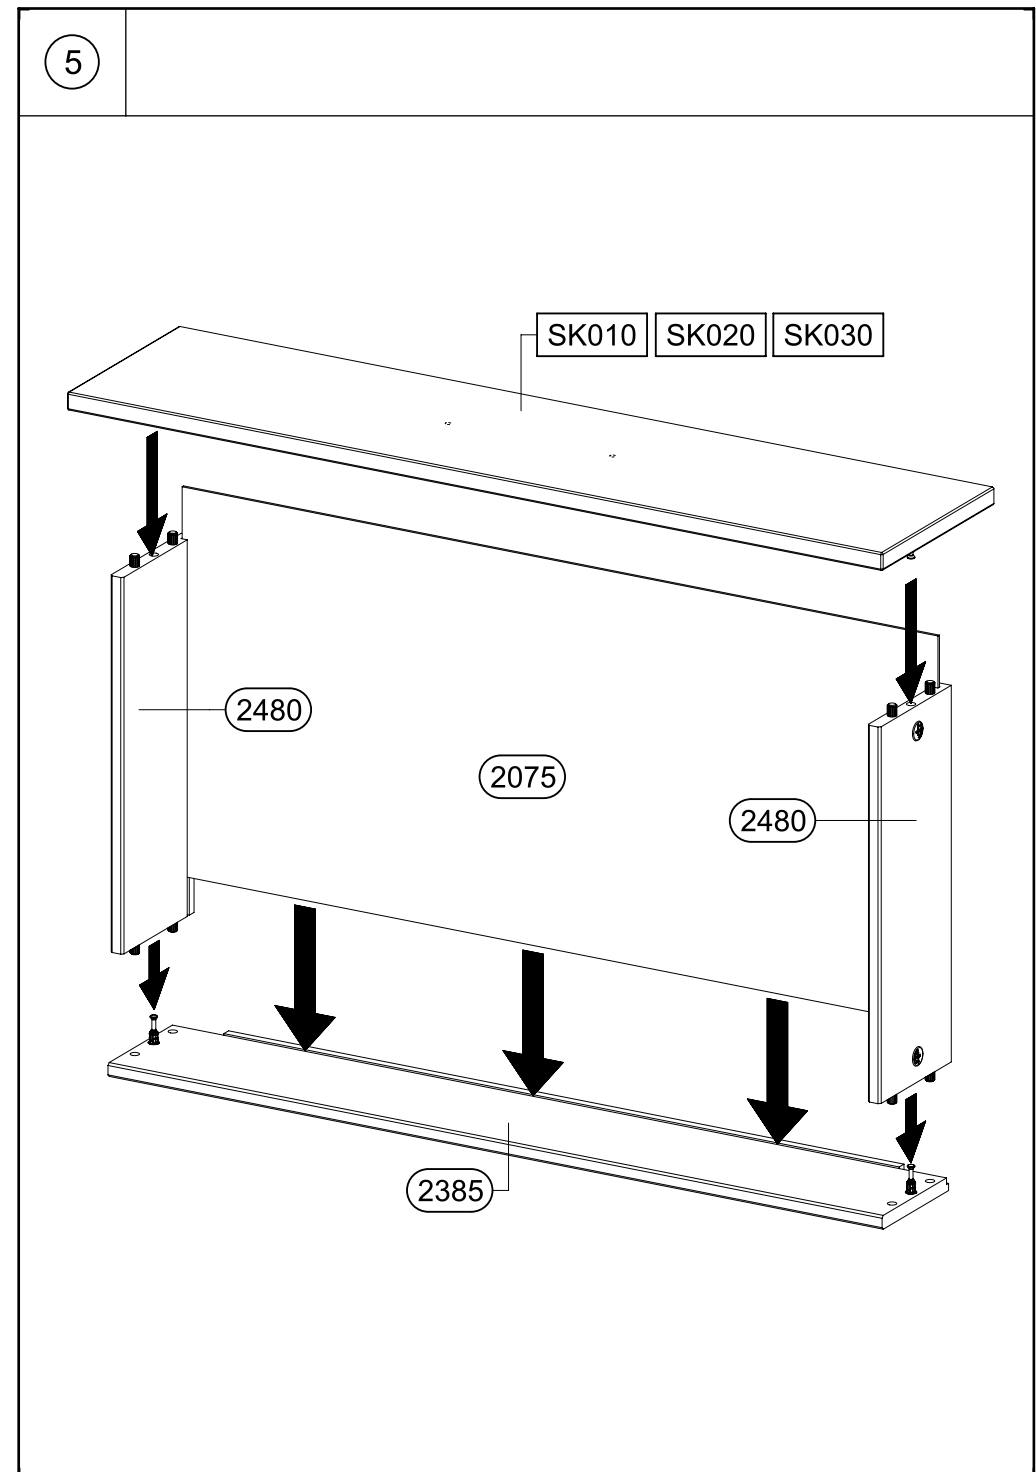
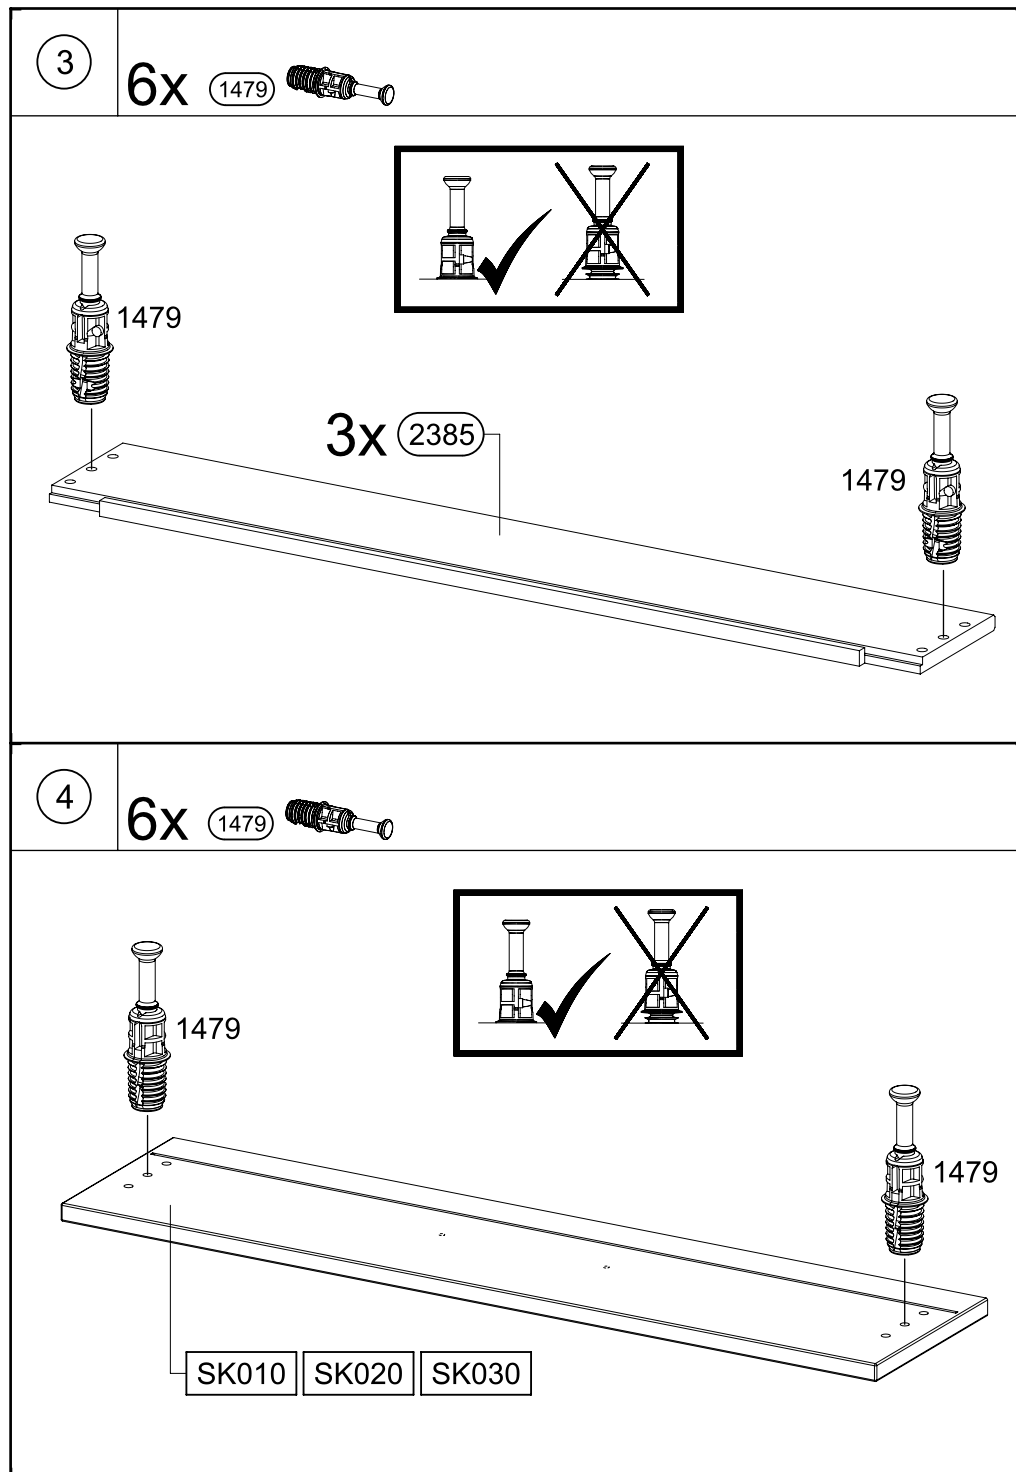


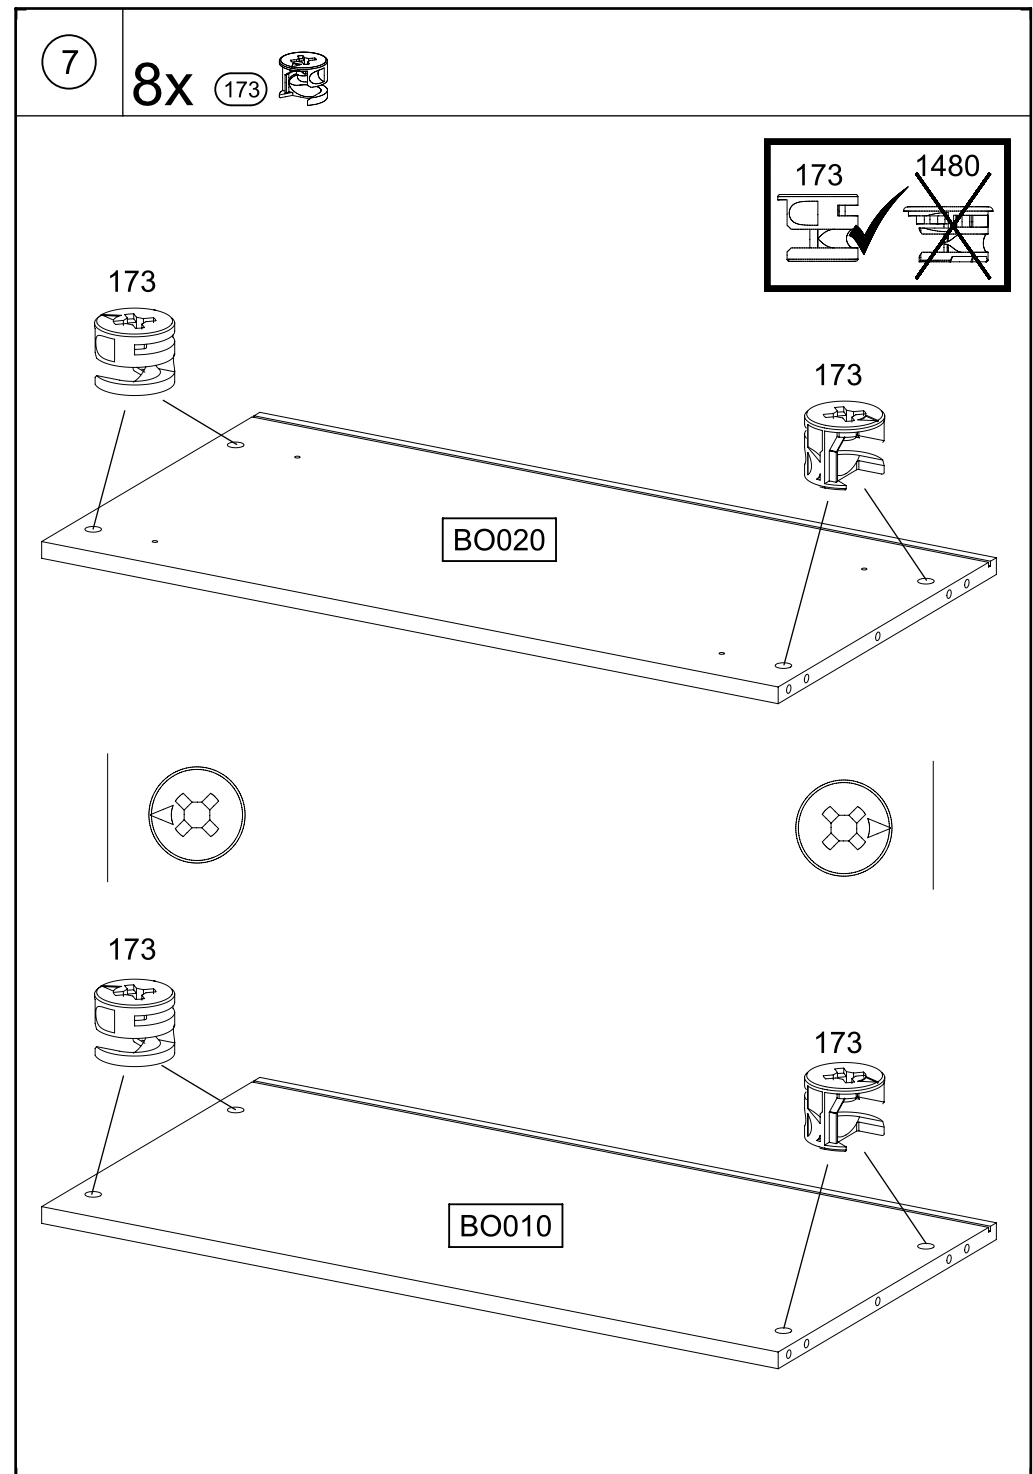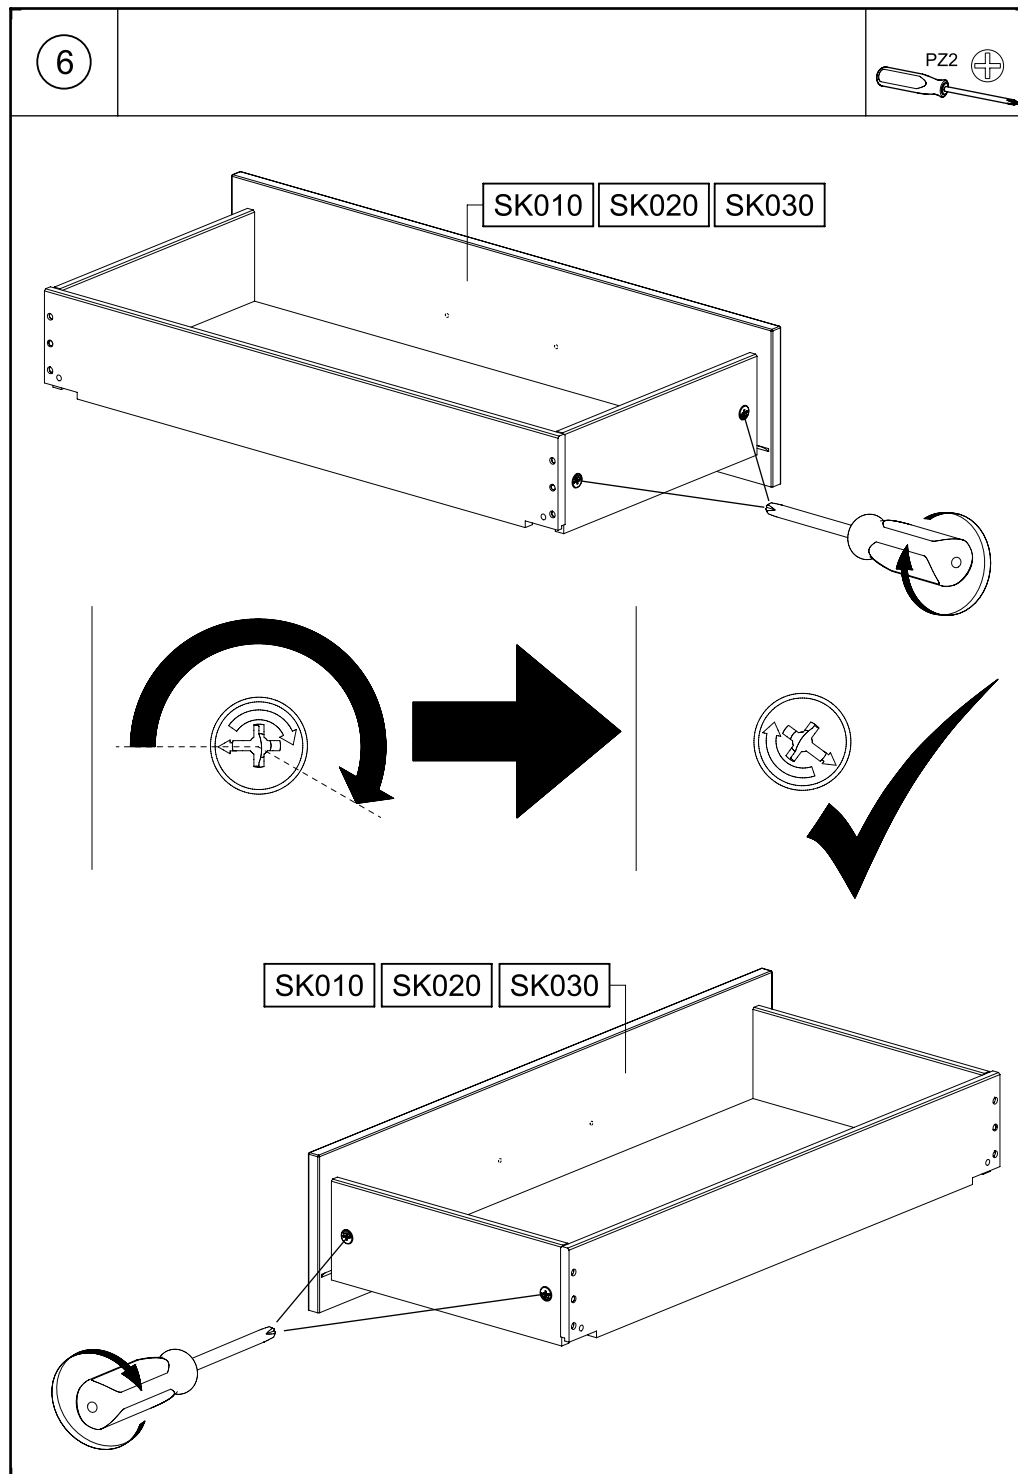

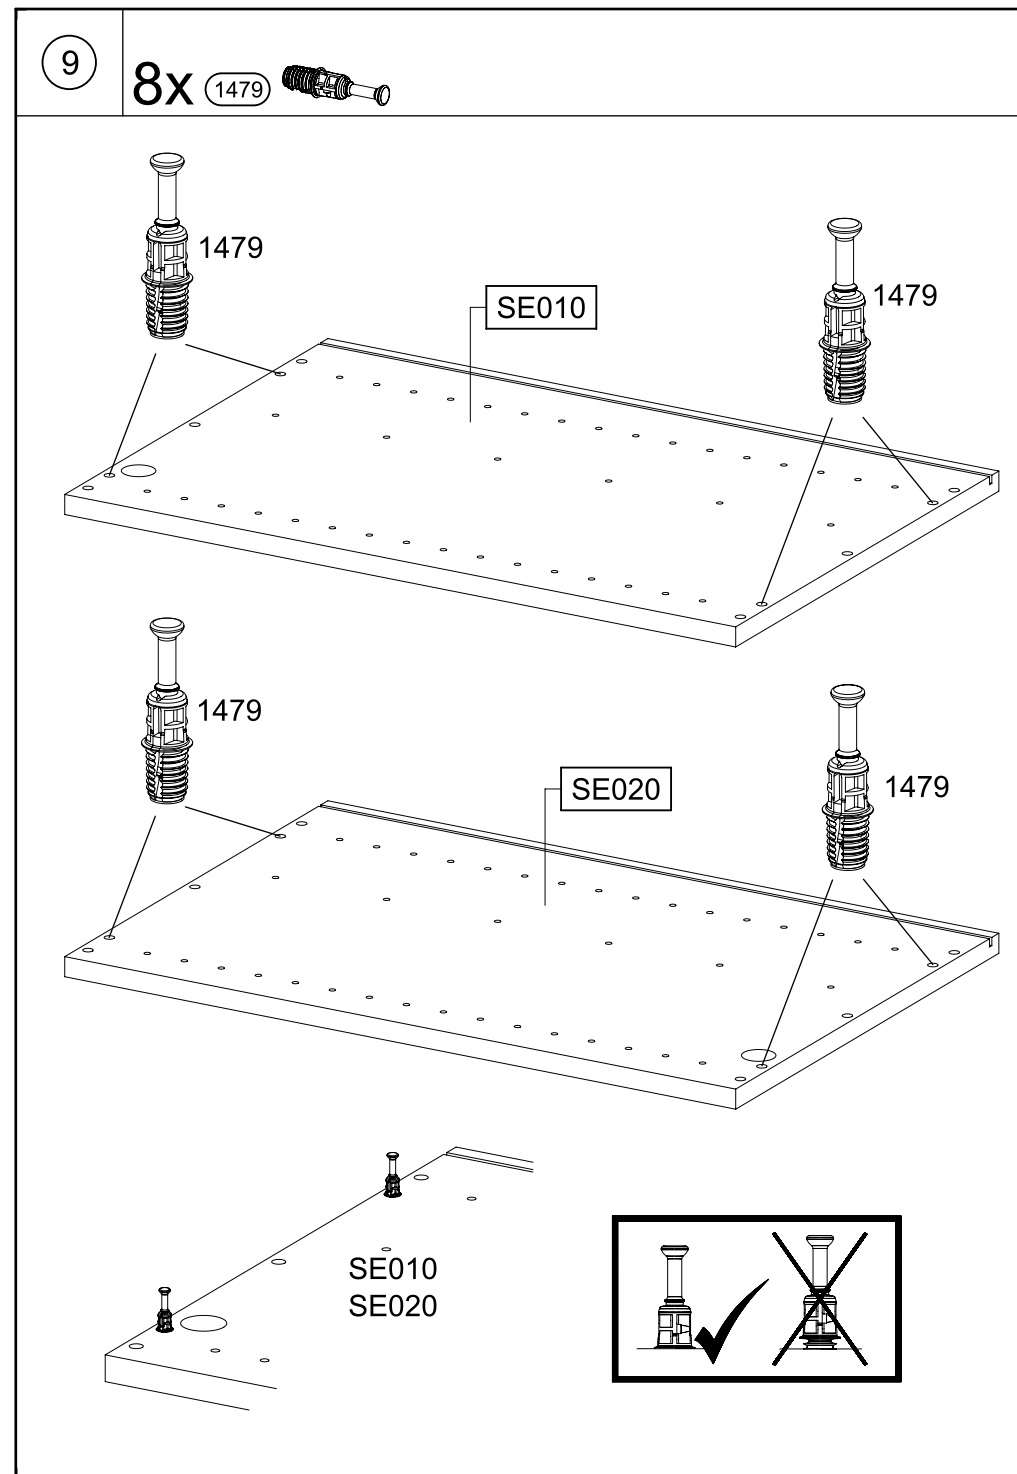
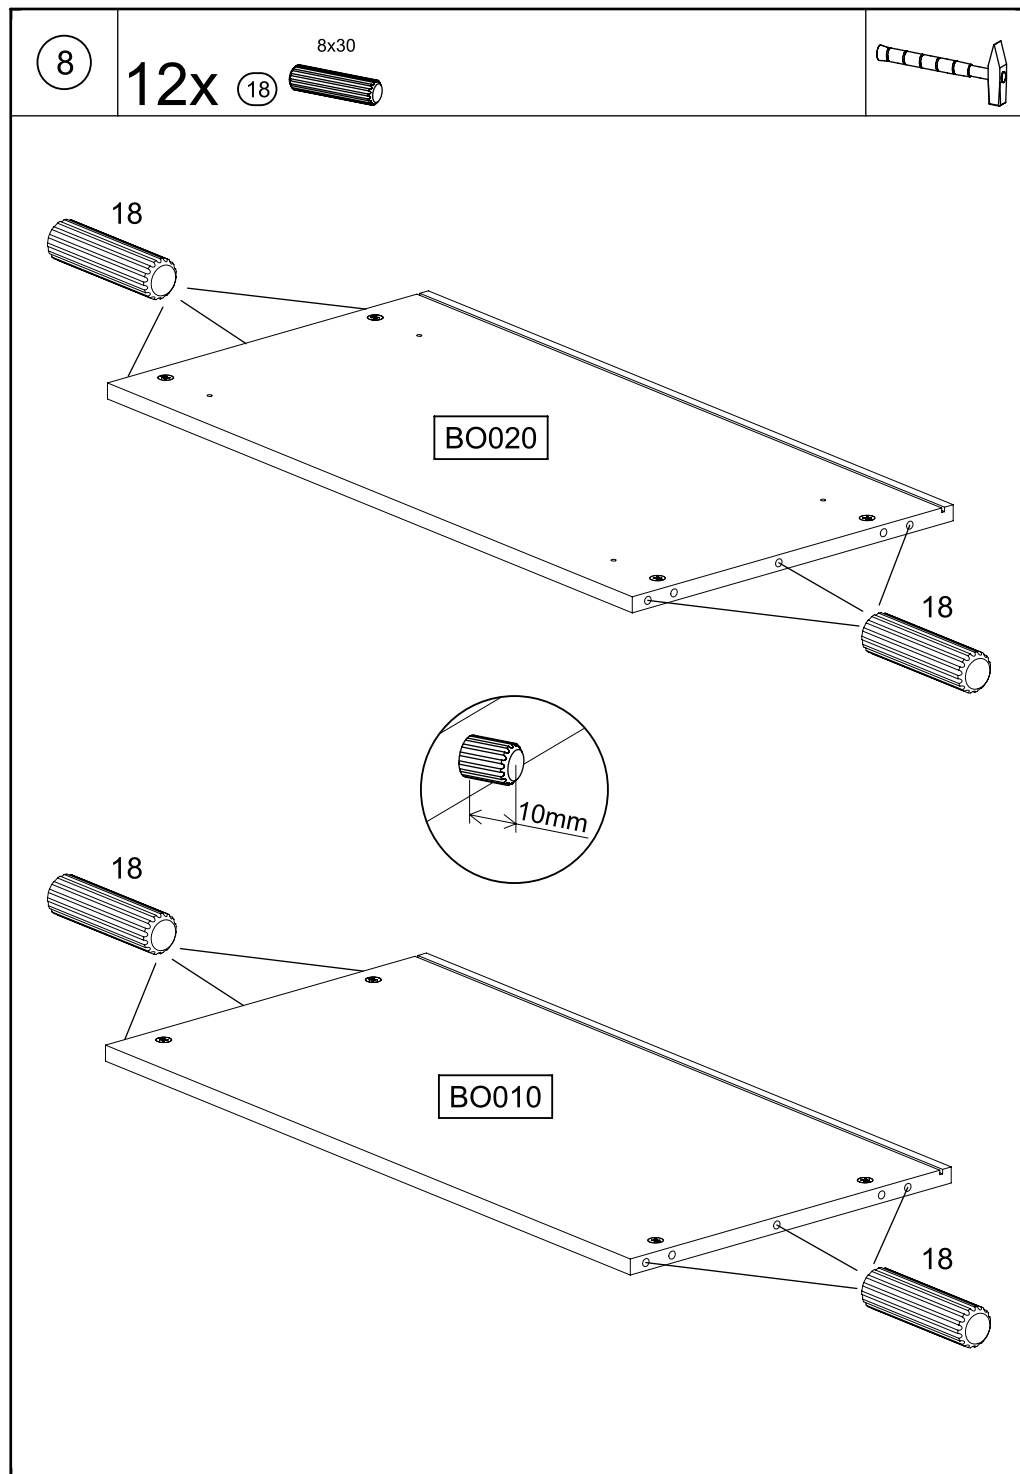


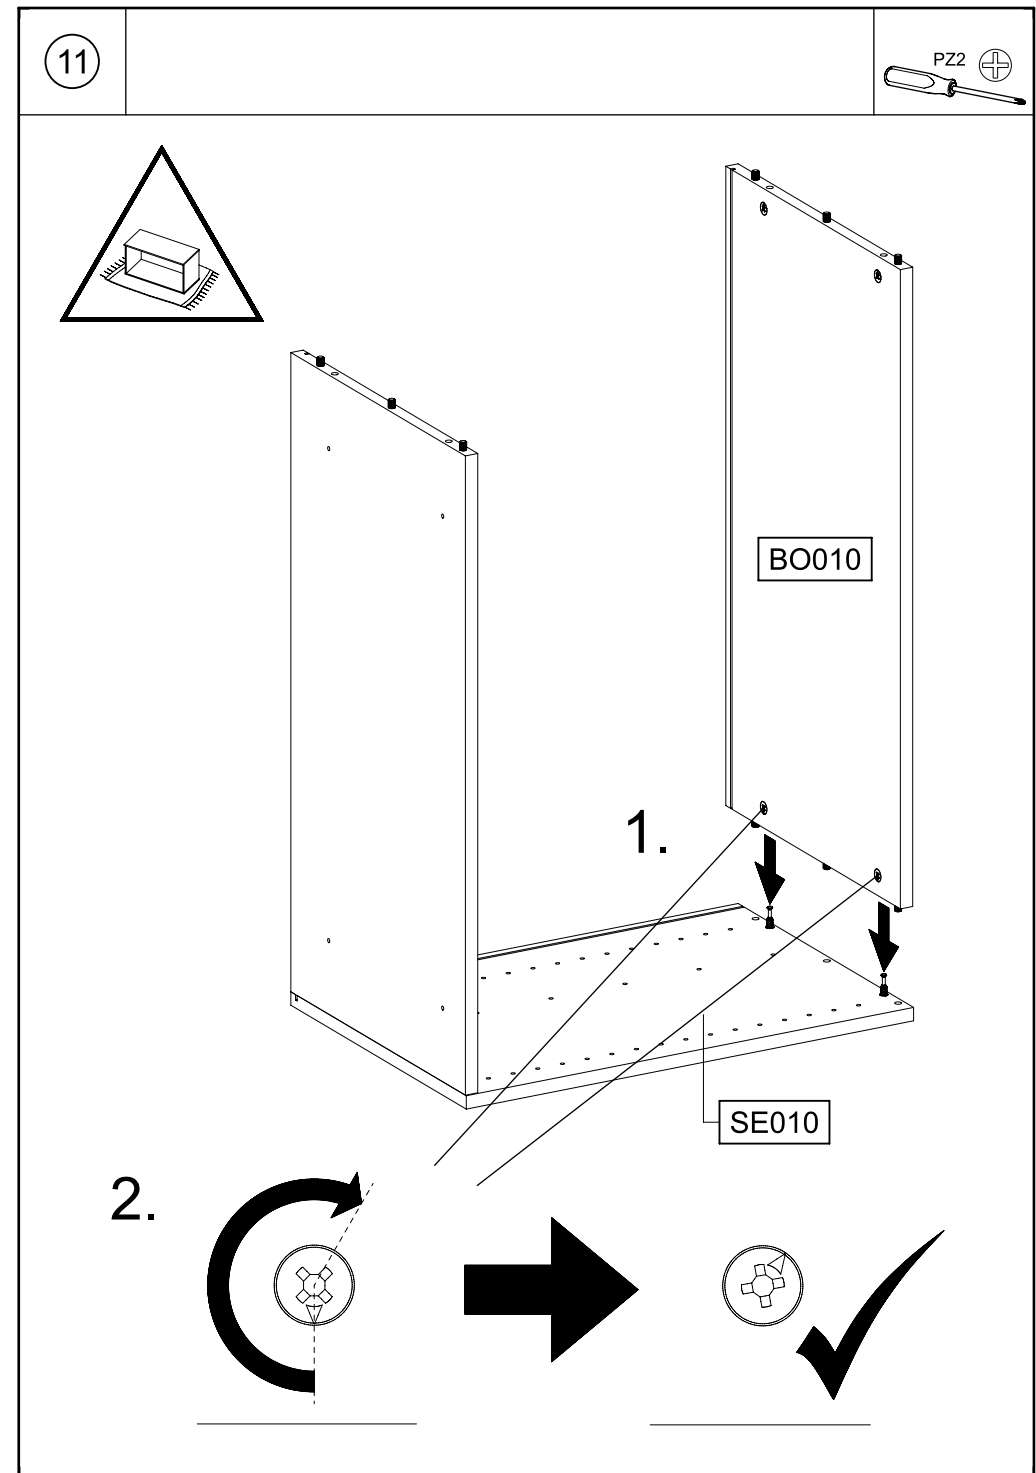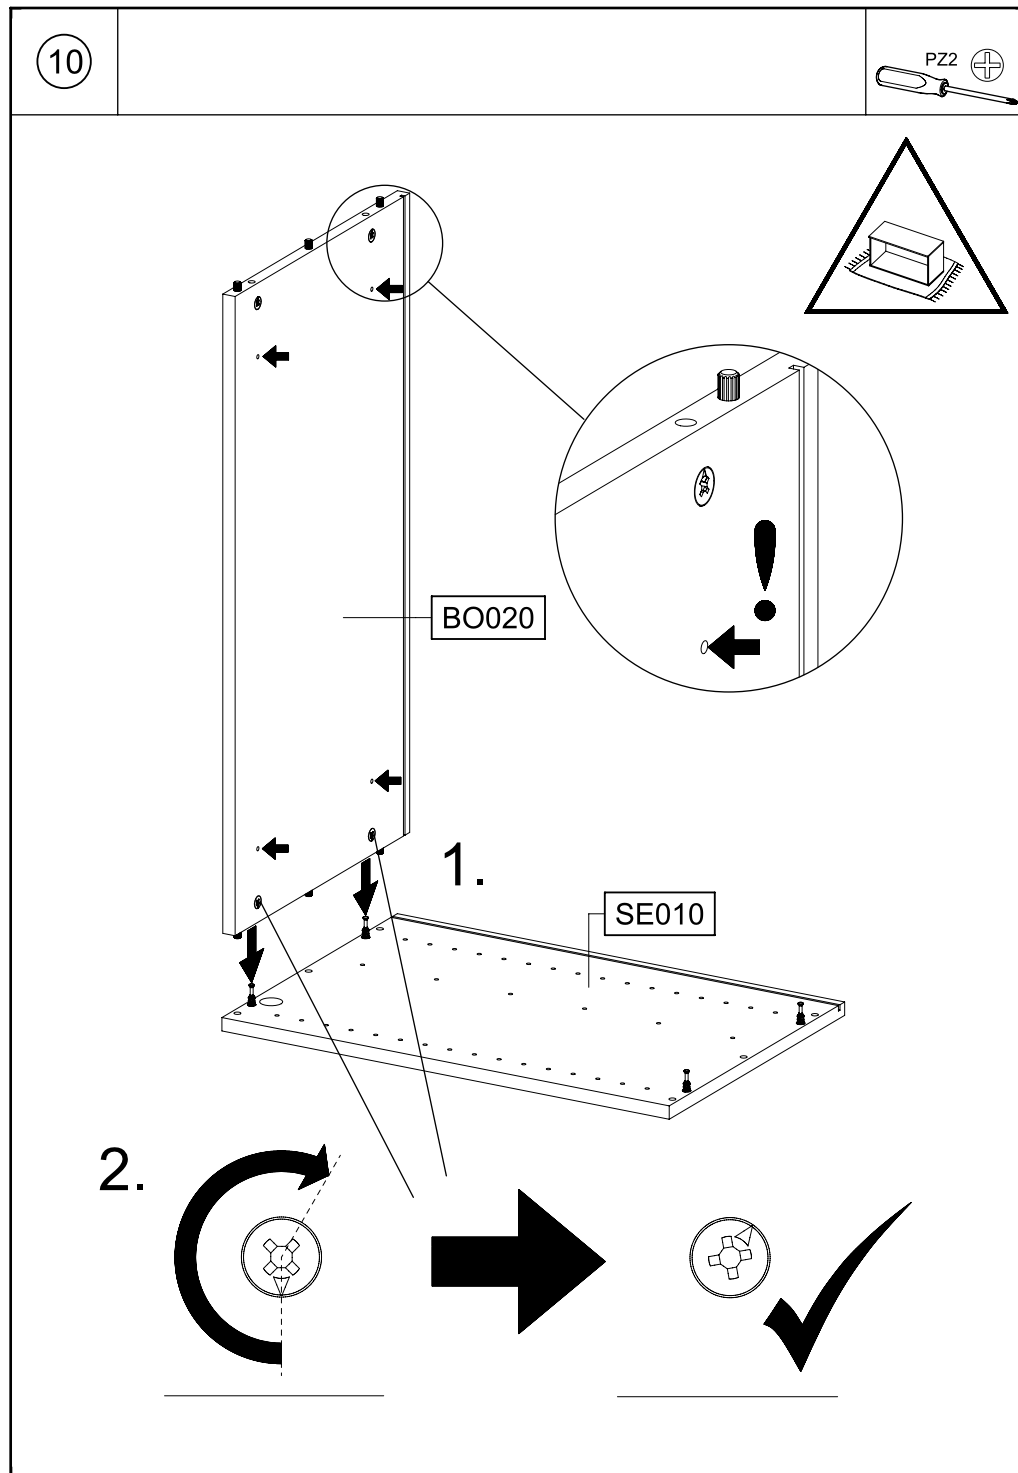



12

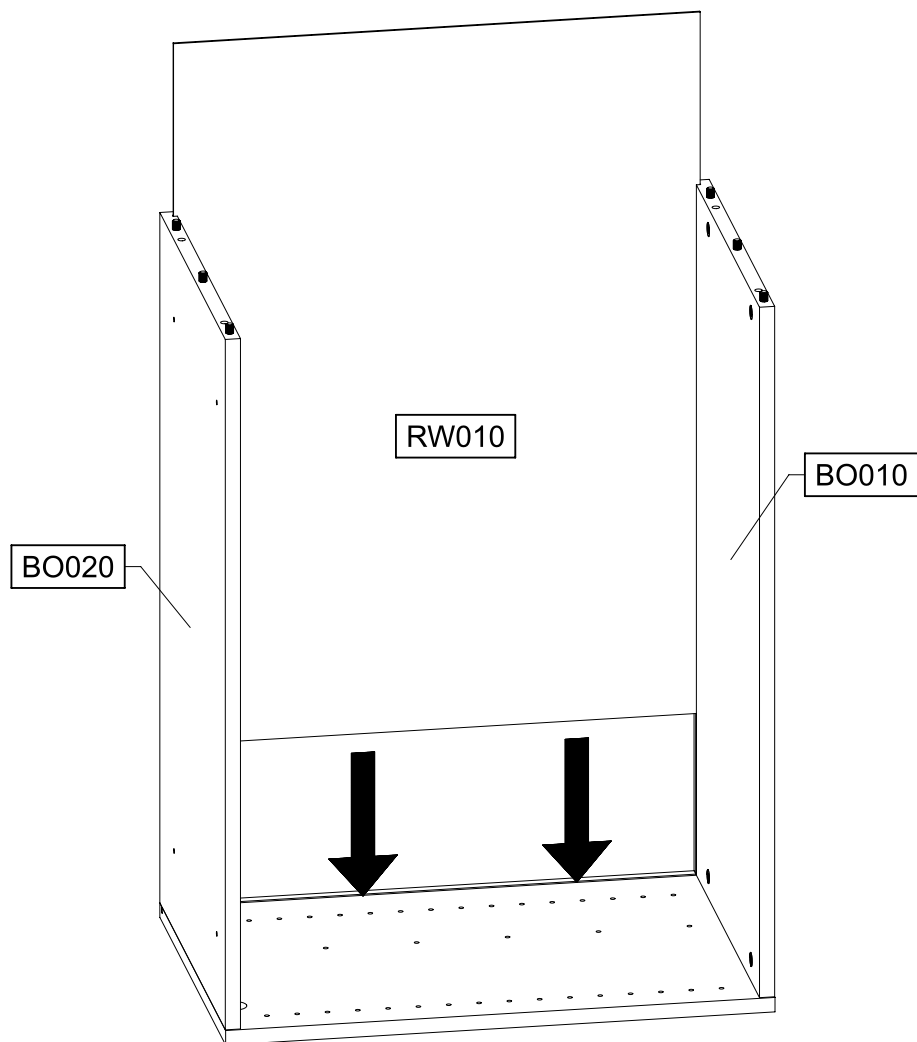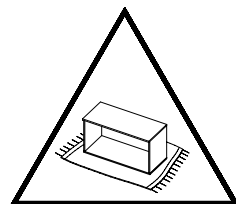


13

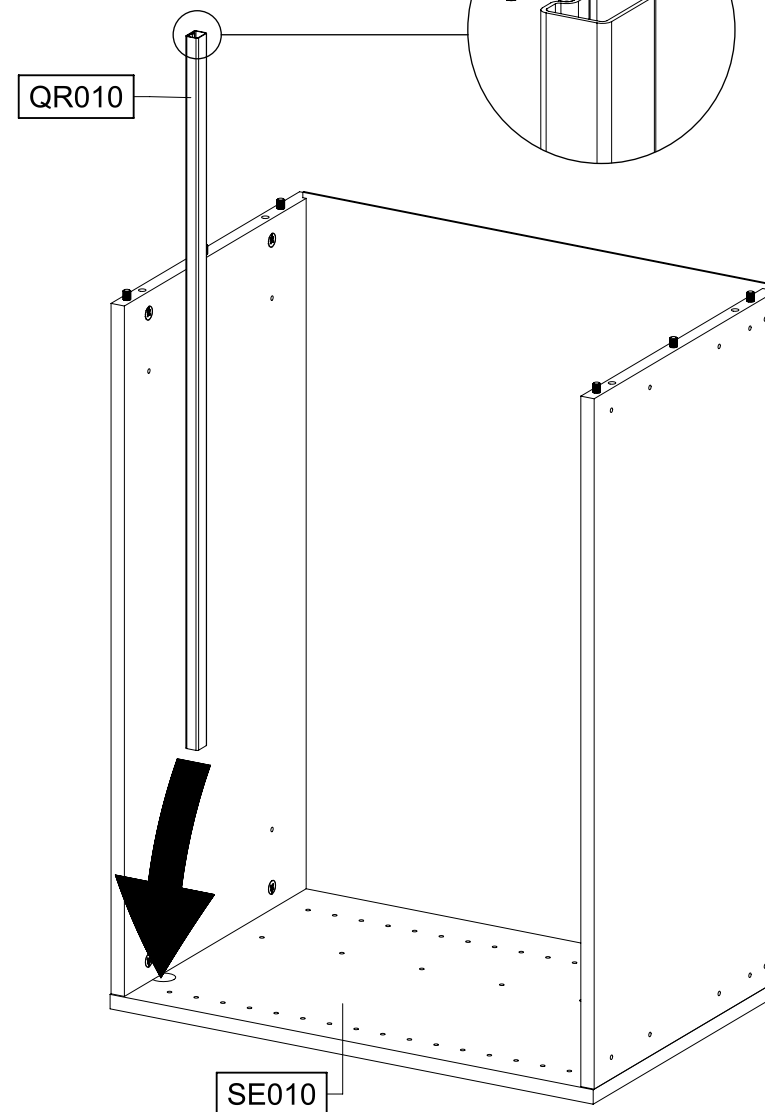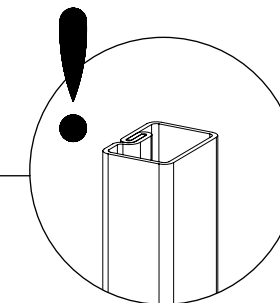

14




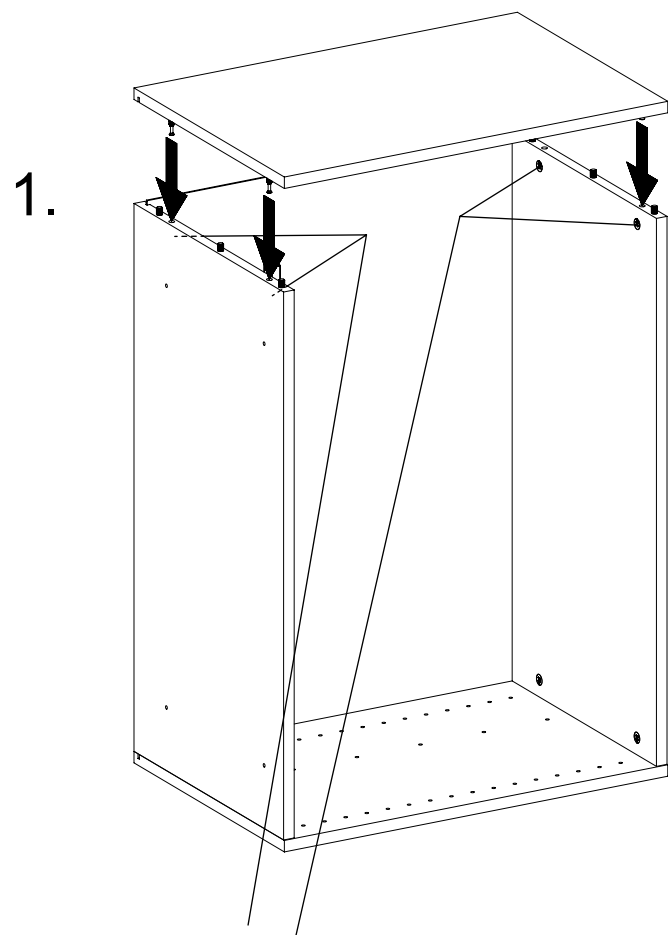



2.

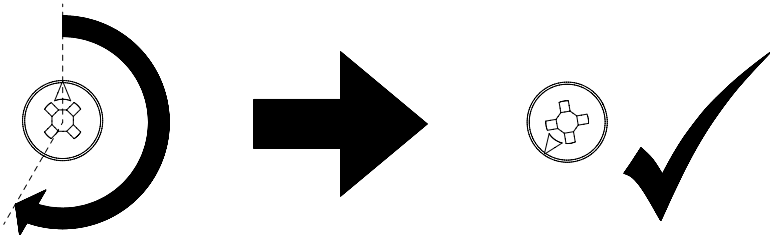





15



4x

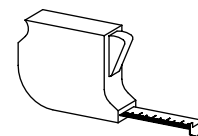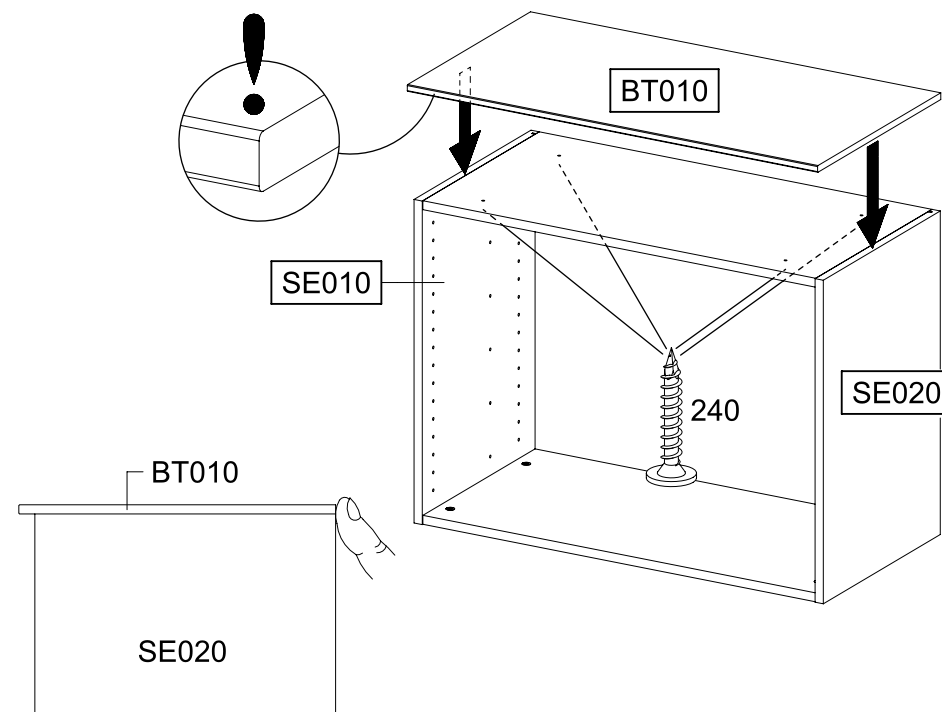

Xmm=Xmm

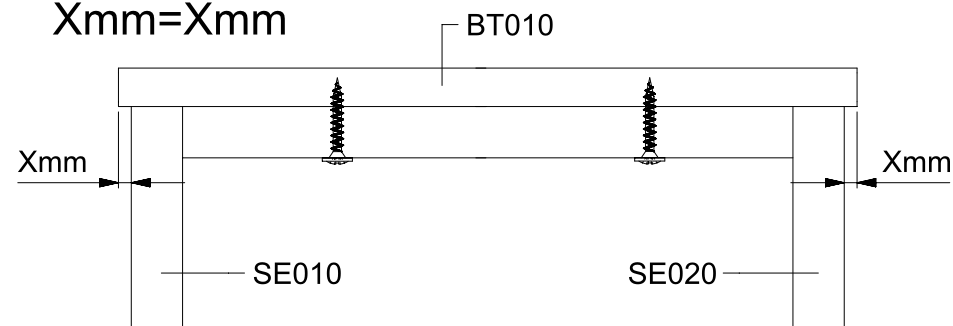

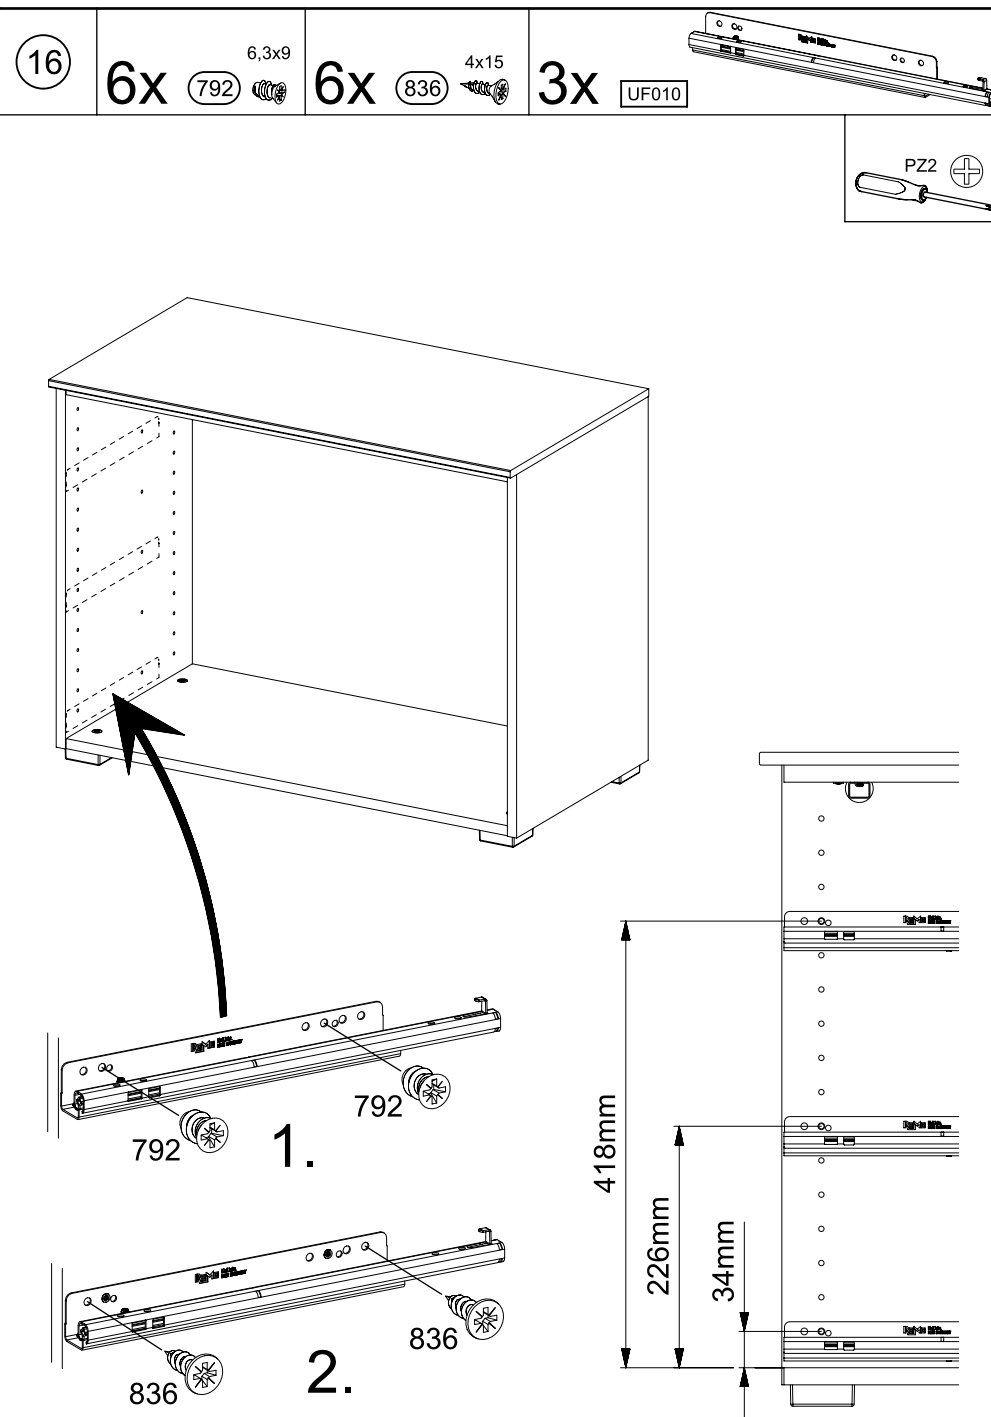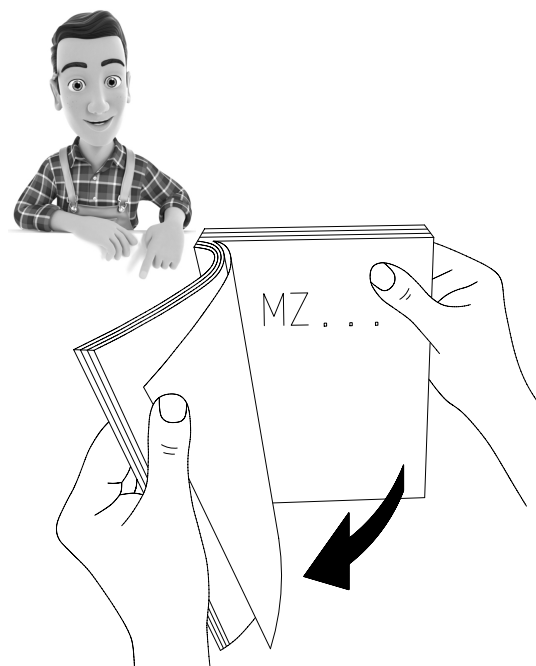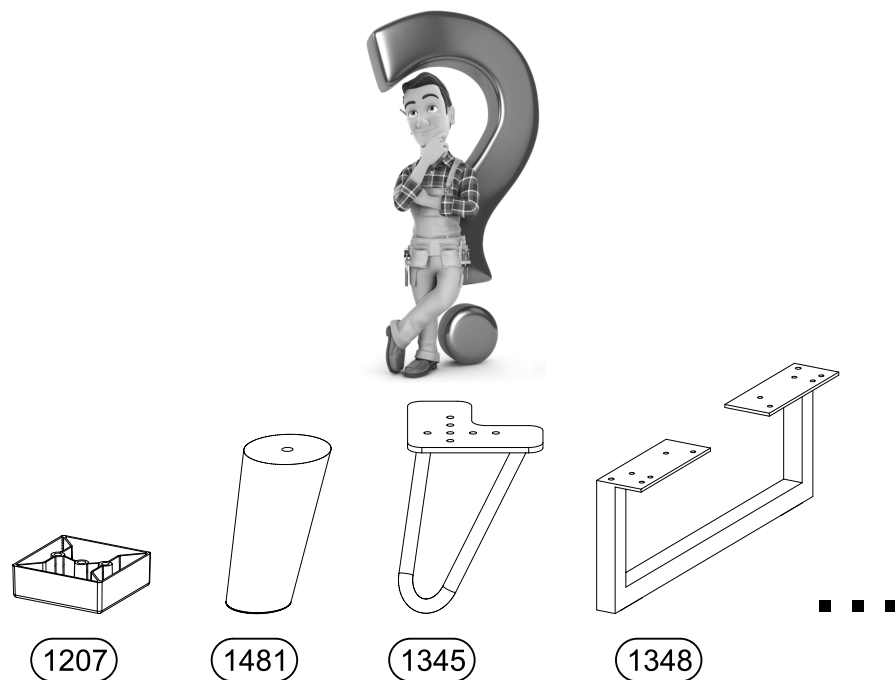

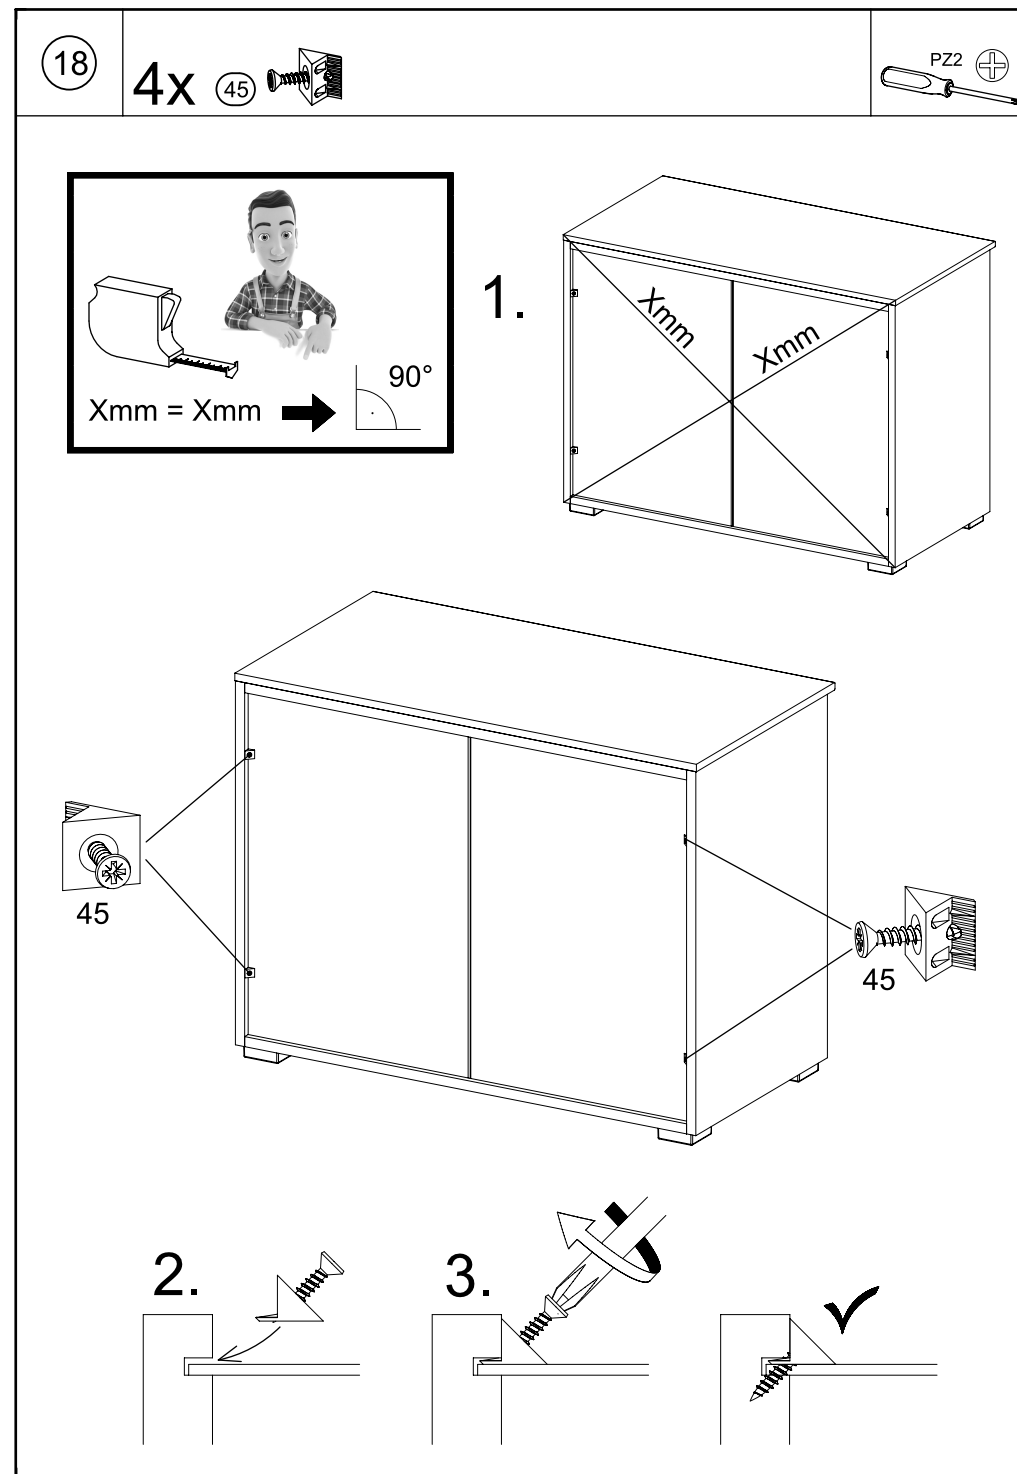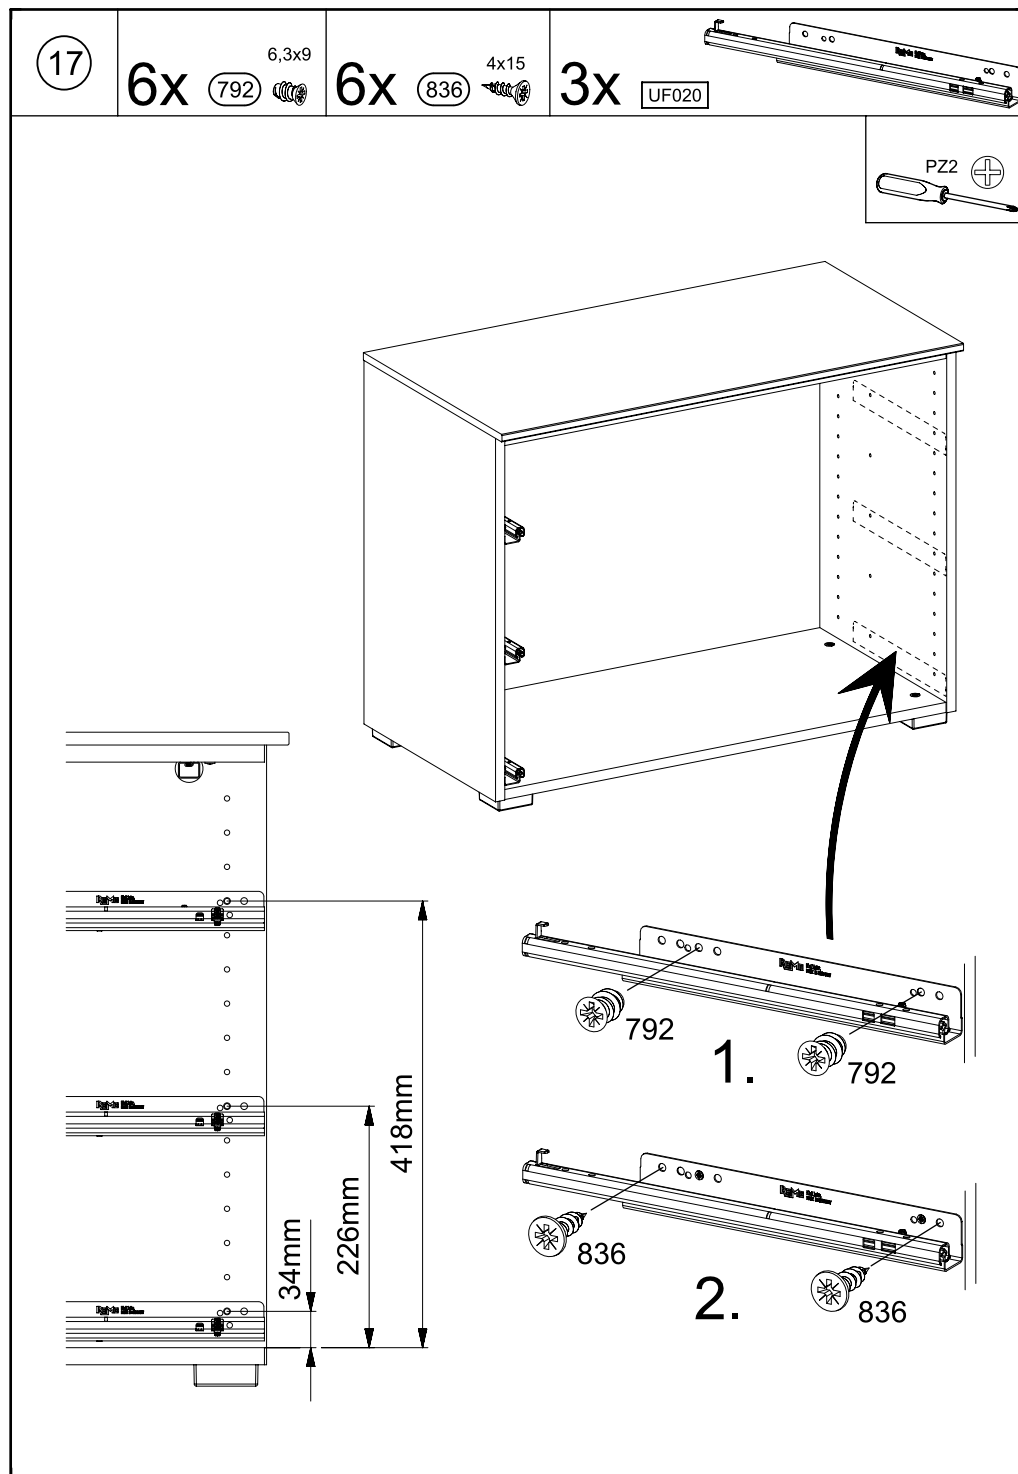


19

6x

852



852



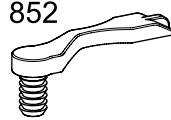


852

SK010



SK020

SK030

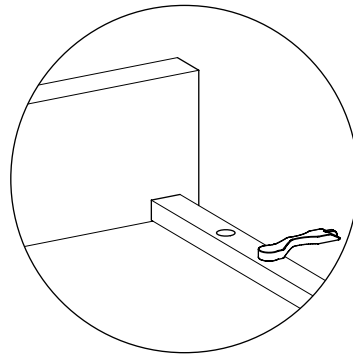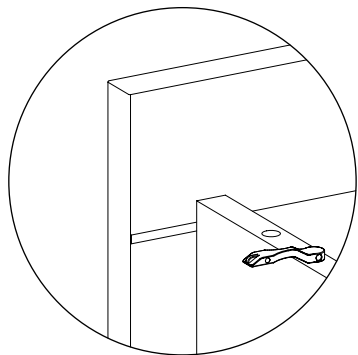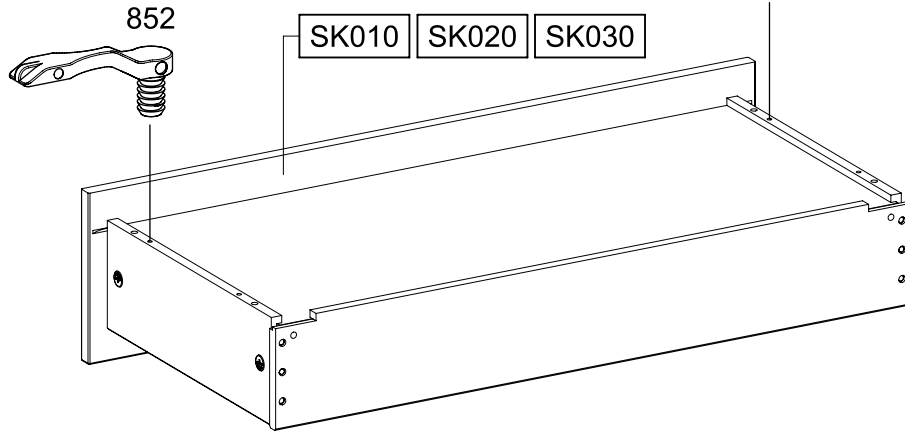

20

1.

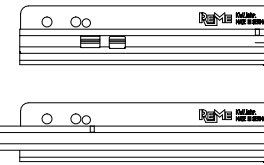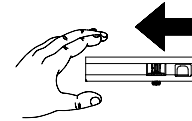


UF010

UF020

SK010

SK020


SK030

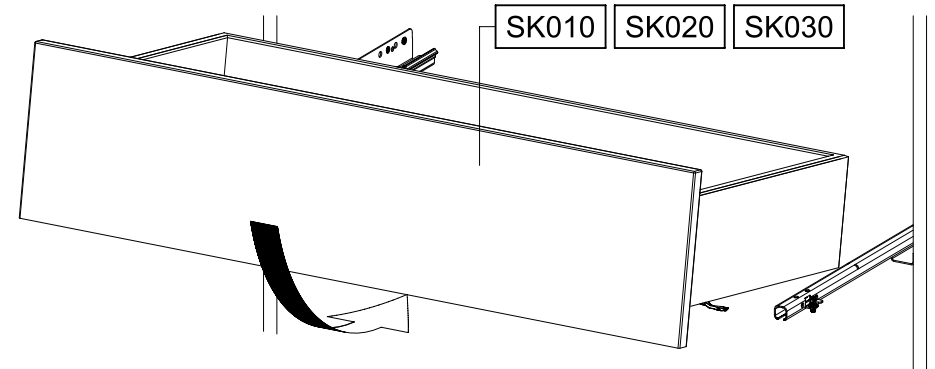

852

3.


2.



(21)



SCAN ME

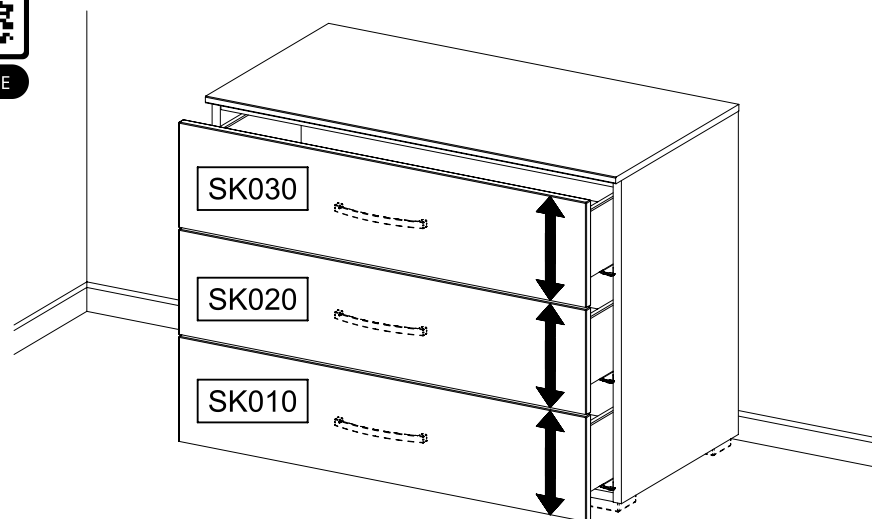

SK010
SK020
SK030

2.

852

2.

852

(22)

