

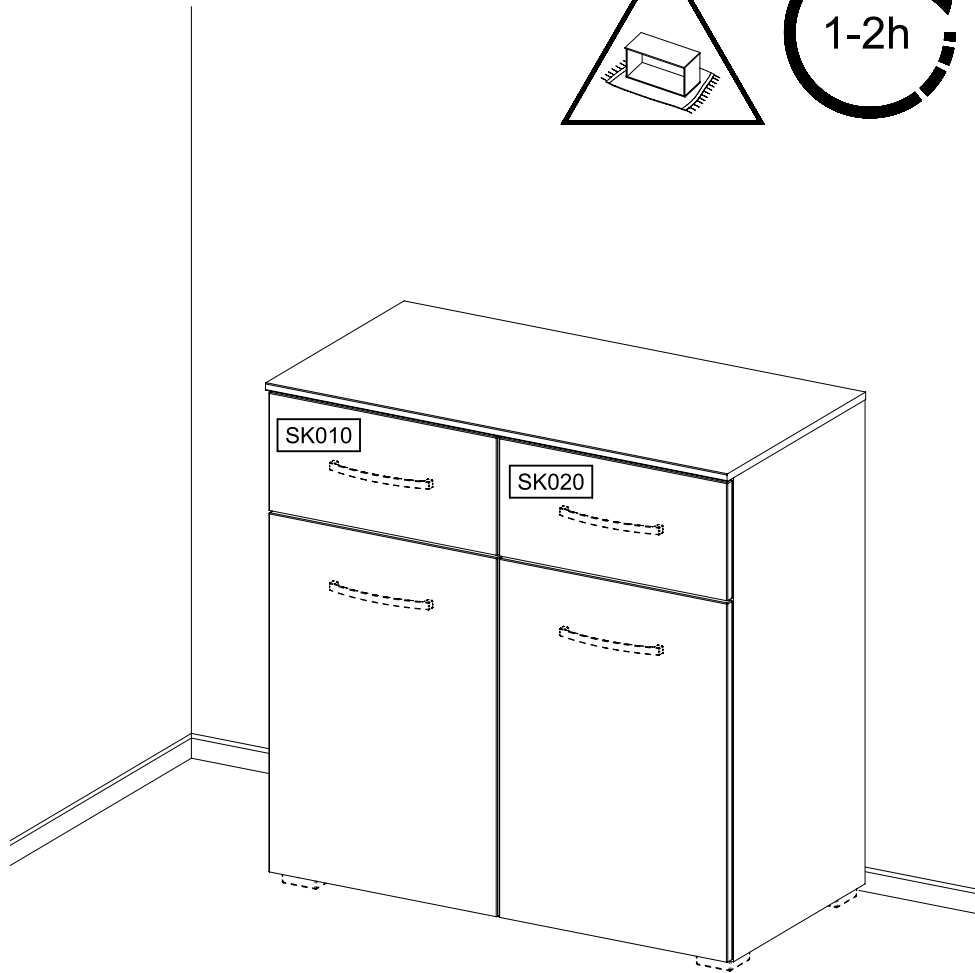
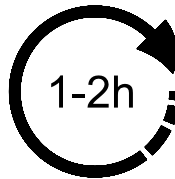
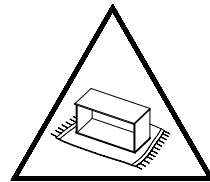
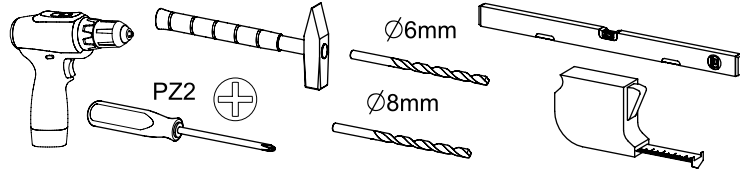


1.

M3097_01

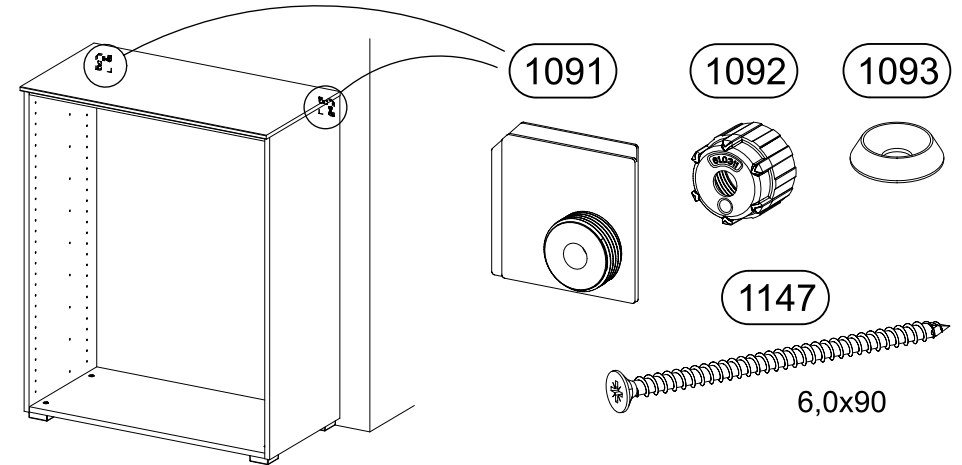

2.

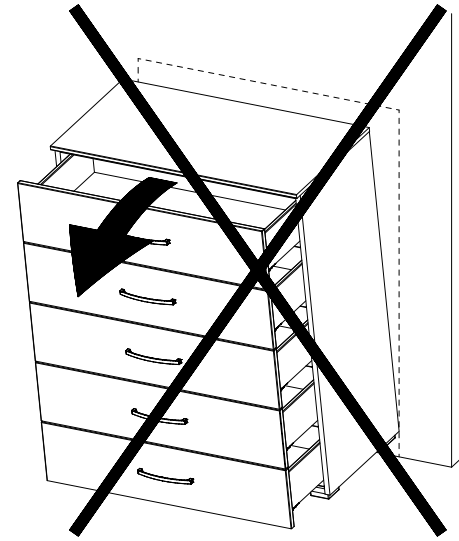



VIDEO




SCAN ME

3.

4.

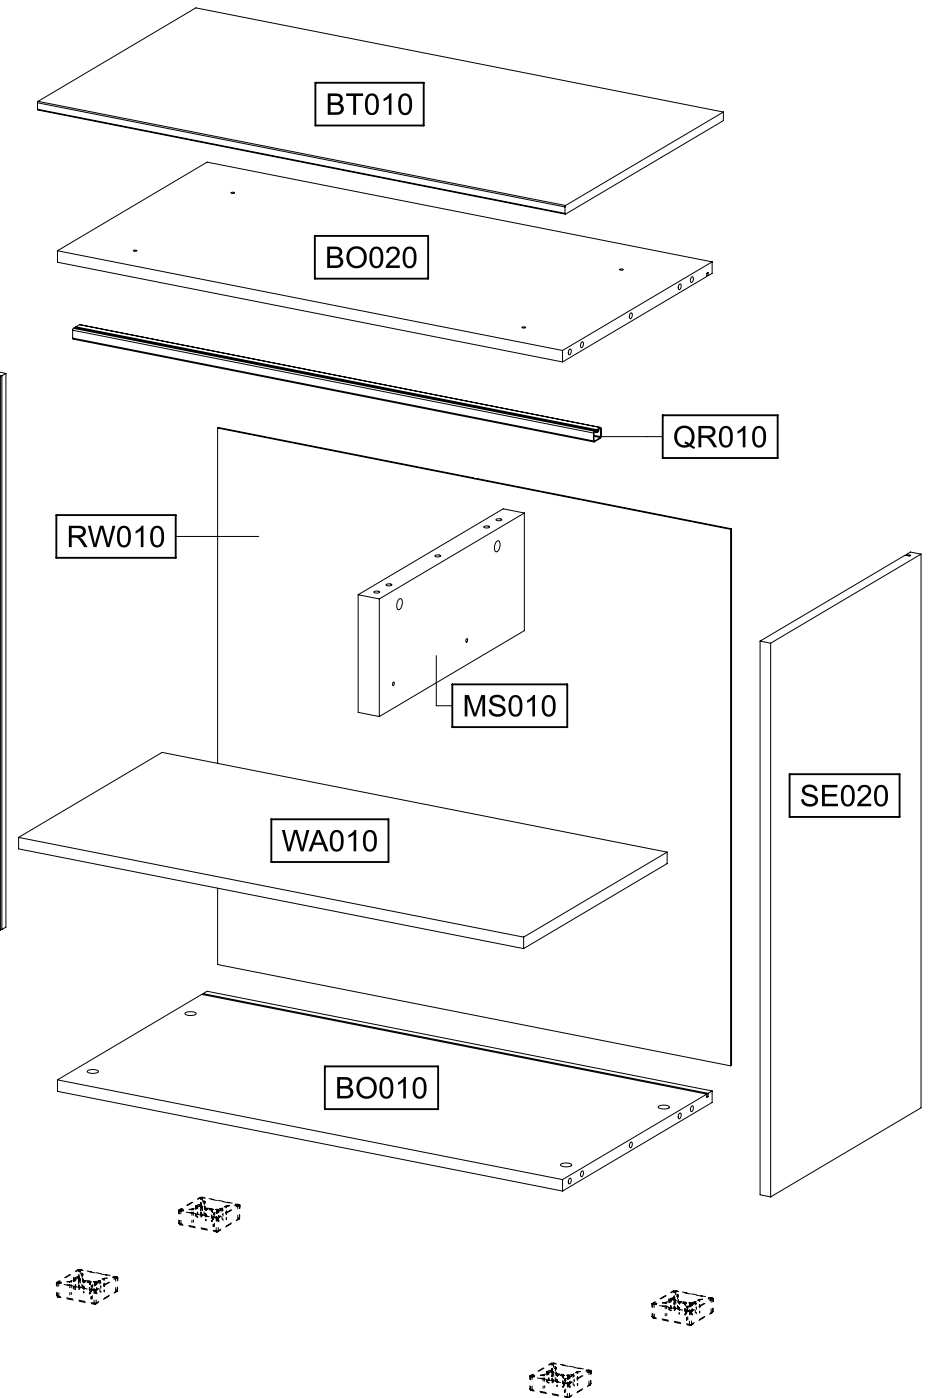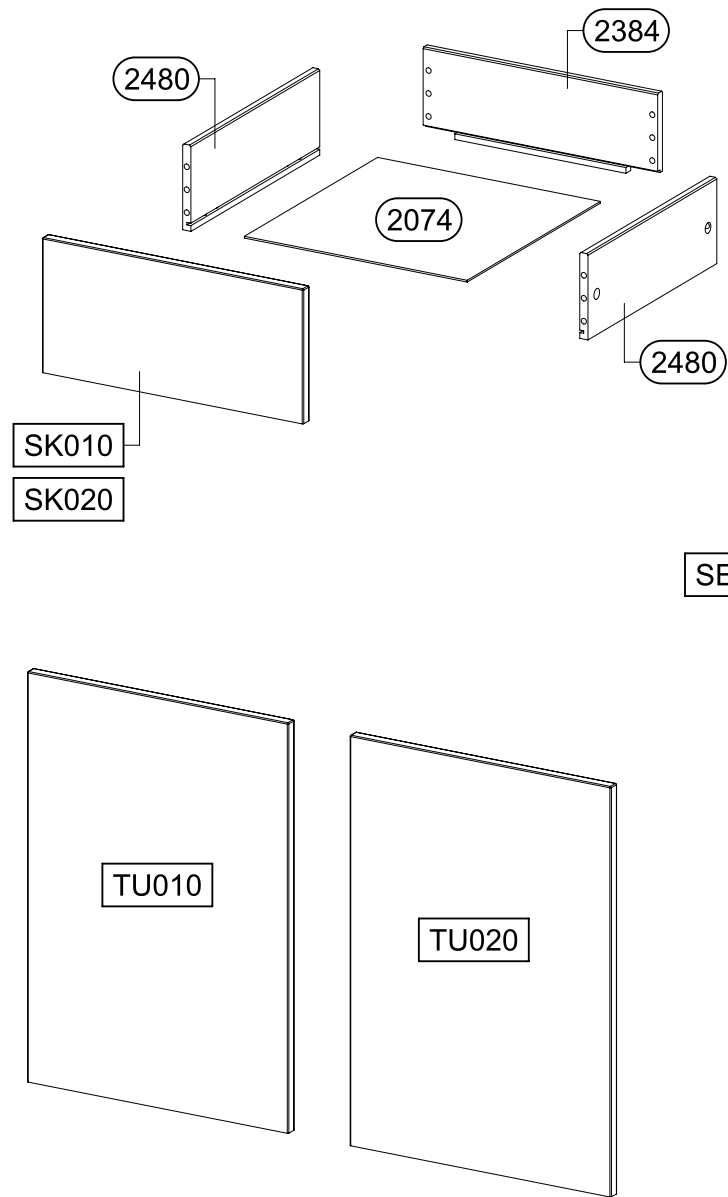


5.

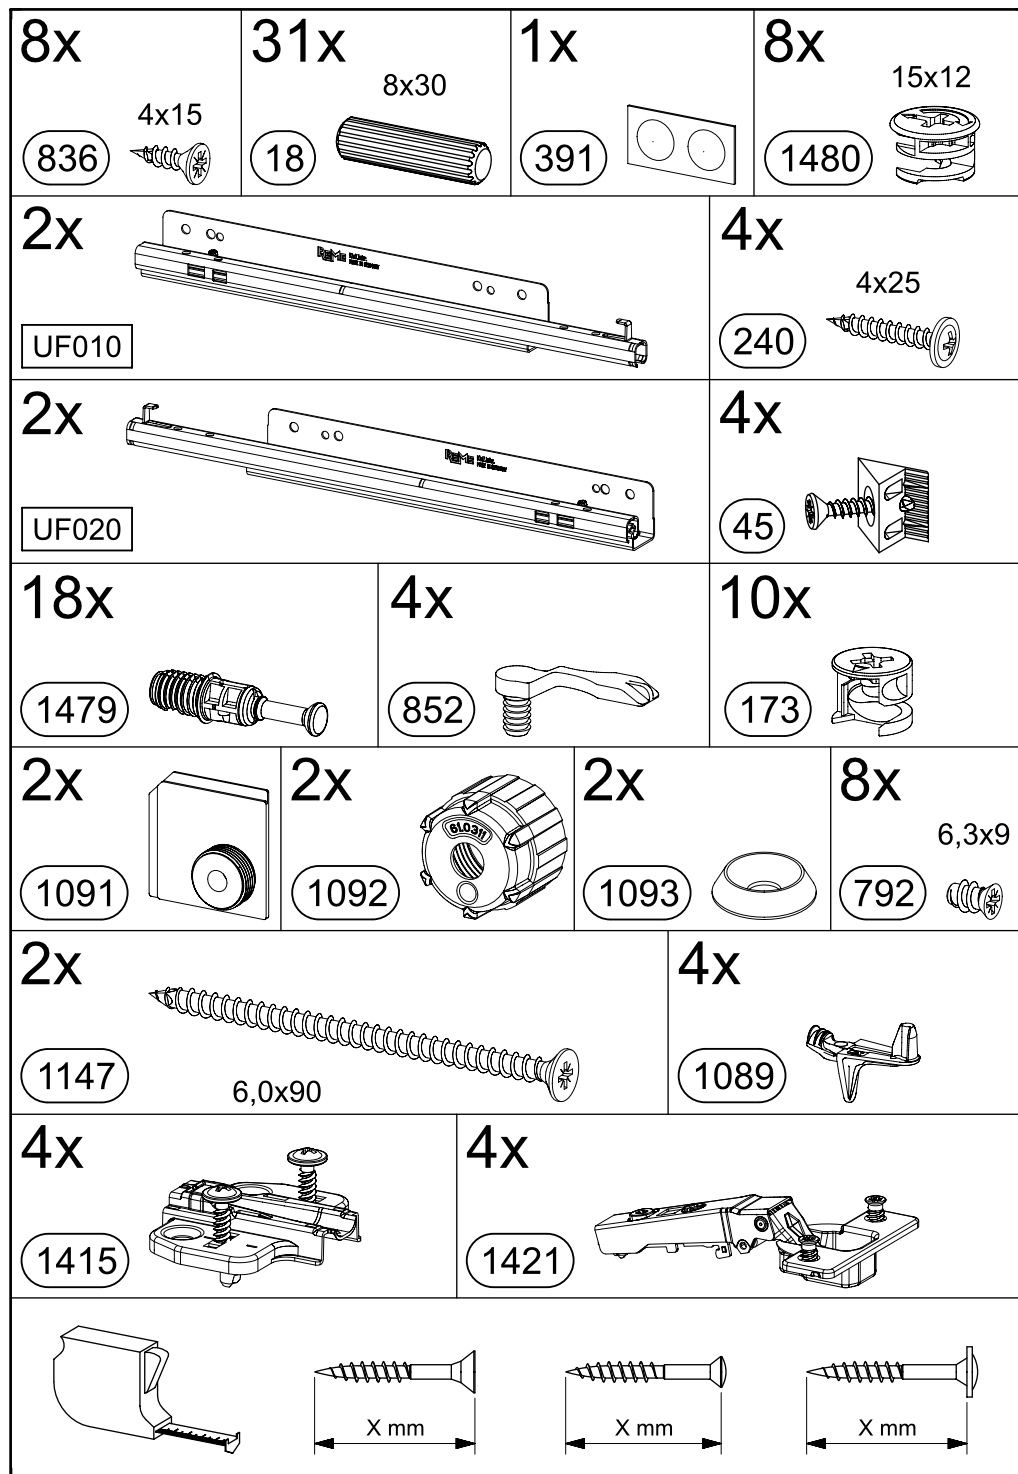

M3097



6.

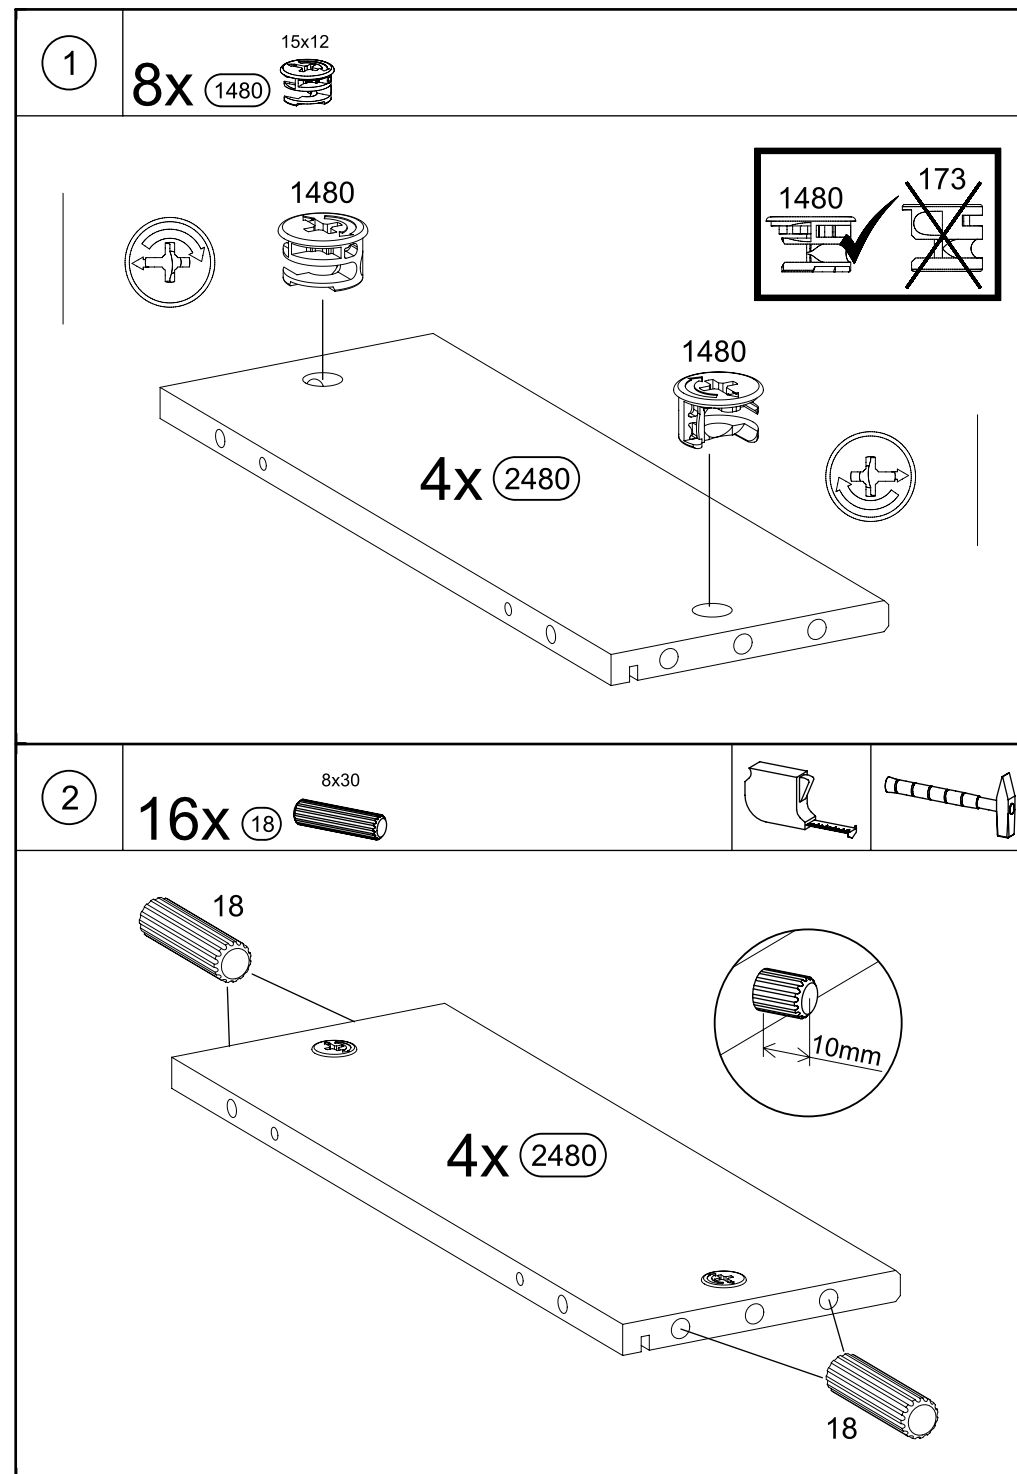

M3097



7.

4x 1479

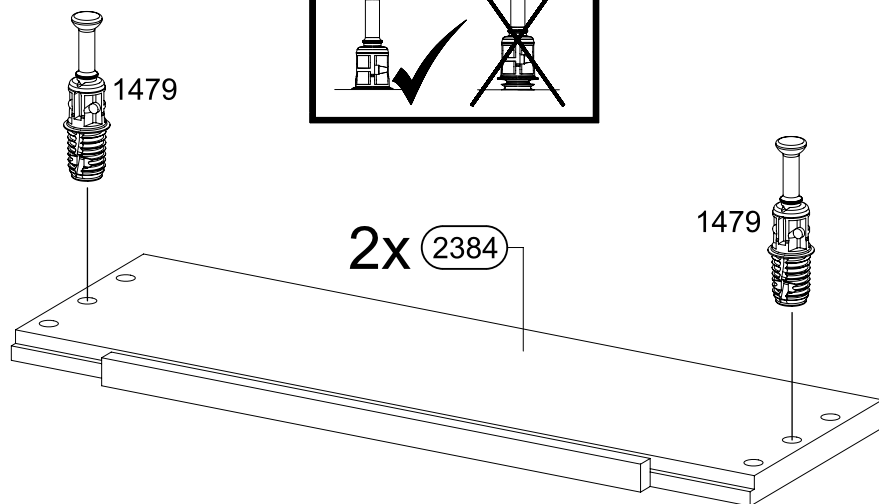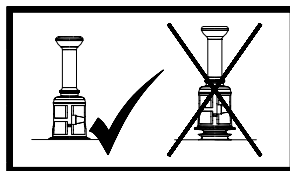

4


4x 1479

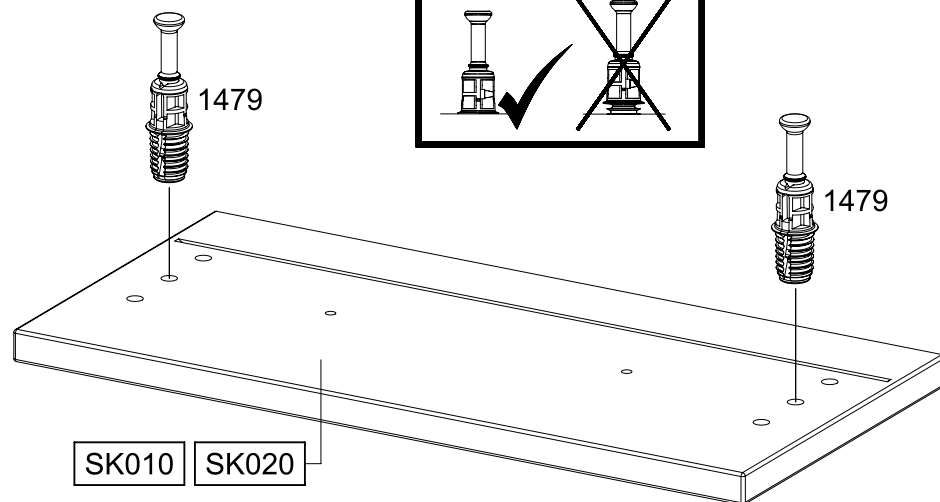
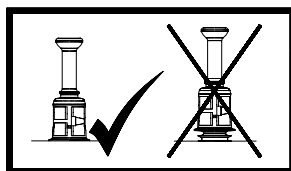




8.

5




2x

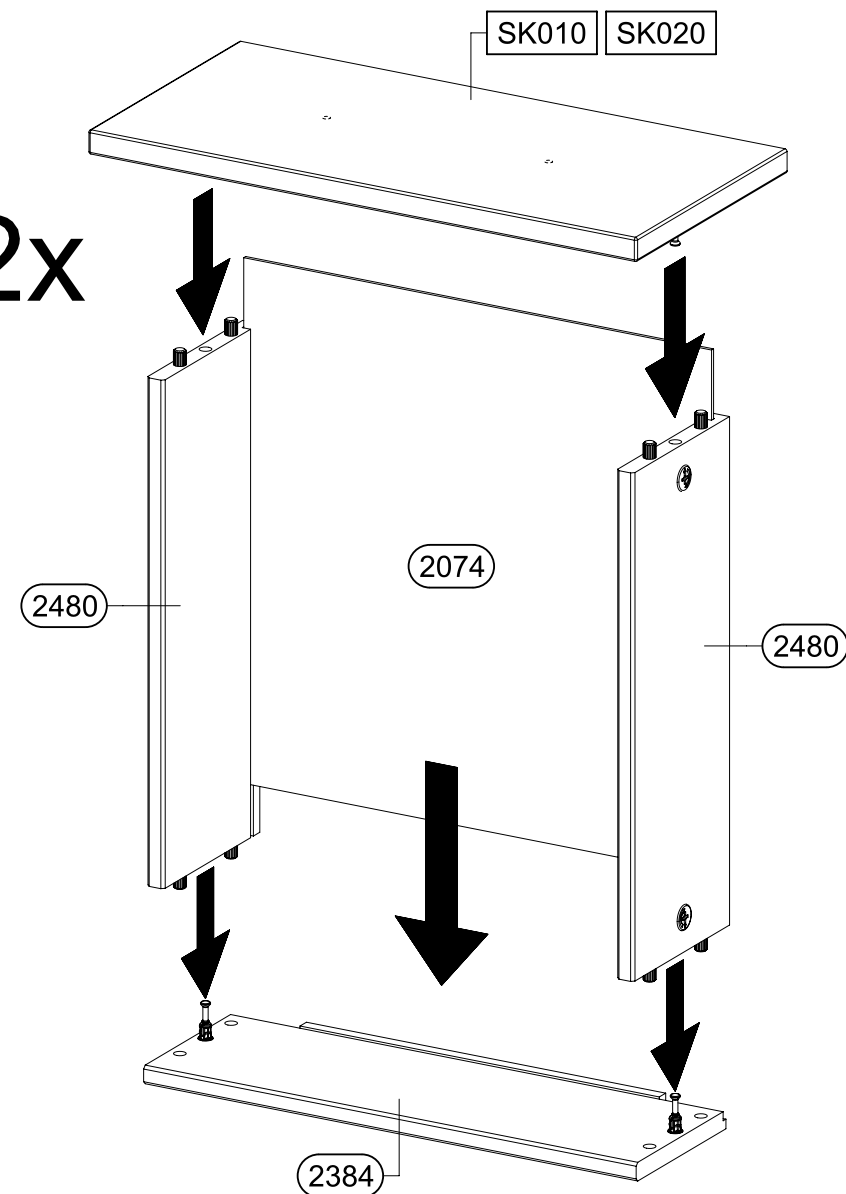

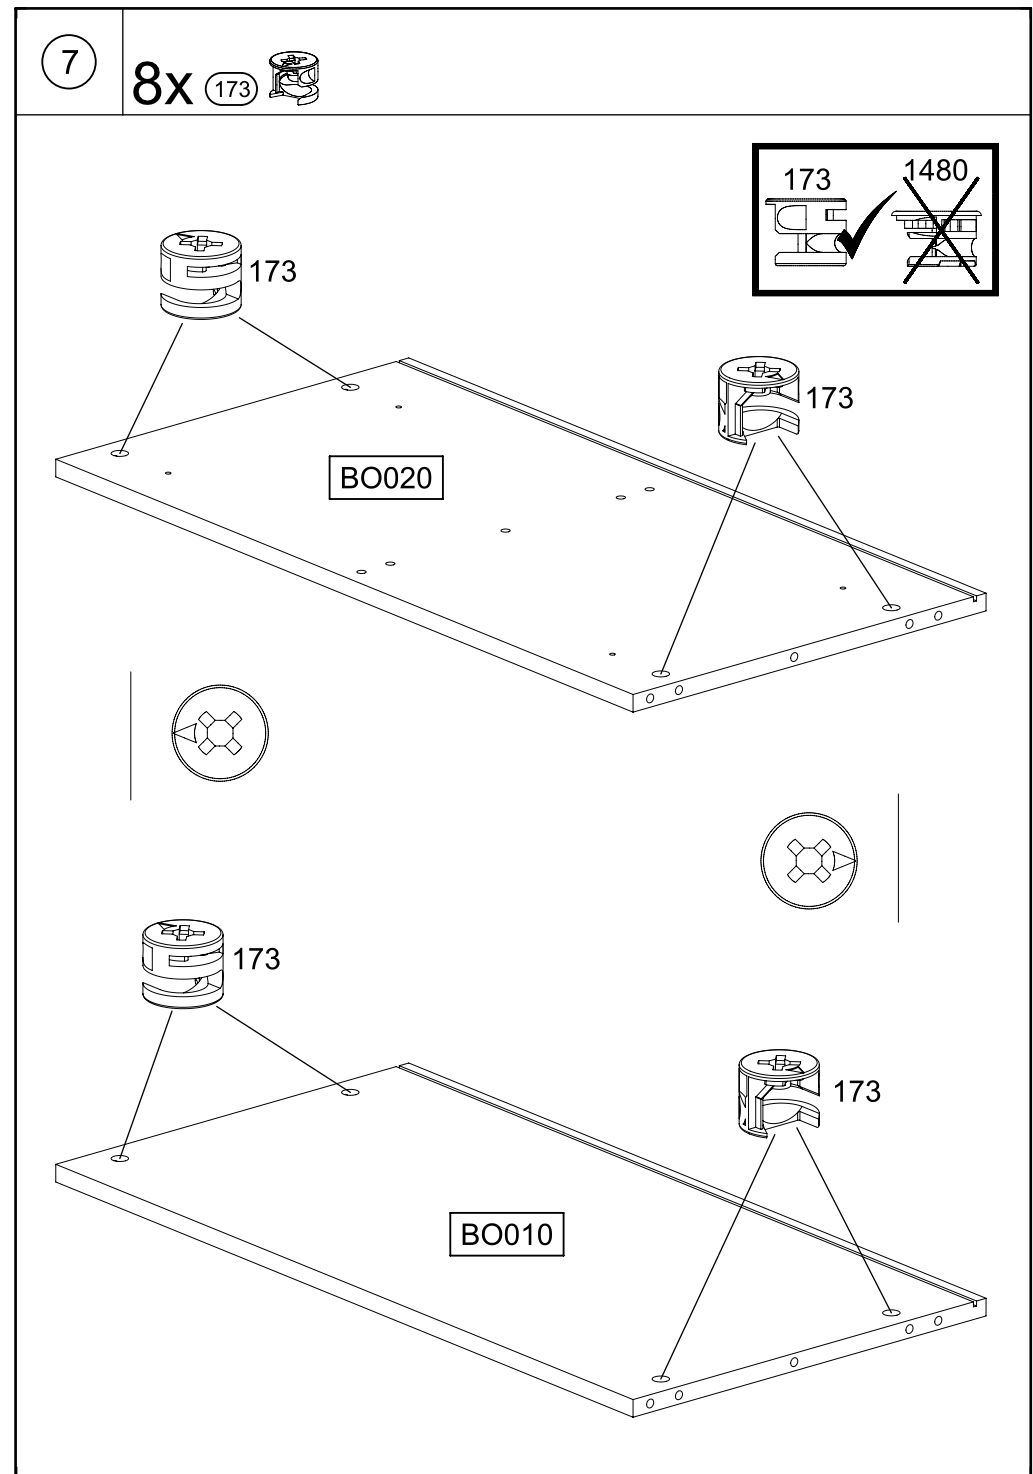
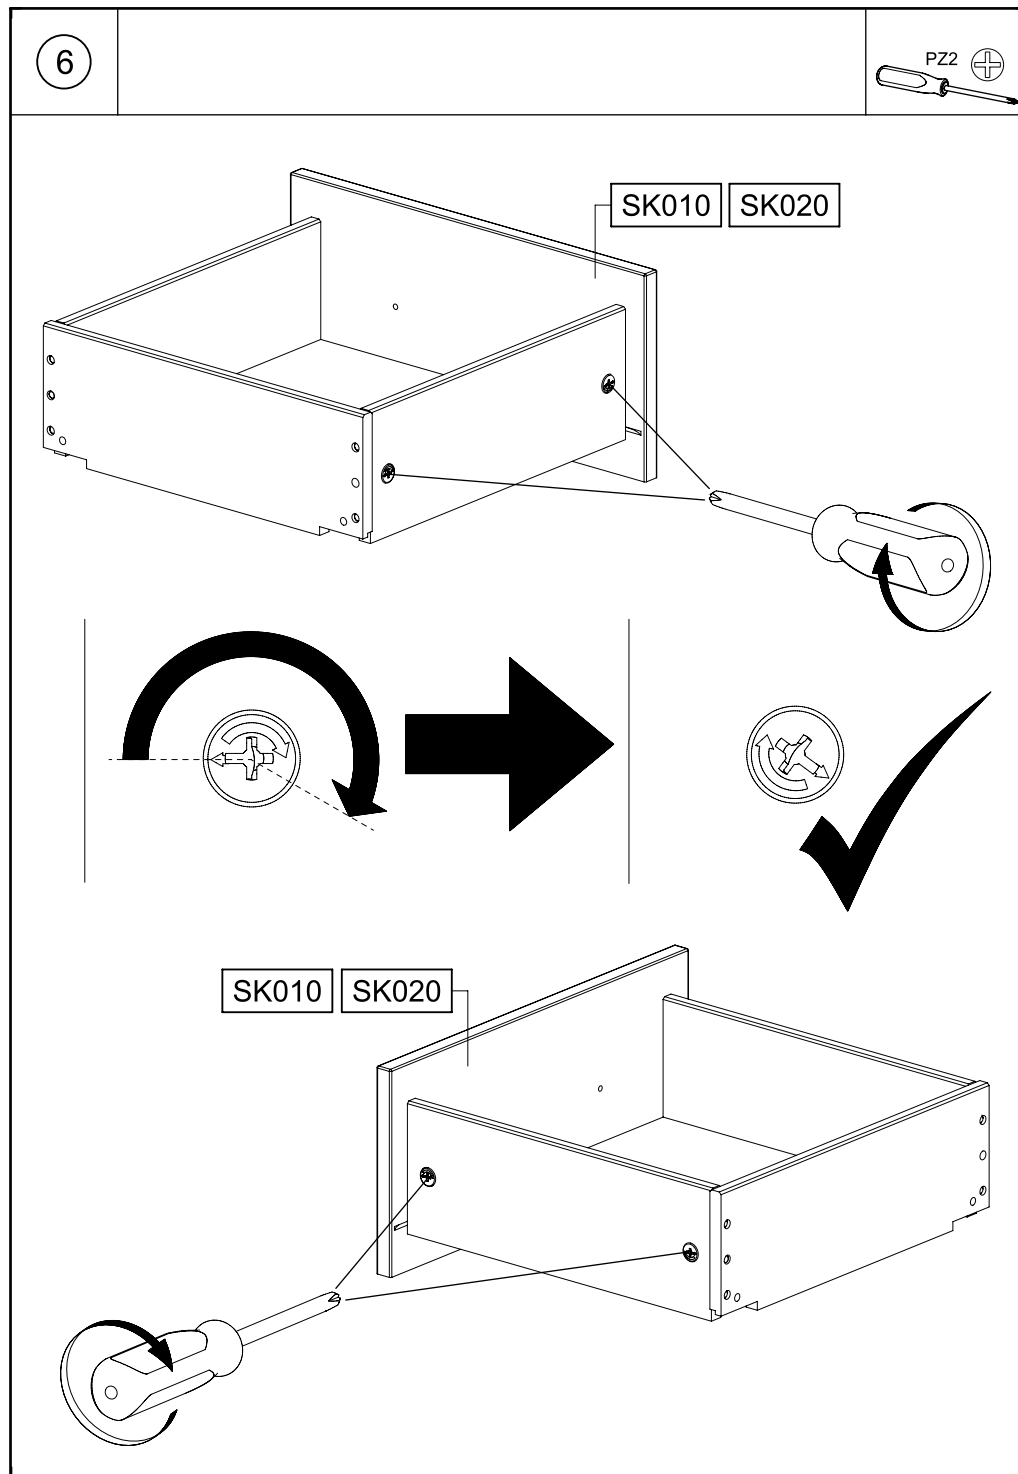


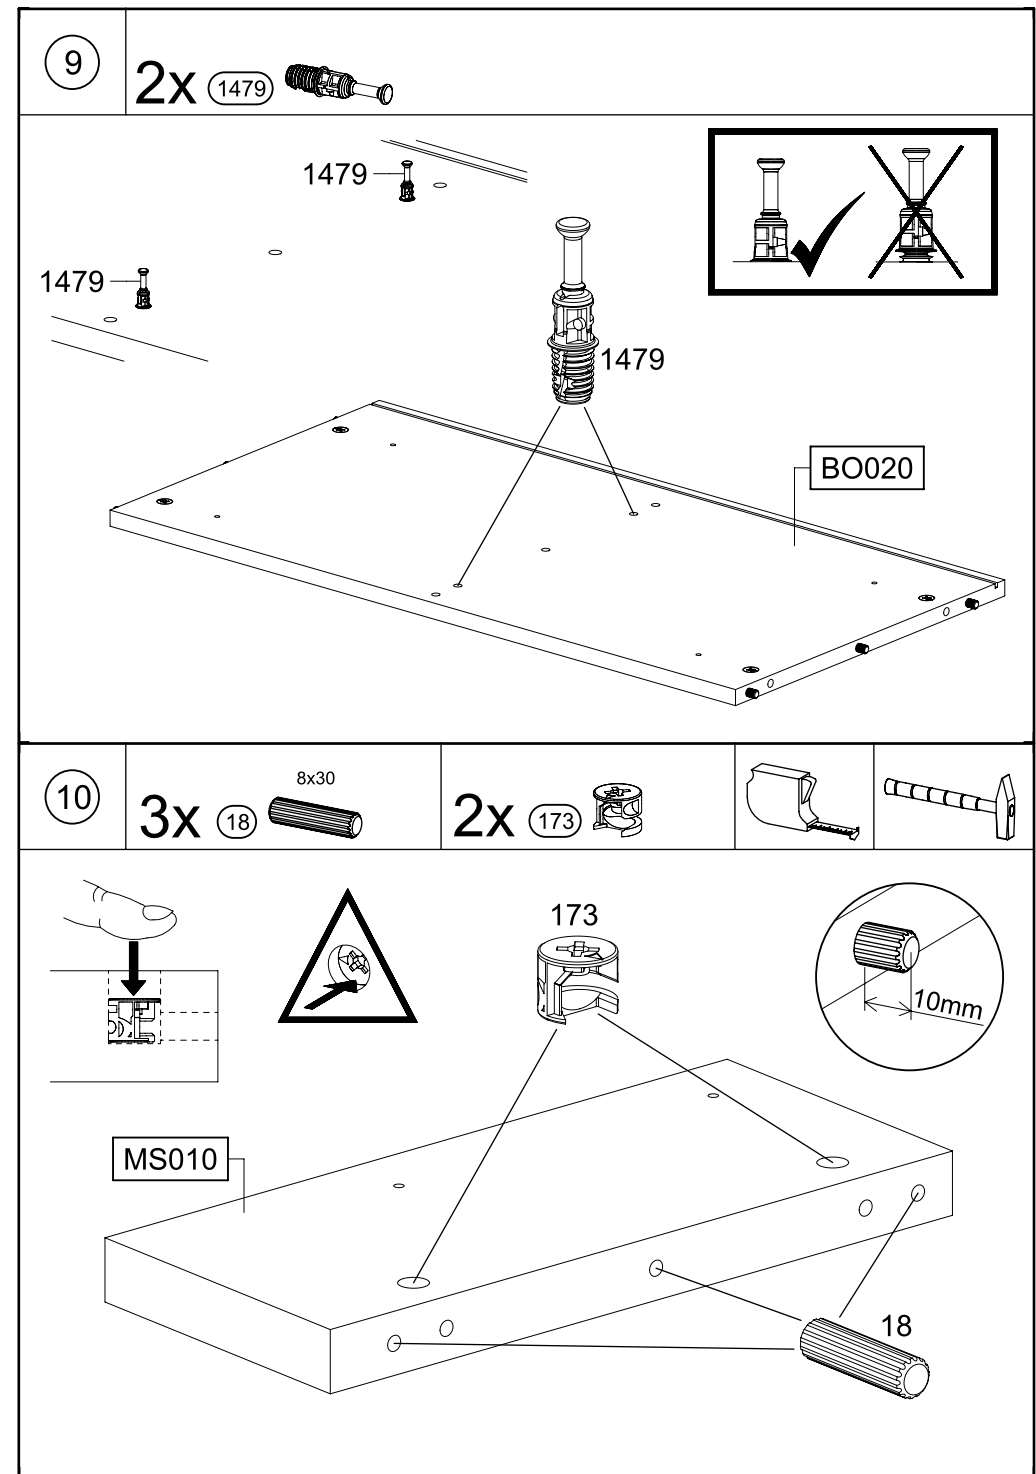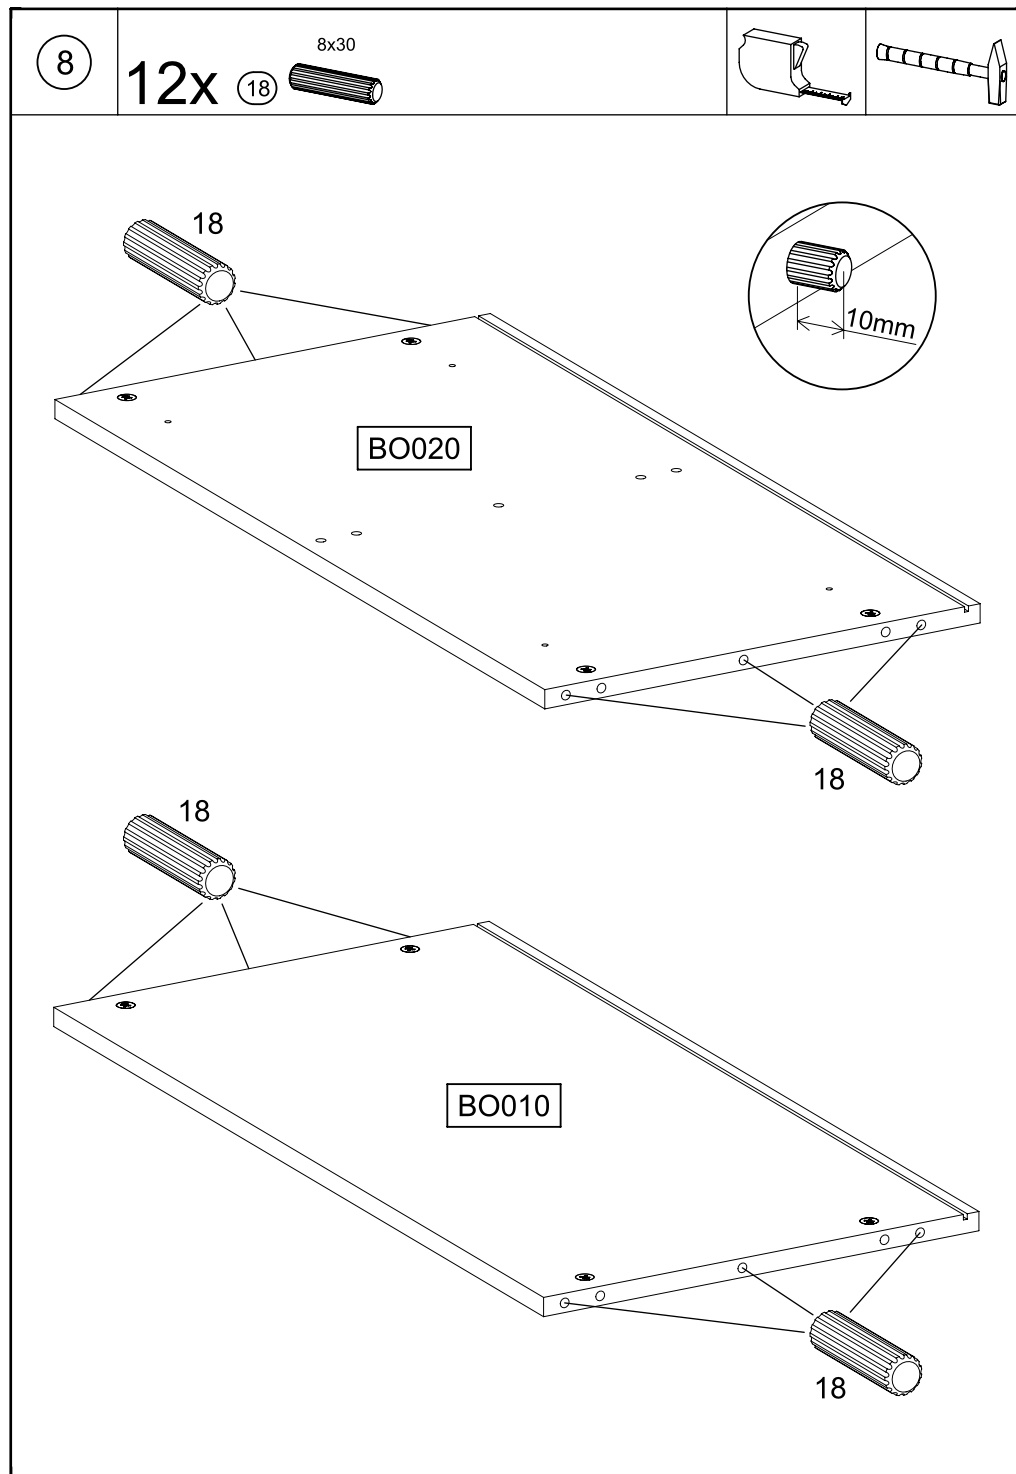

11

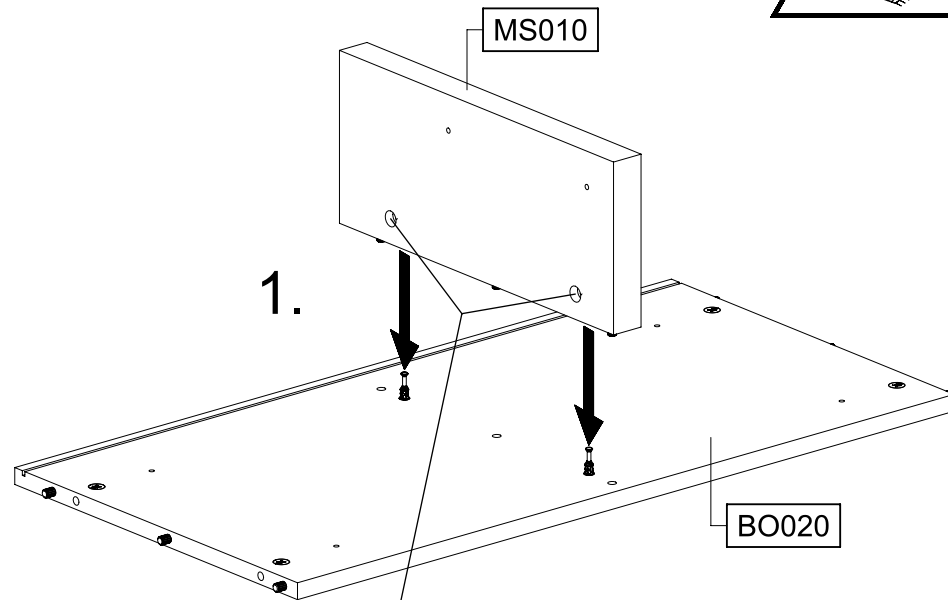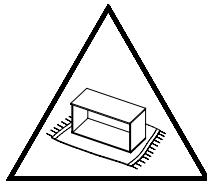





2.

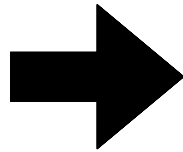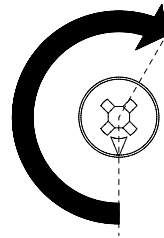



12

8x 1479

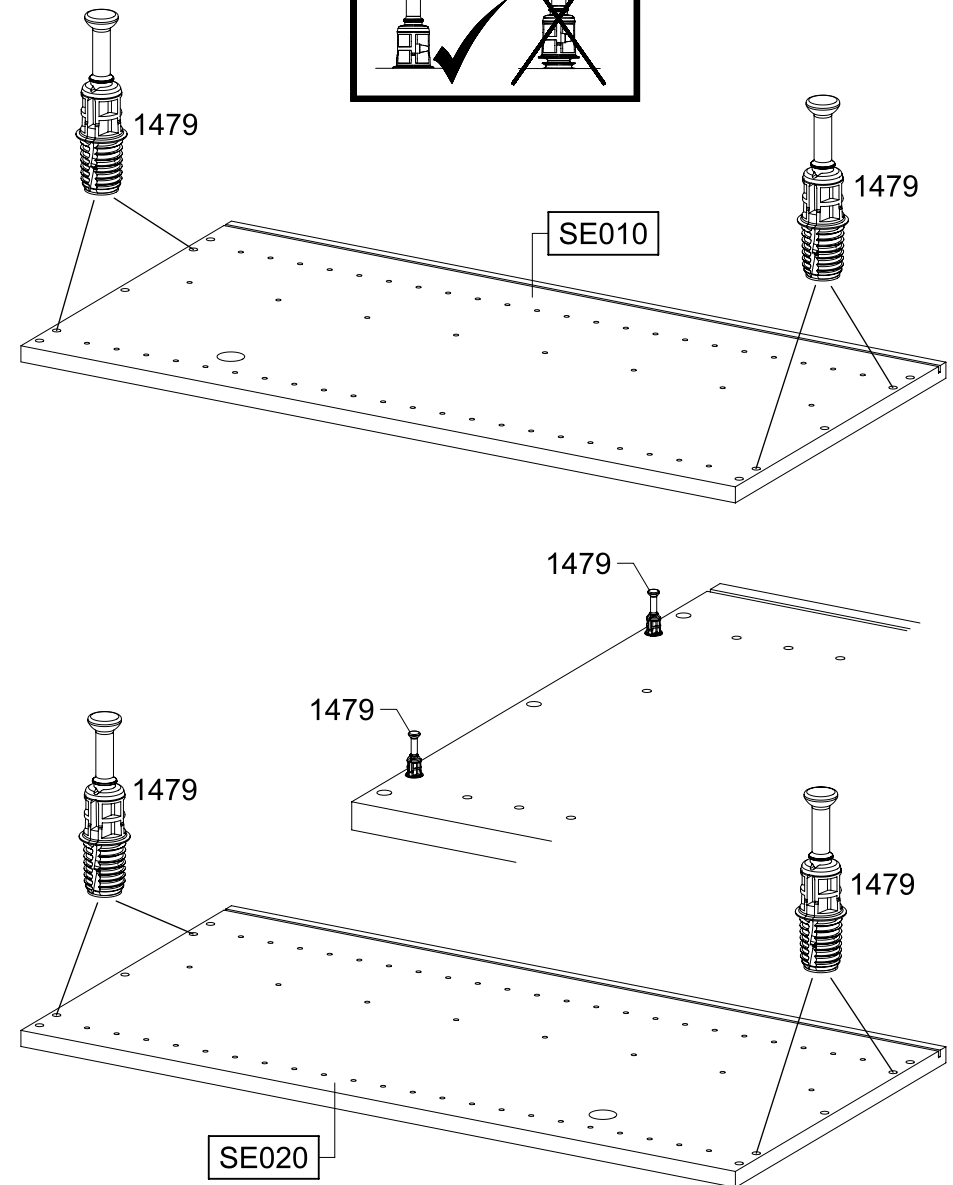
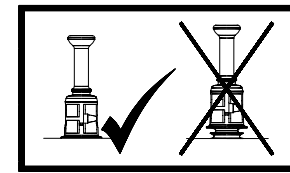


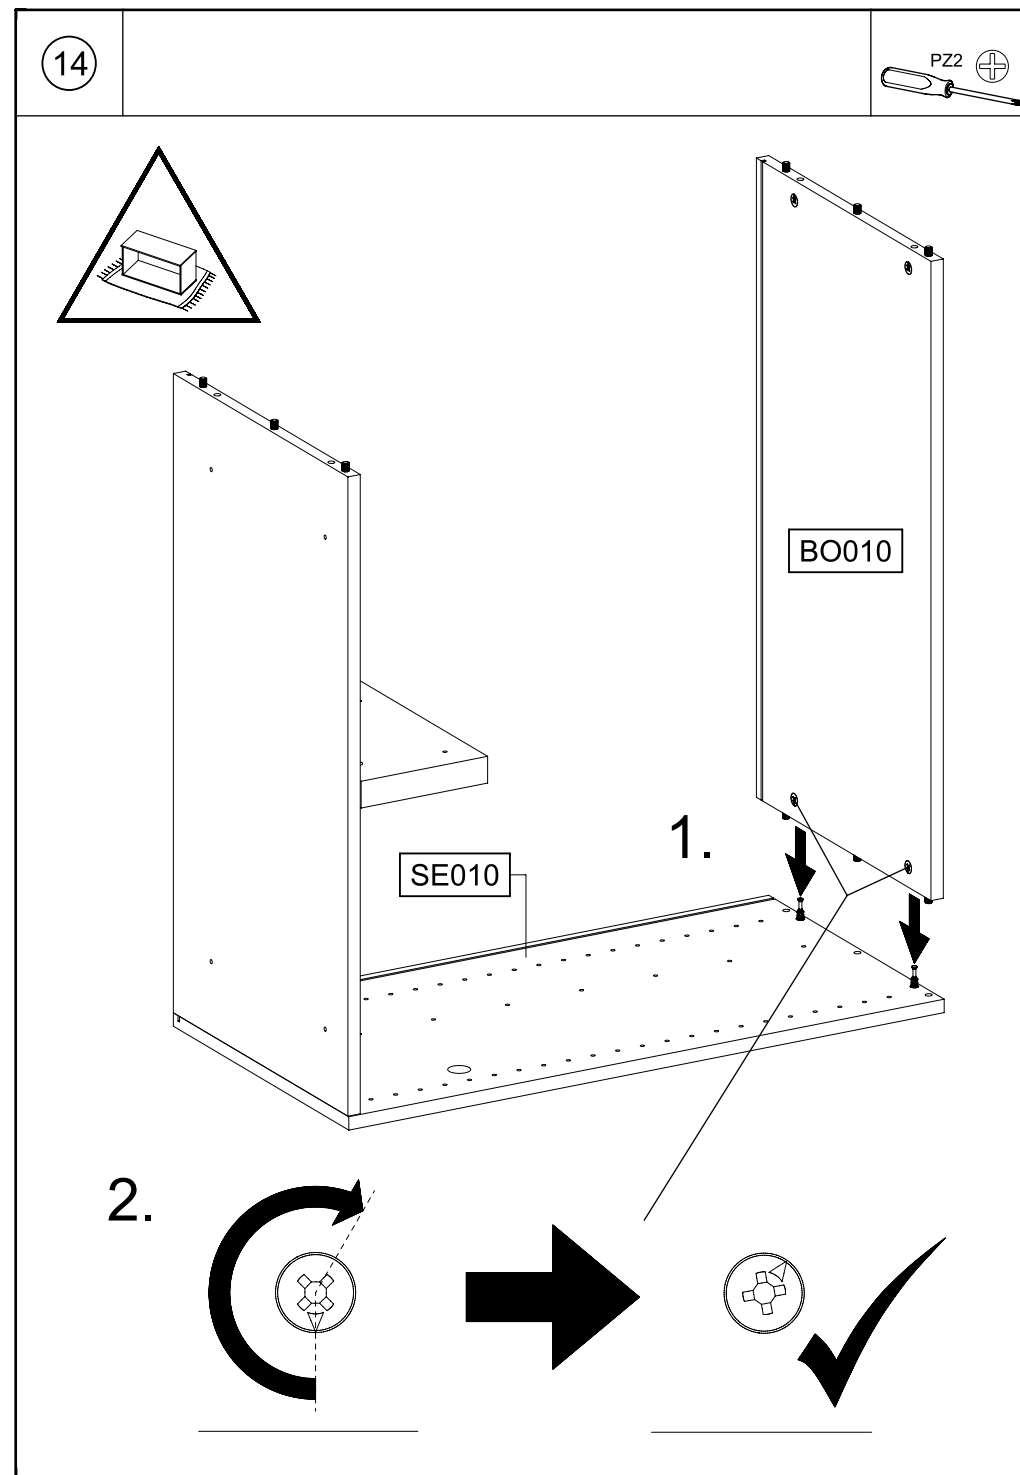
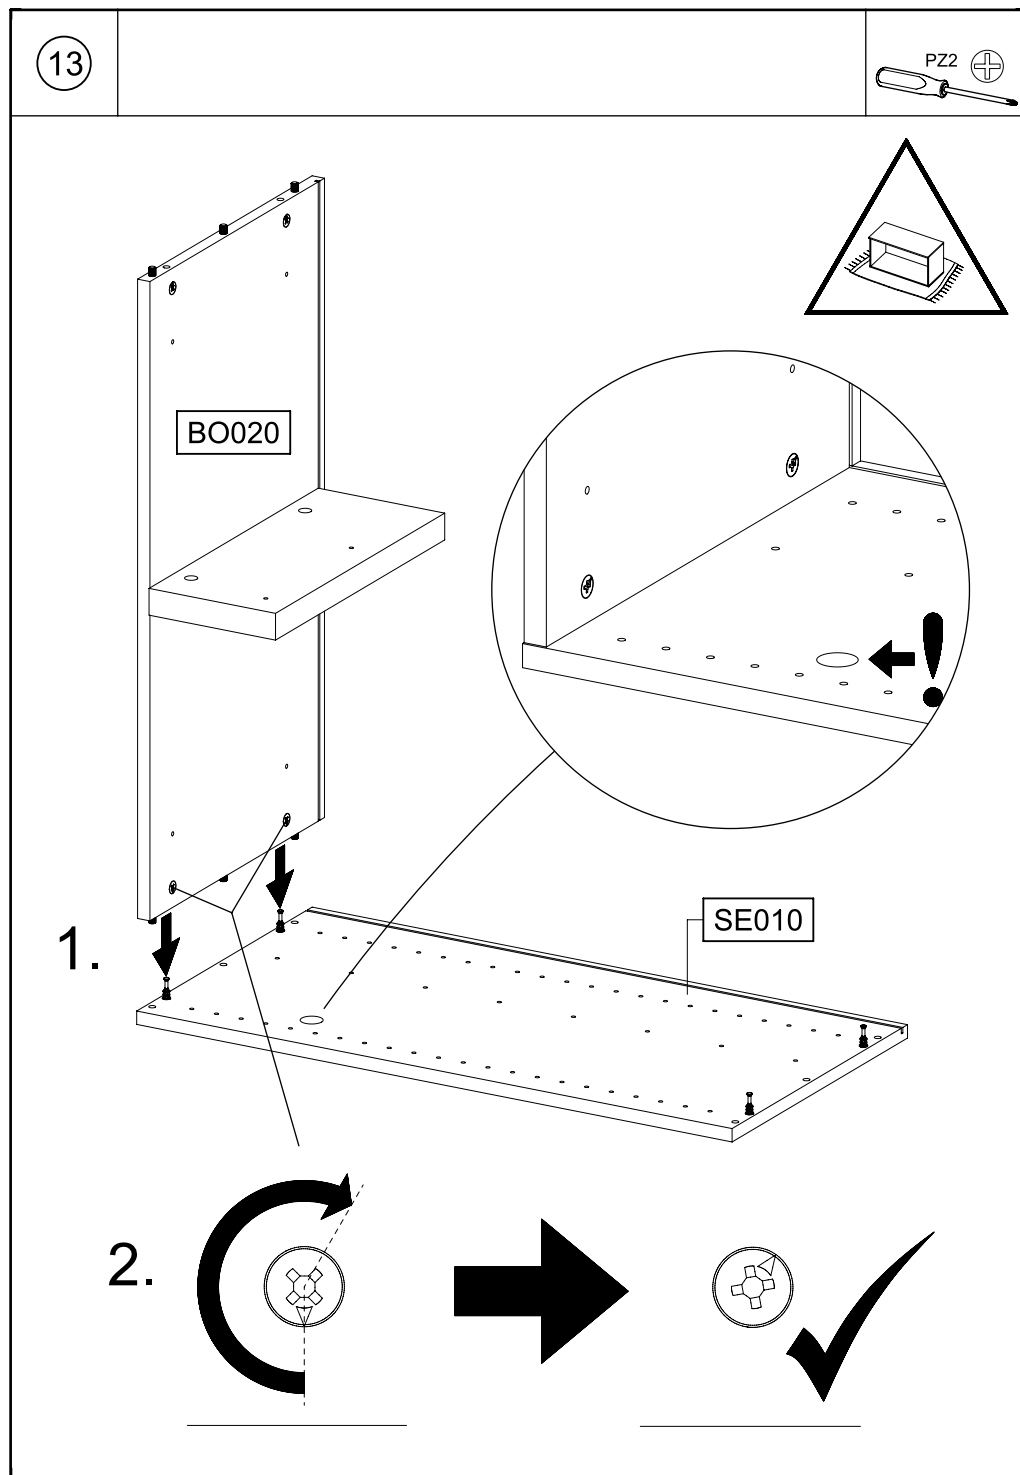


15

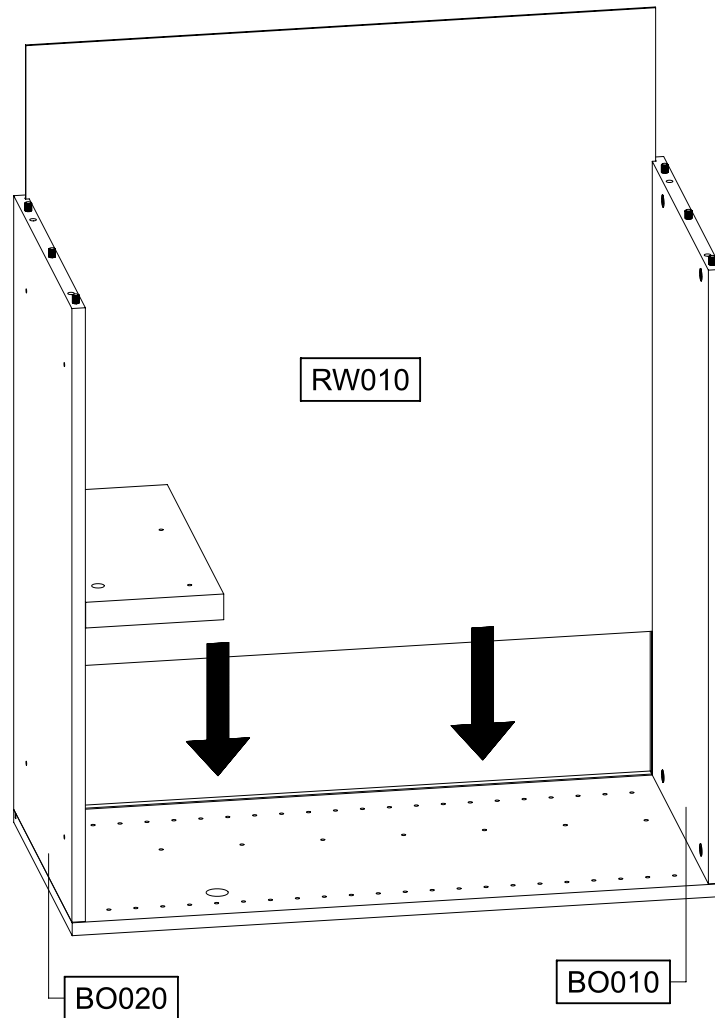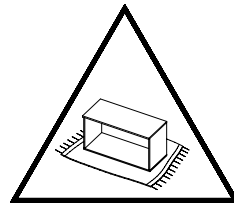


16

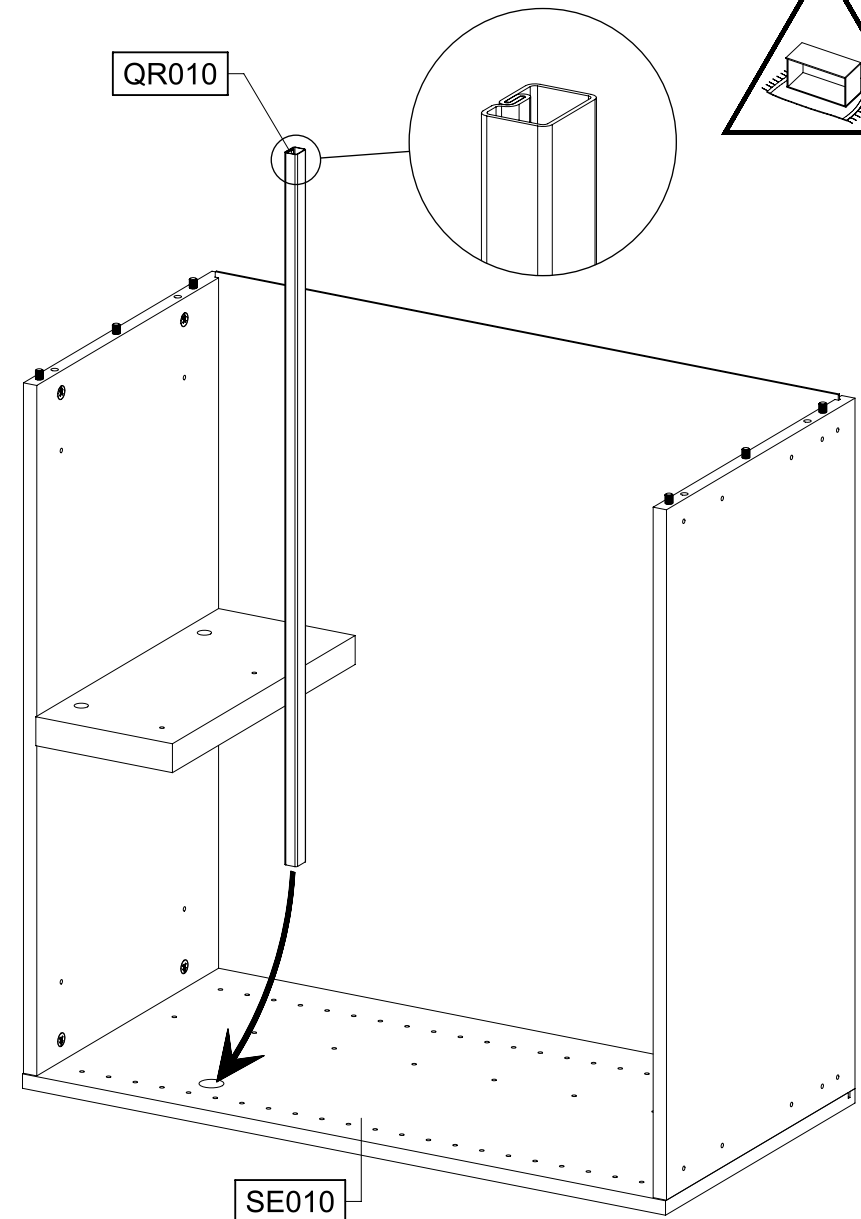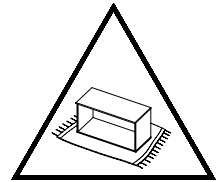


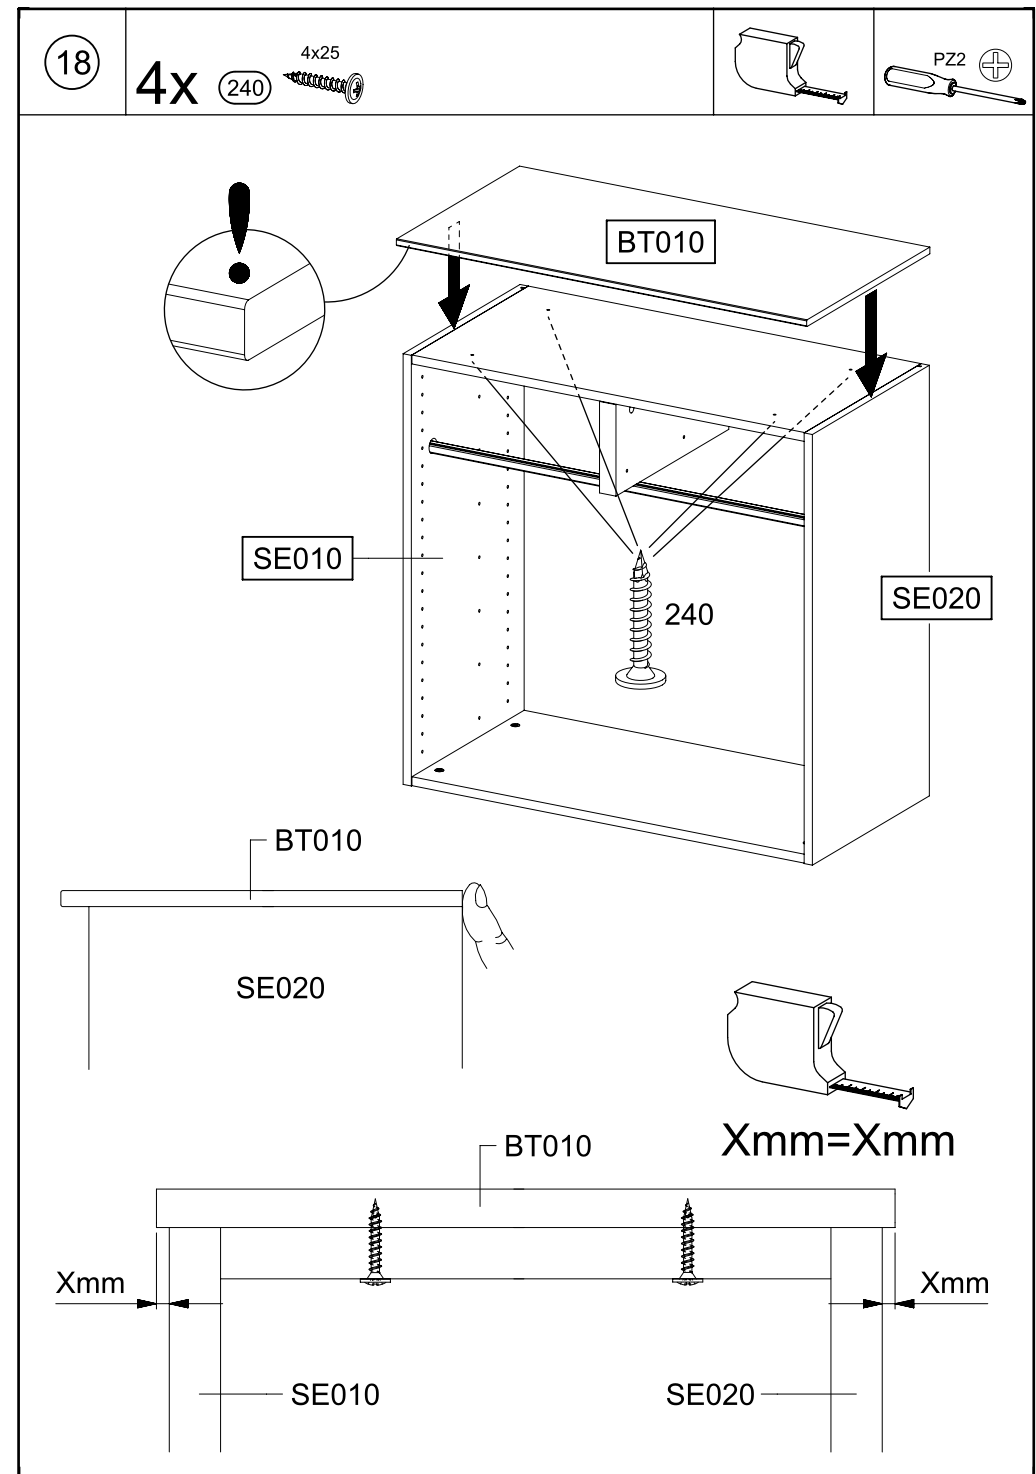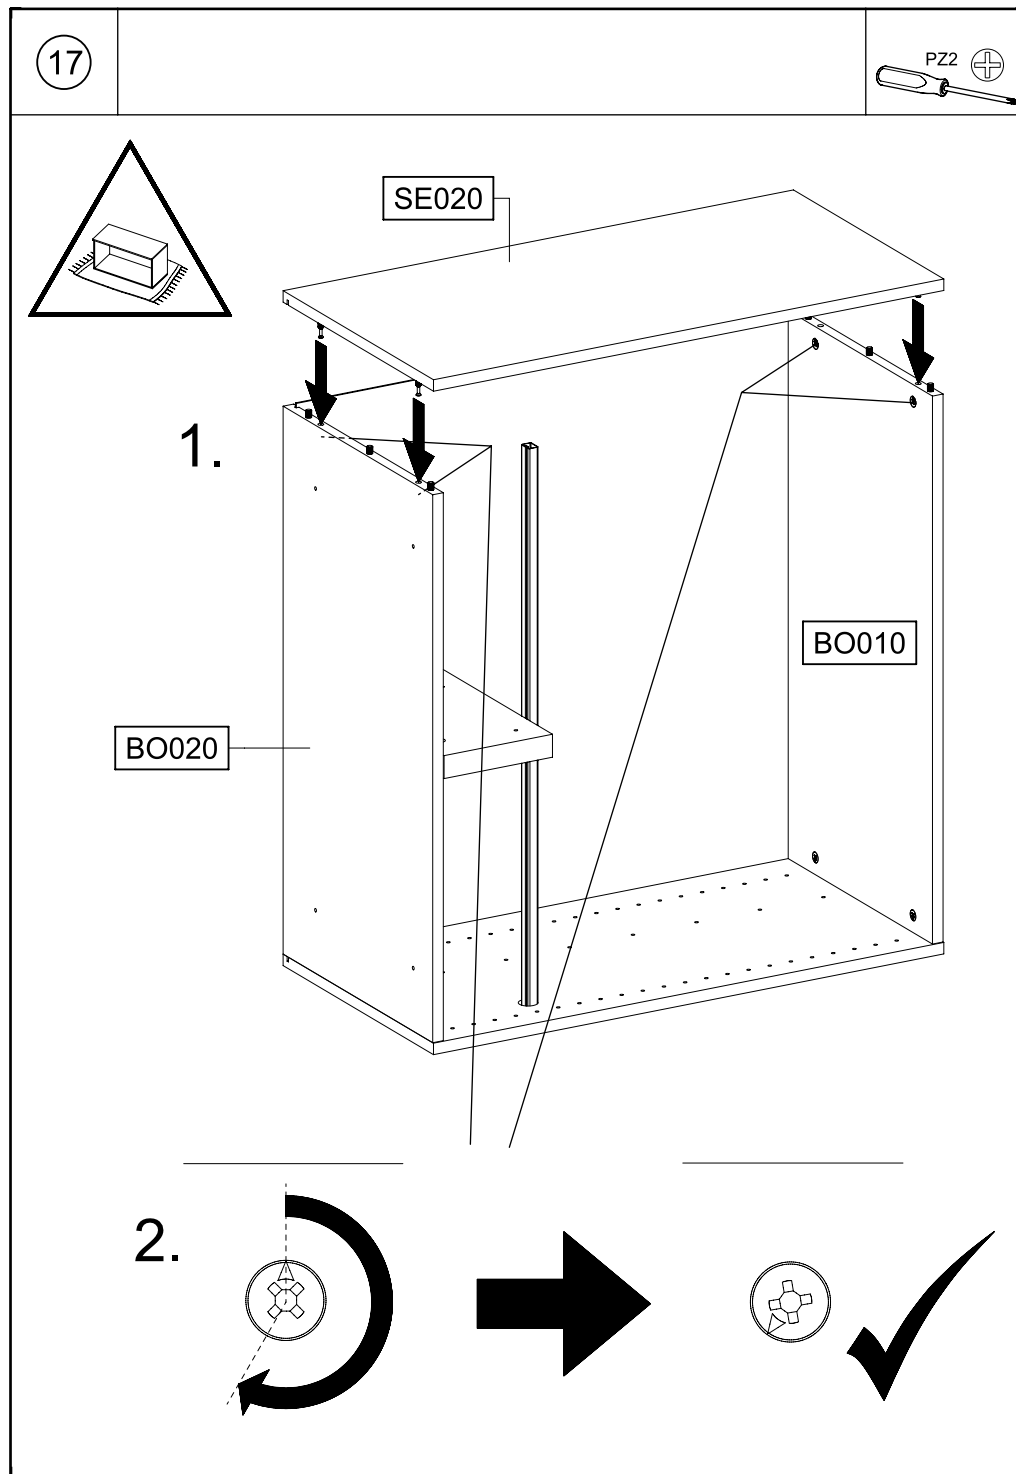


19




1207



1481

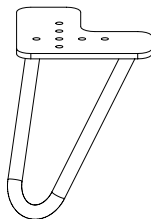


1345

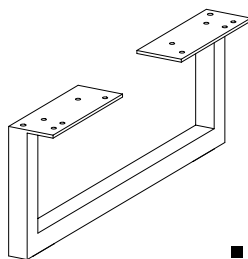




1348

...

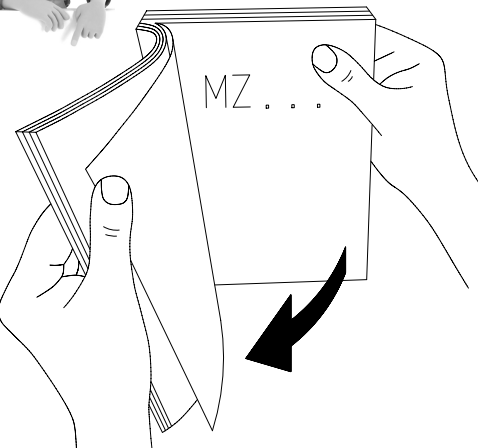


20

4x 45

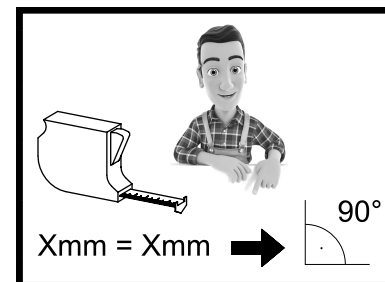



1.

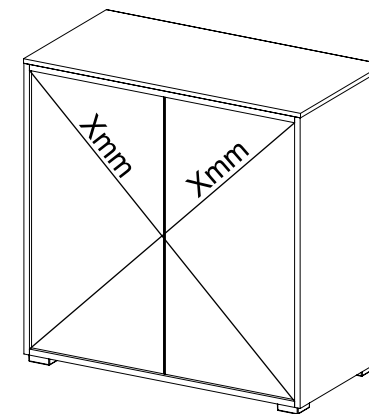

2.




45


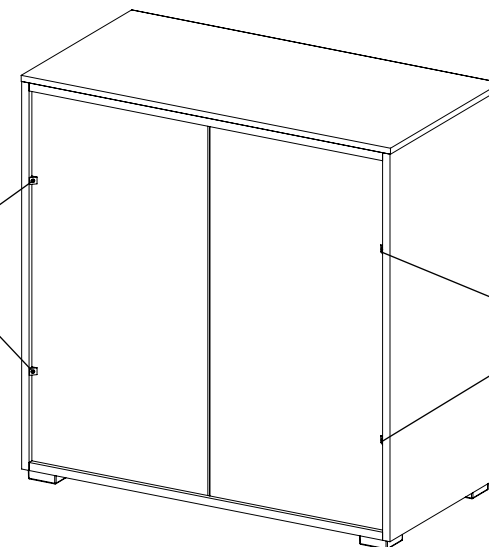


45

2.

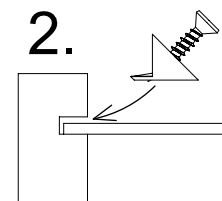

3.

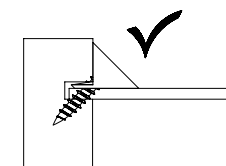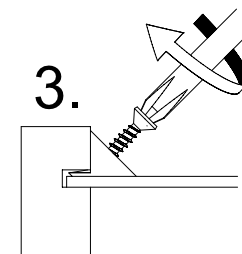






21

2x

1091






SCAN ME

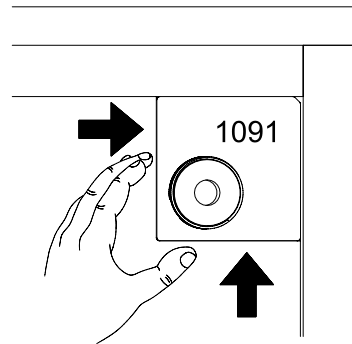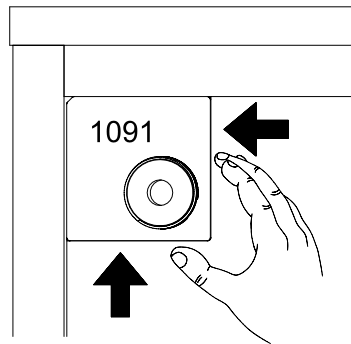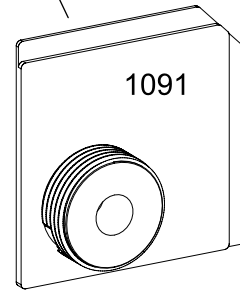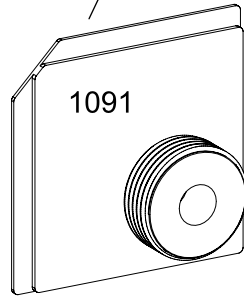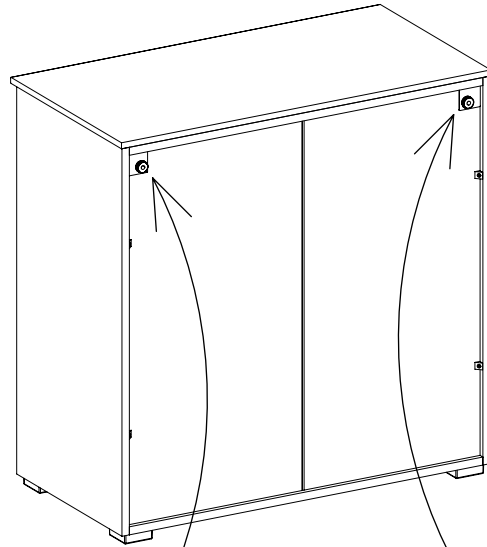

22



Ø6mm

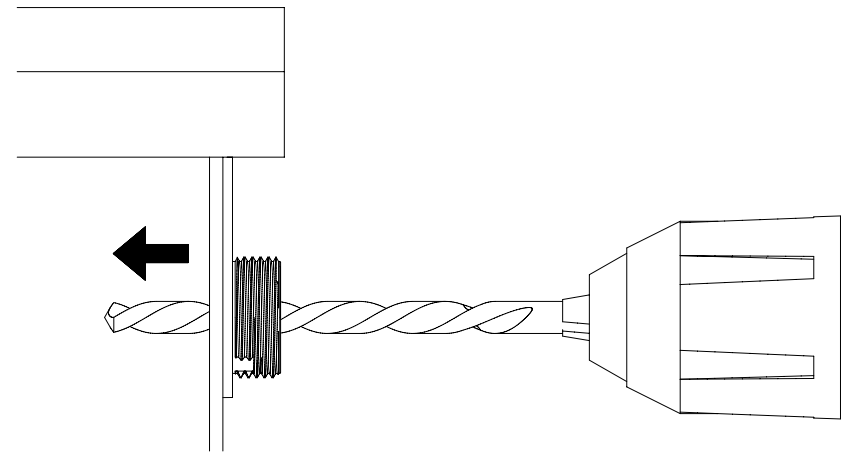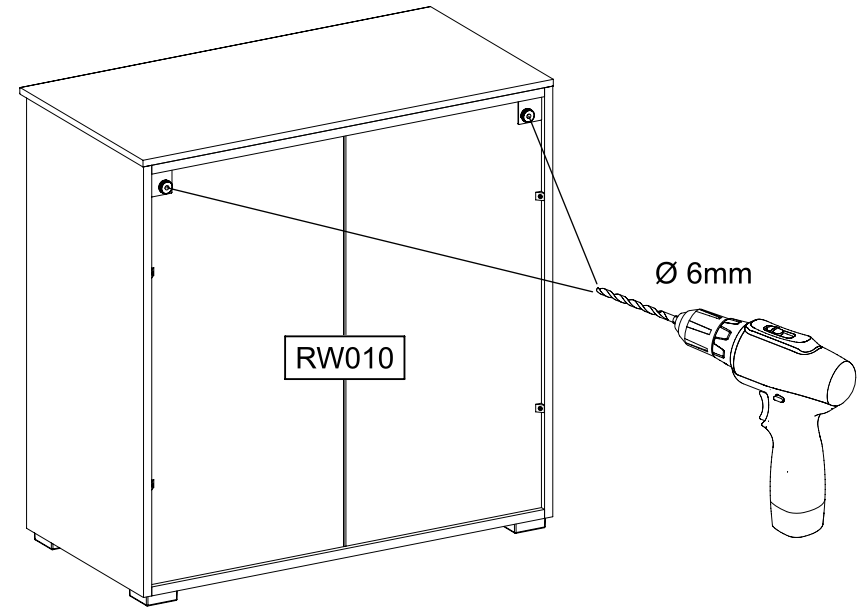

23

Diagram 23 illustrates the final step of the assembly process. A large curved arrow indicates that the cabinet should be rotated to the right. The cabinet is shown in its final position, with a level placed on top to ensure it is straight. The cabinet has a perforated back panel and a solid front panel. The assembly is shown in a corner, with the floor and wall lines visible.

24

2x 1093

2x 1147

6,0x90

PZ2



1147



1093

1147

1093




M3097

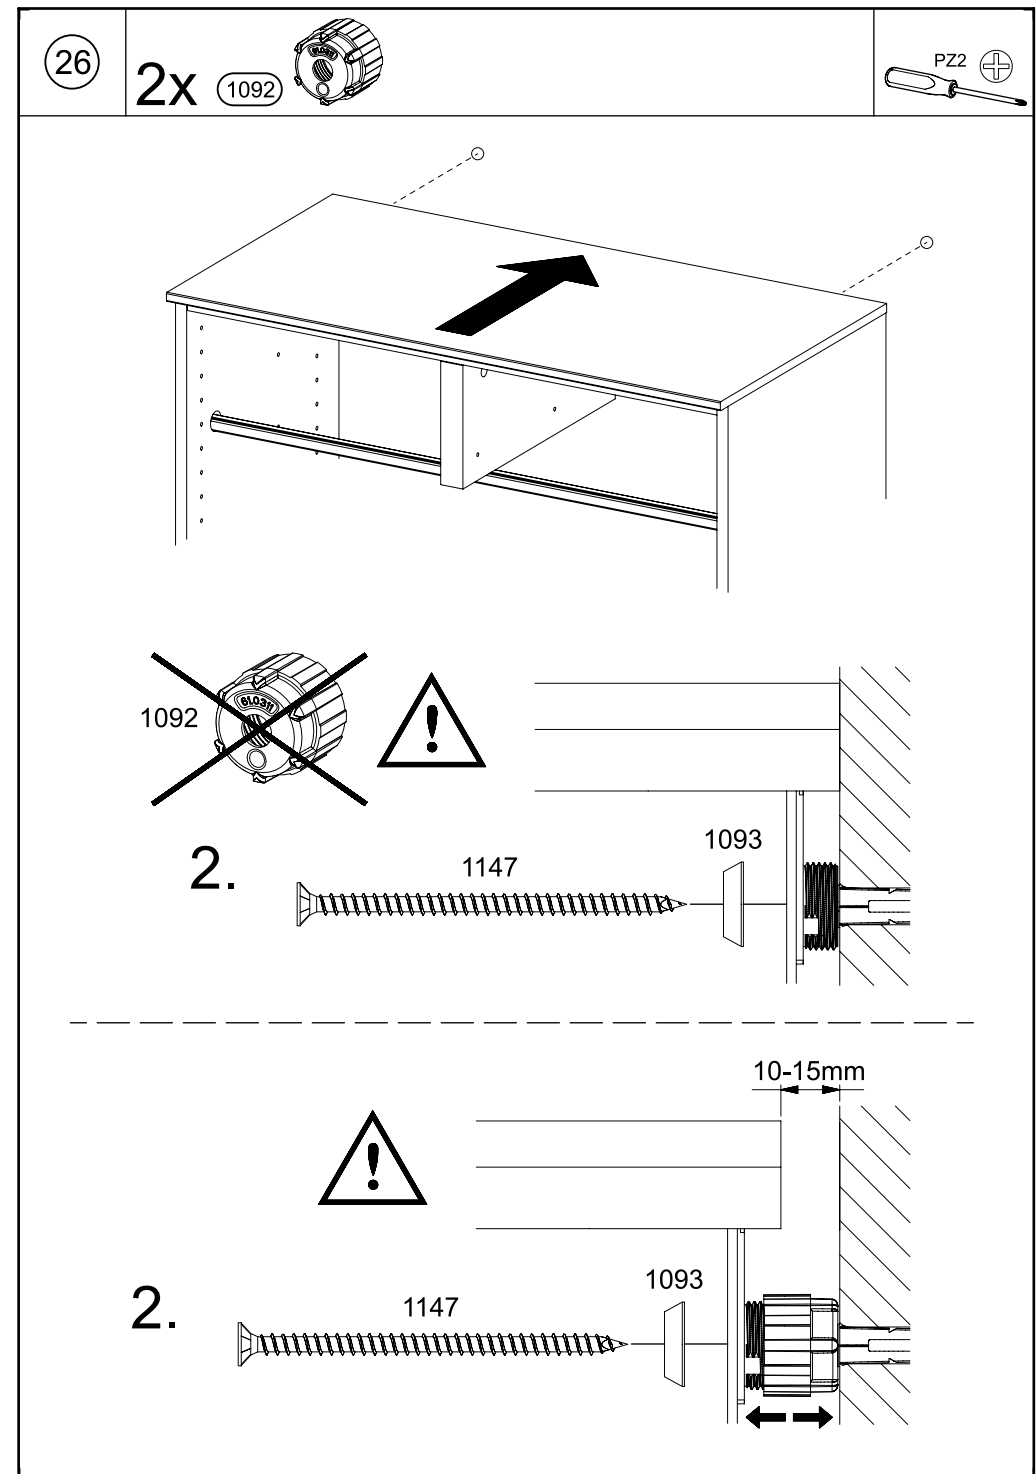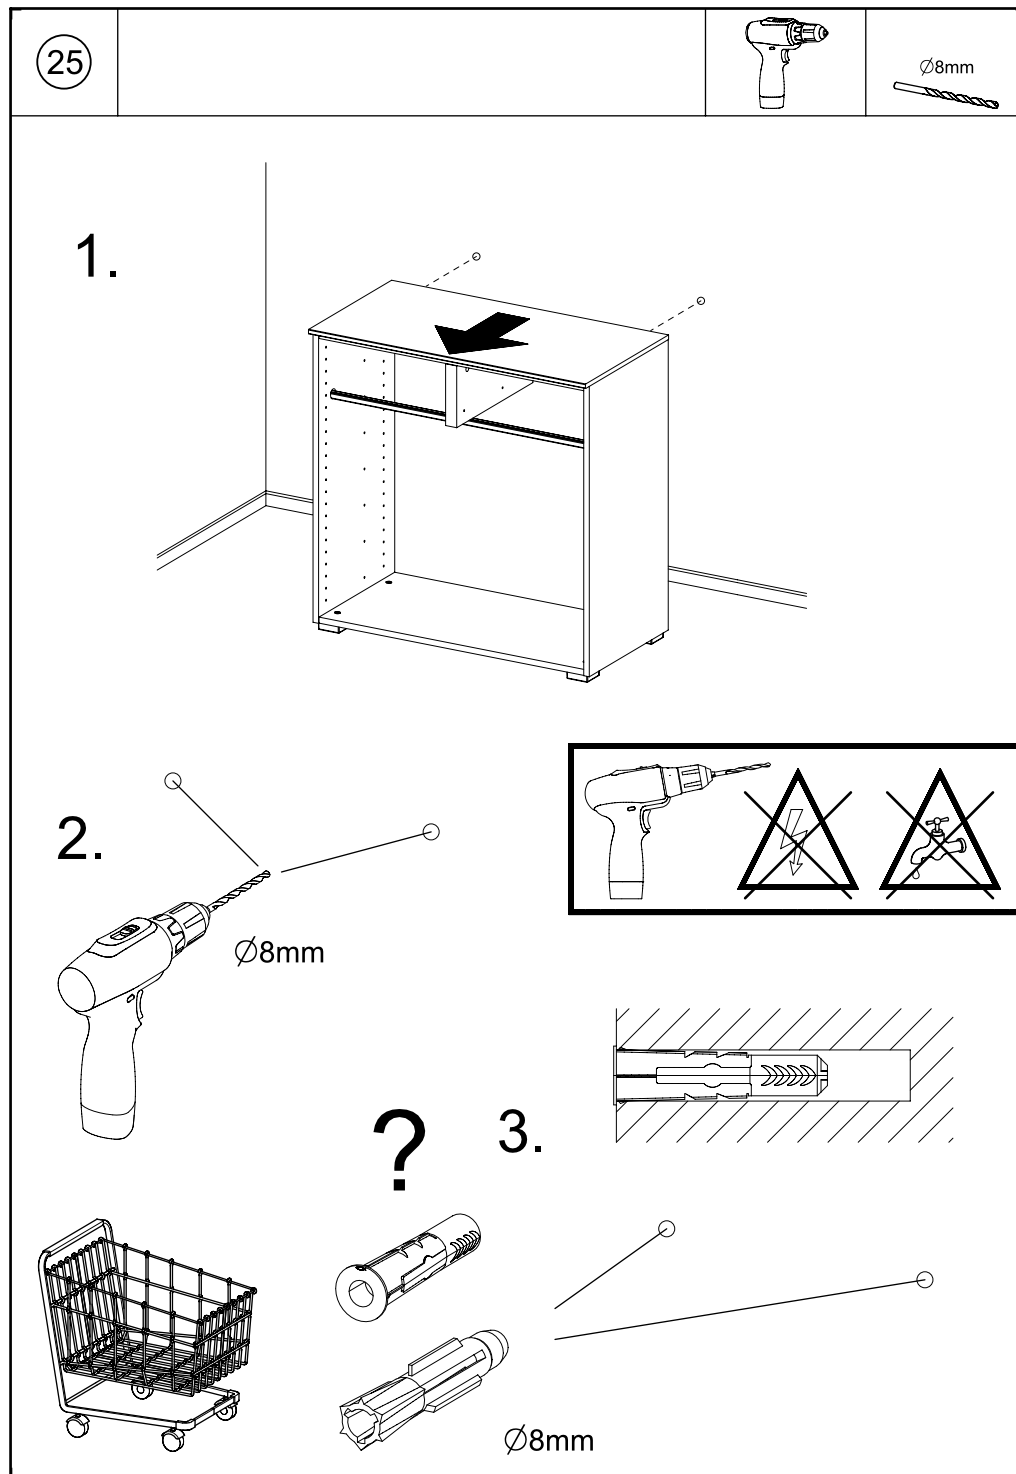

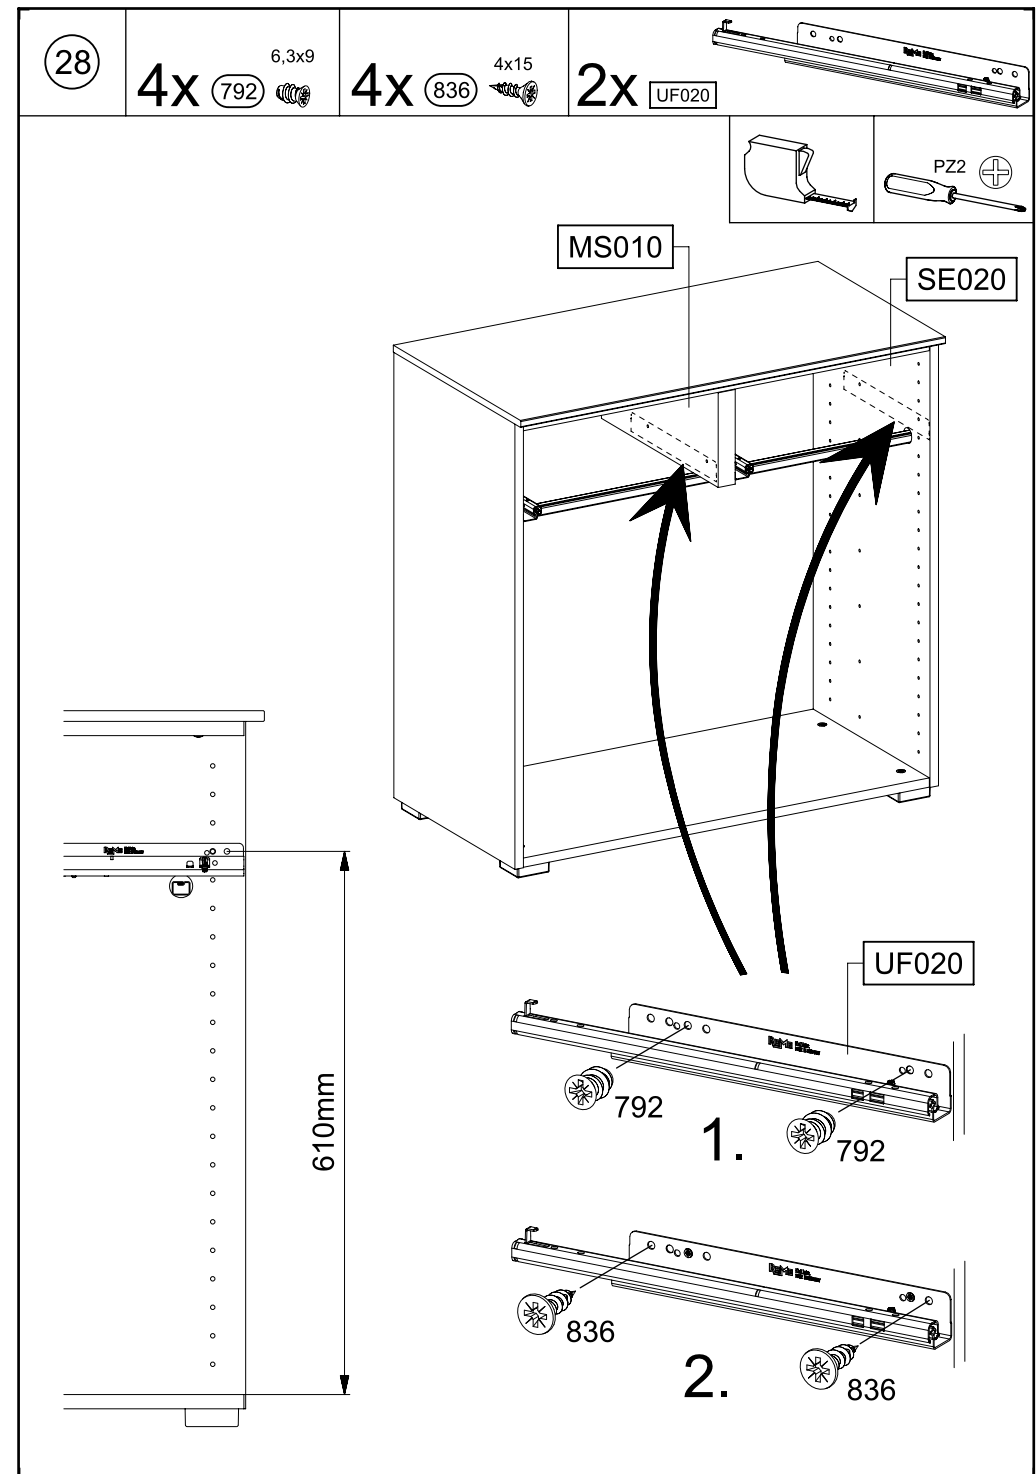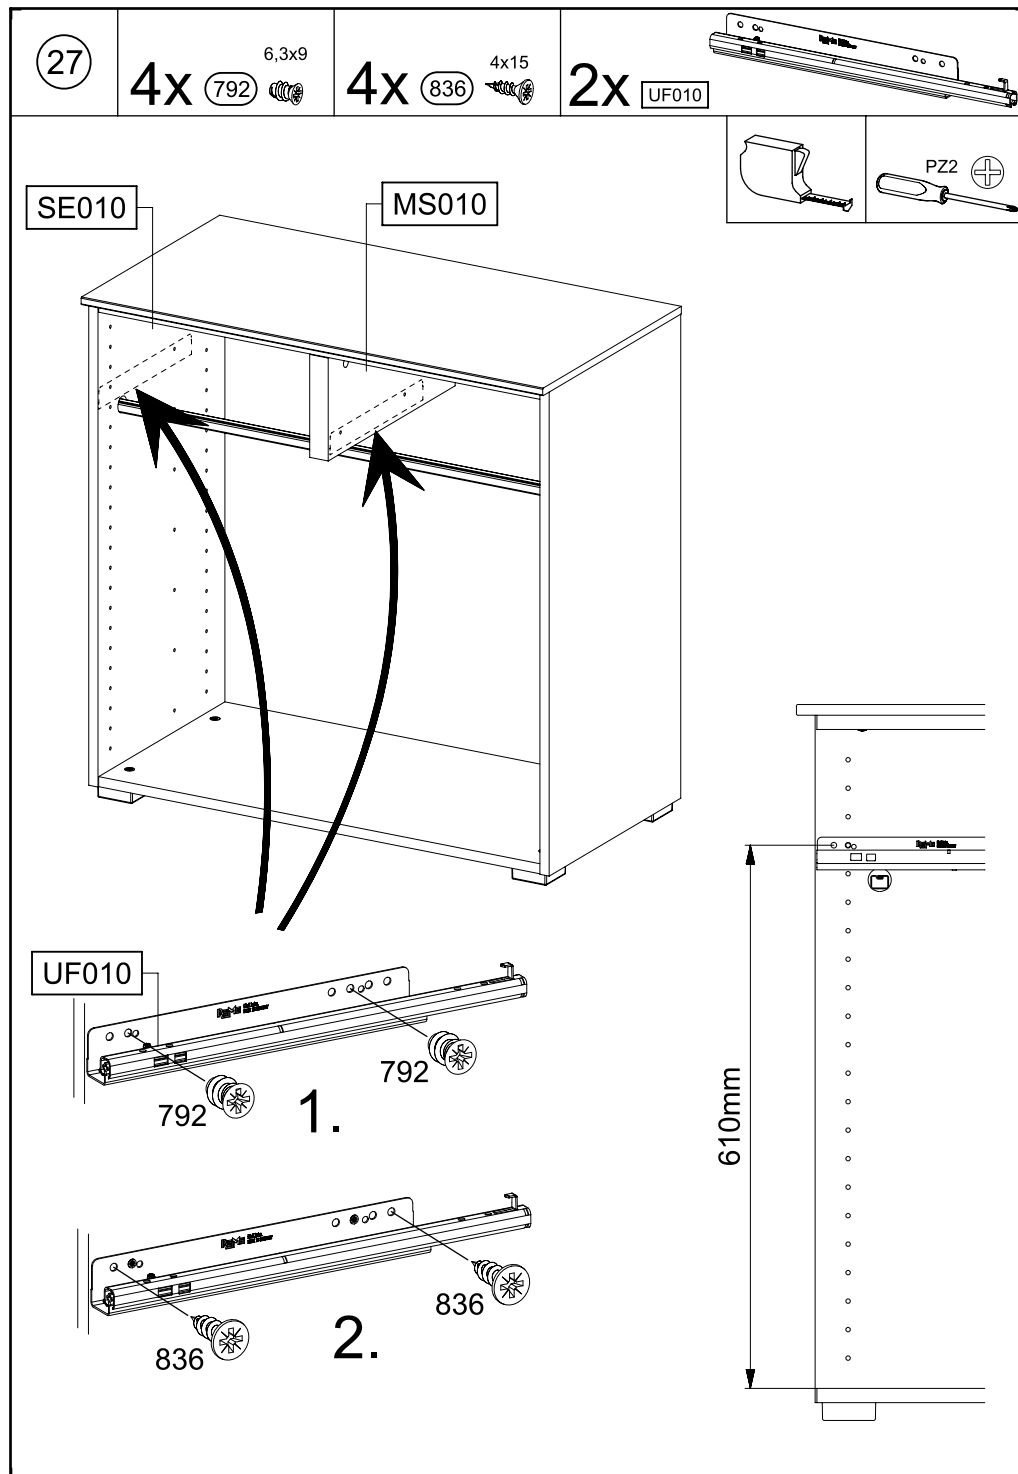

29


2x 1415



SCAN ME

1415


SE010

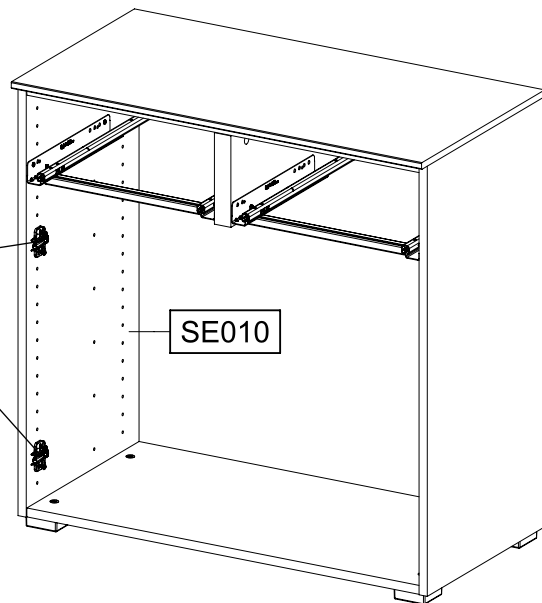

482mm


98mm

1.

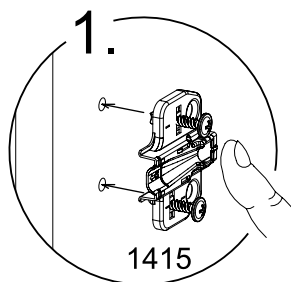

1415




2.

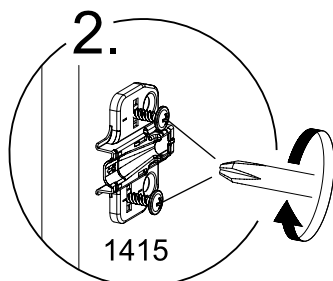

1415


30

2x 1415




1415

SE020

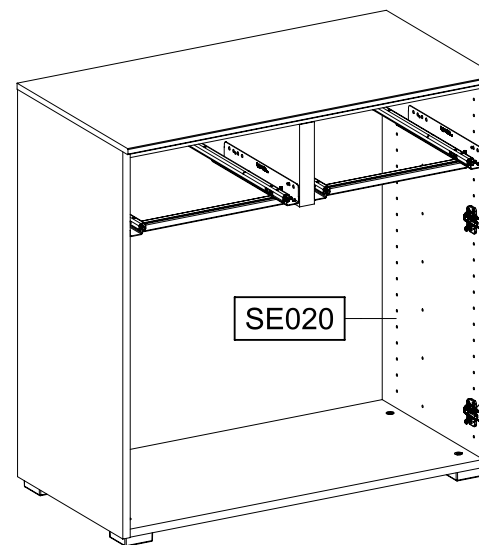


1.

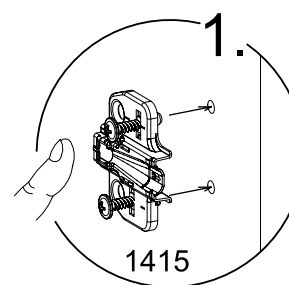

1415

2.

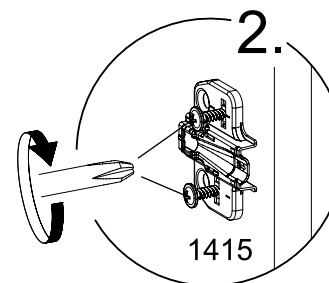

1415

482mm

98mm

31


4x 1089



2.

WA010


1.

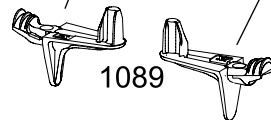


1089



1.

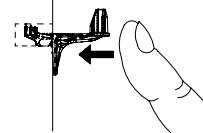


2.

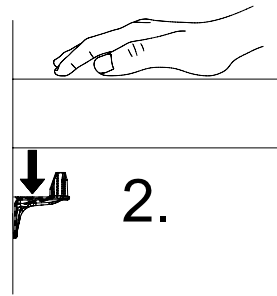


32

4x 852






852




852

SK020



SK010

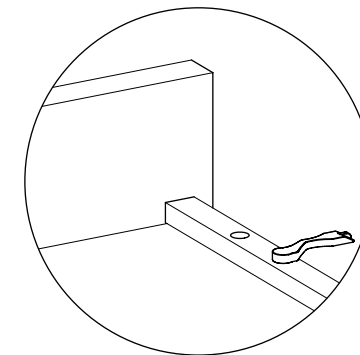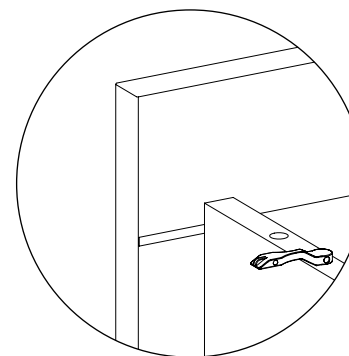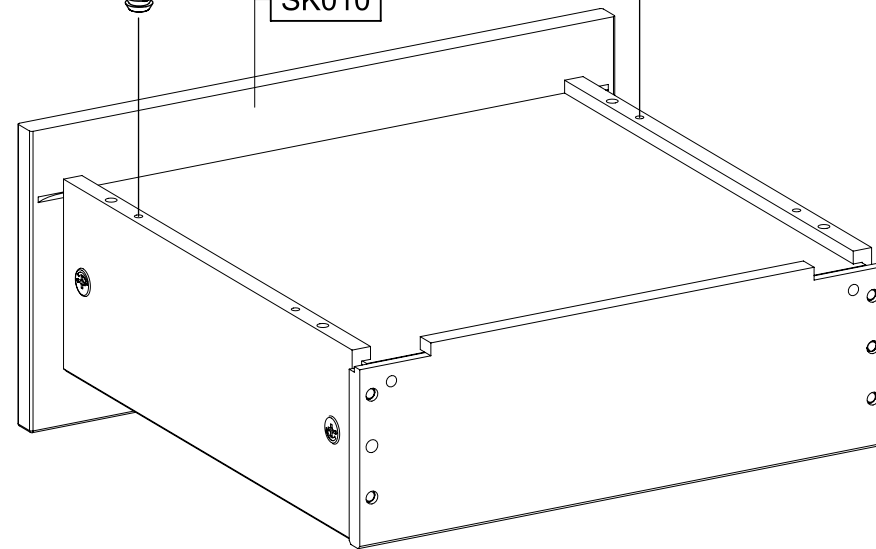

33


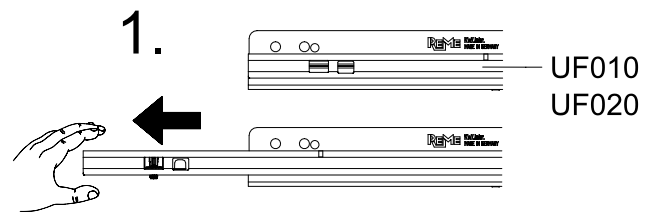


SK010 SK020


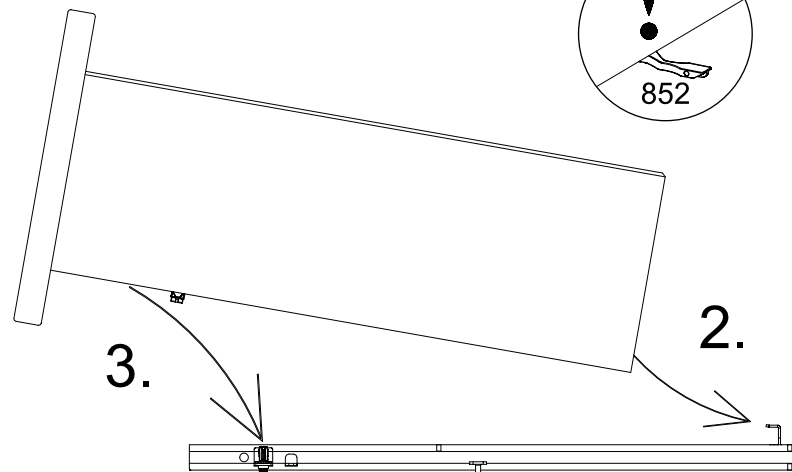
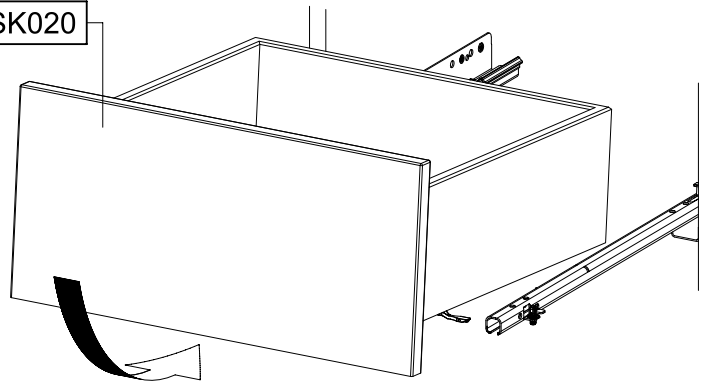


34





4x 1421



SCAN ME

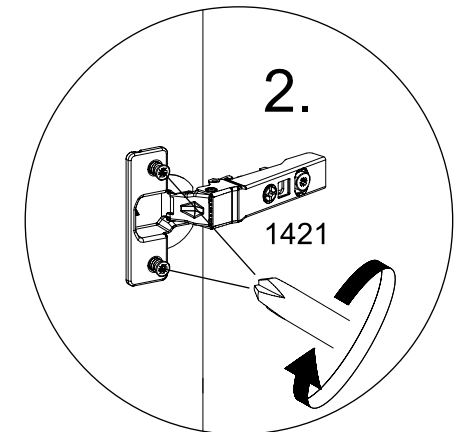
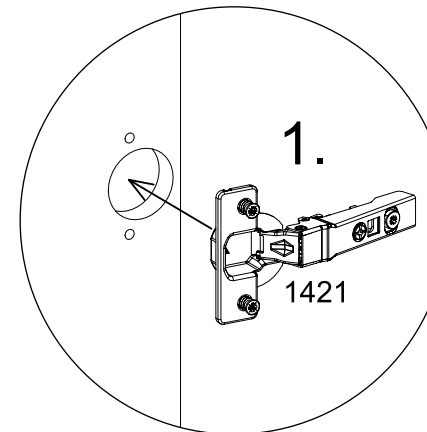
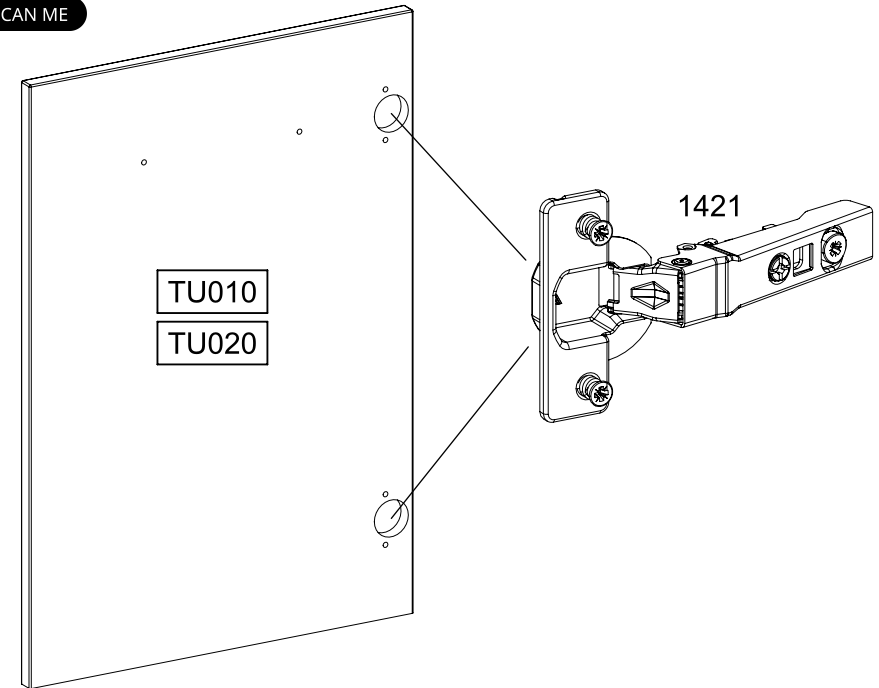


35

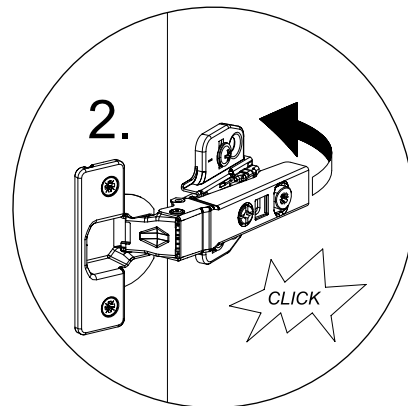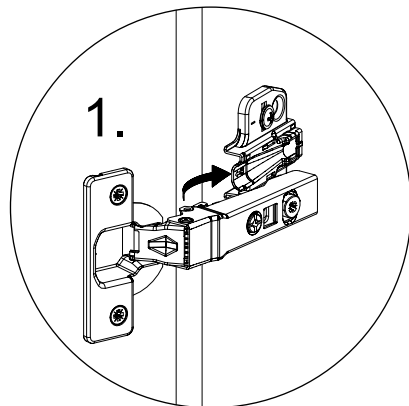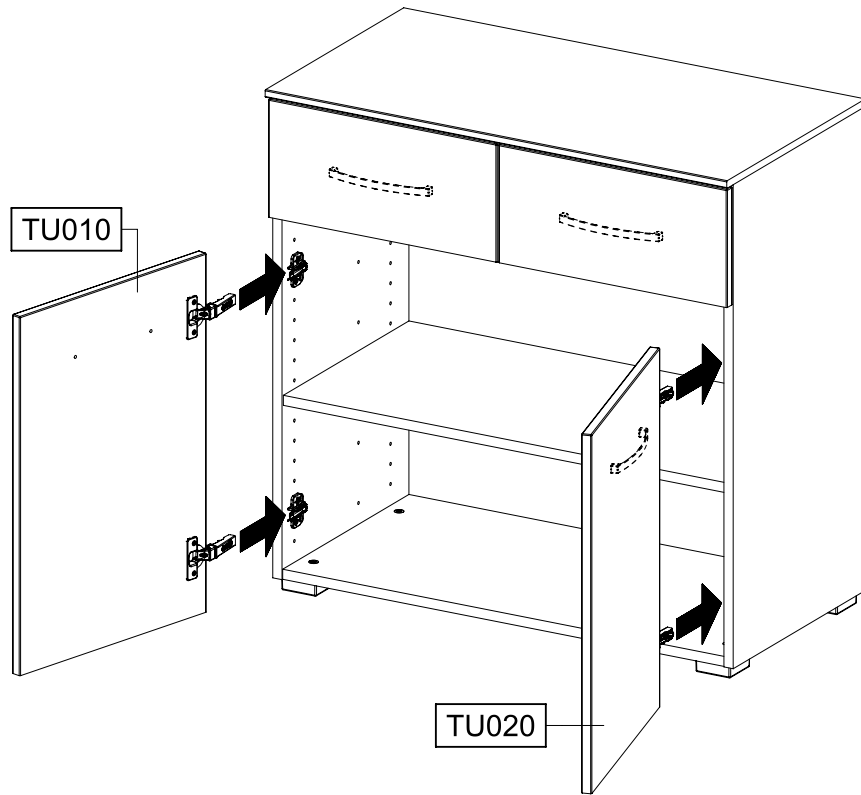

36



1x 391

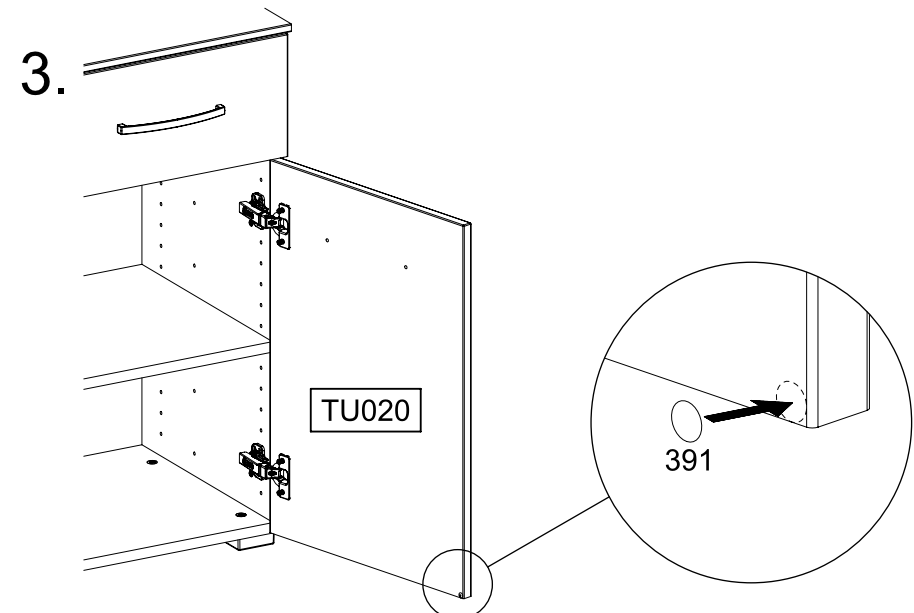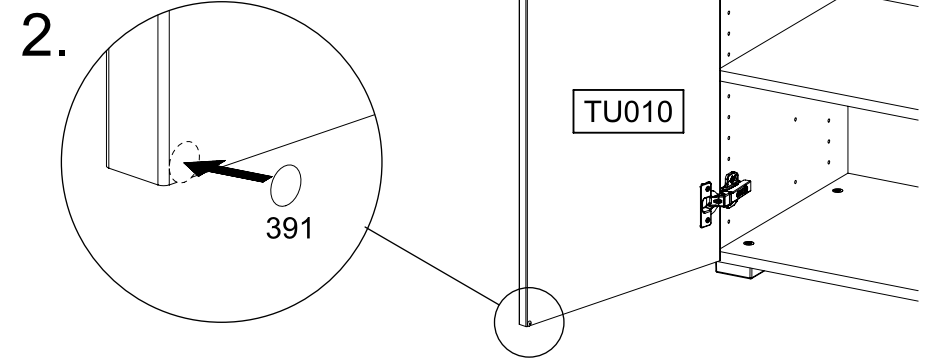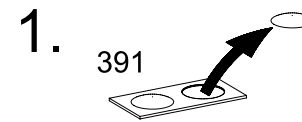

37




SCAN ME

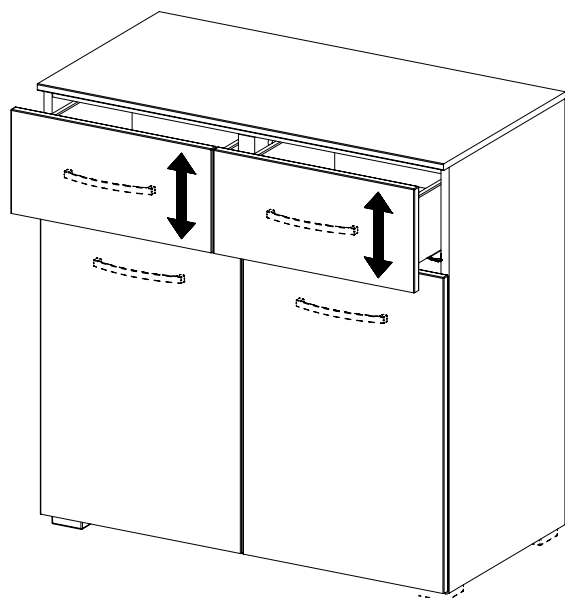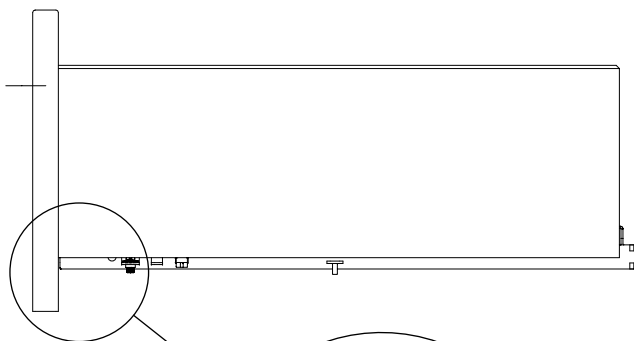
SK010
SK020

2.

852

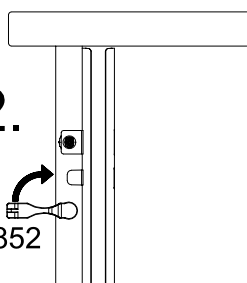


1.

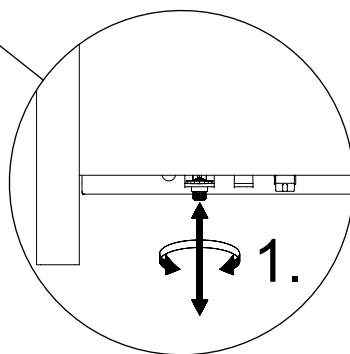

2.

852

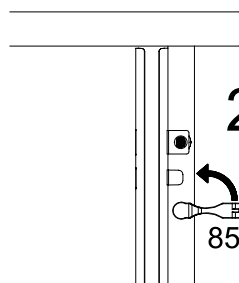

38



SCAN ME

