
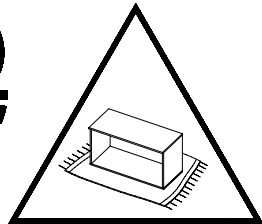
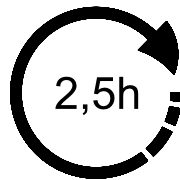



1.

MD143_05

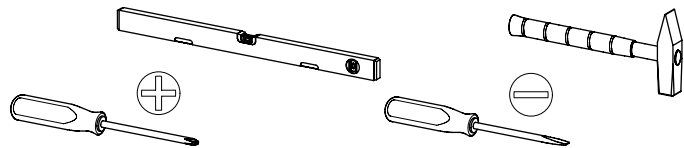


← 203cm →
67/67/67

← 225cm →
75/75/75







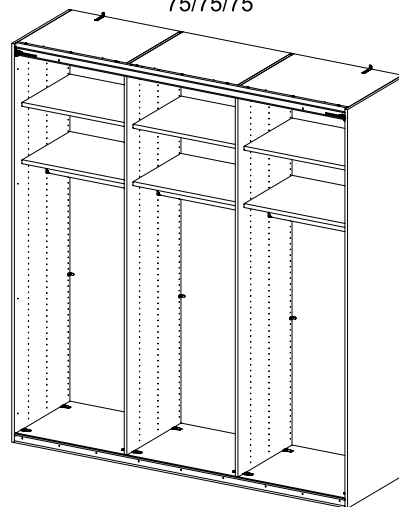


← 225cm →
90/90/45

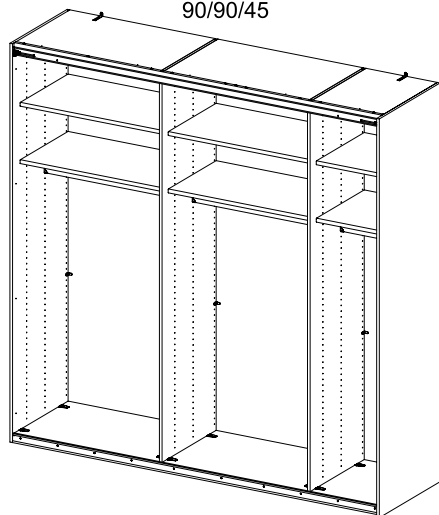






MD143

2.

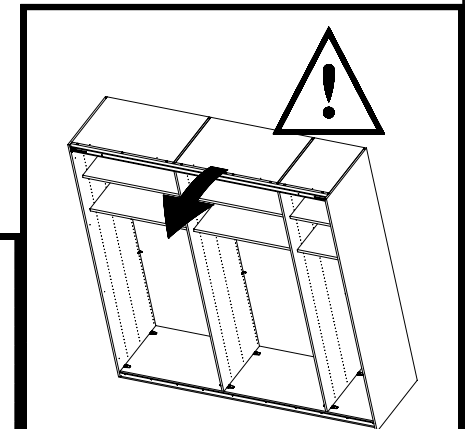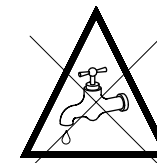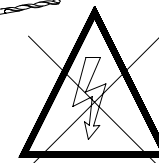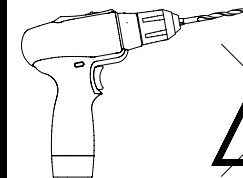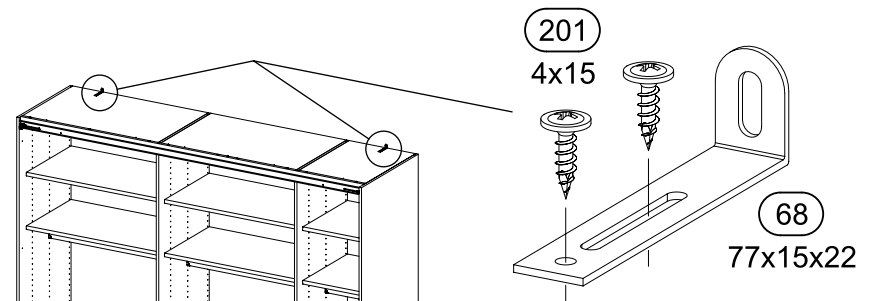

?


ØXmm

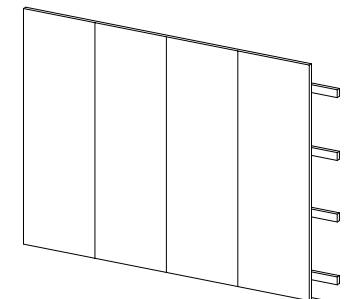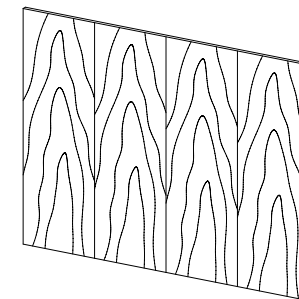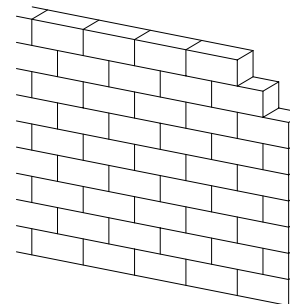

MD143



← 225cm →

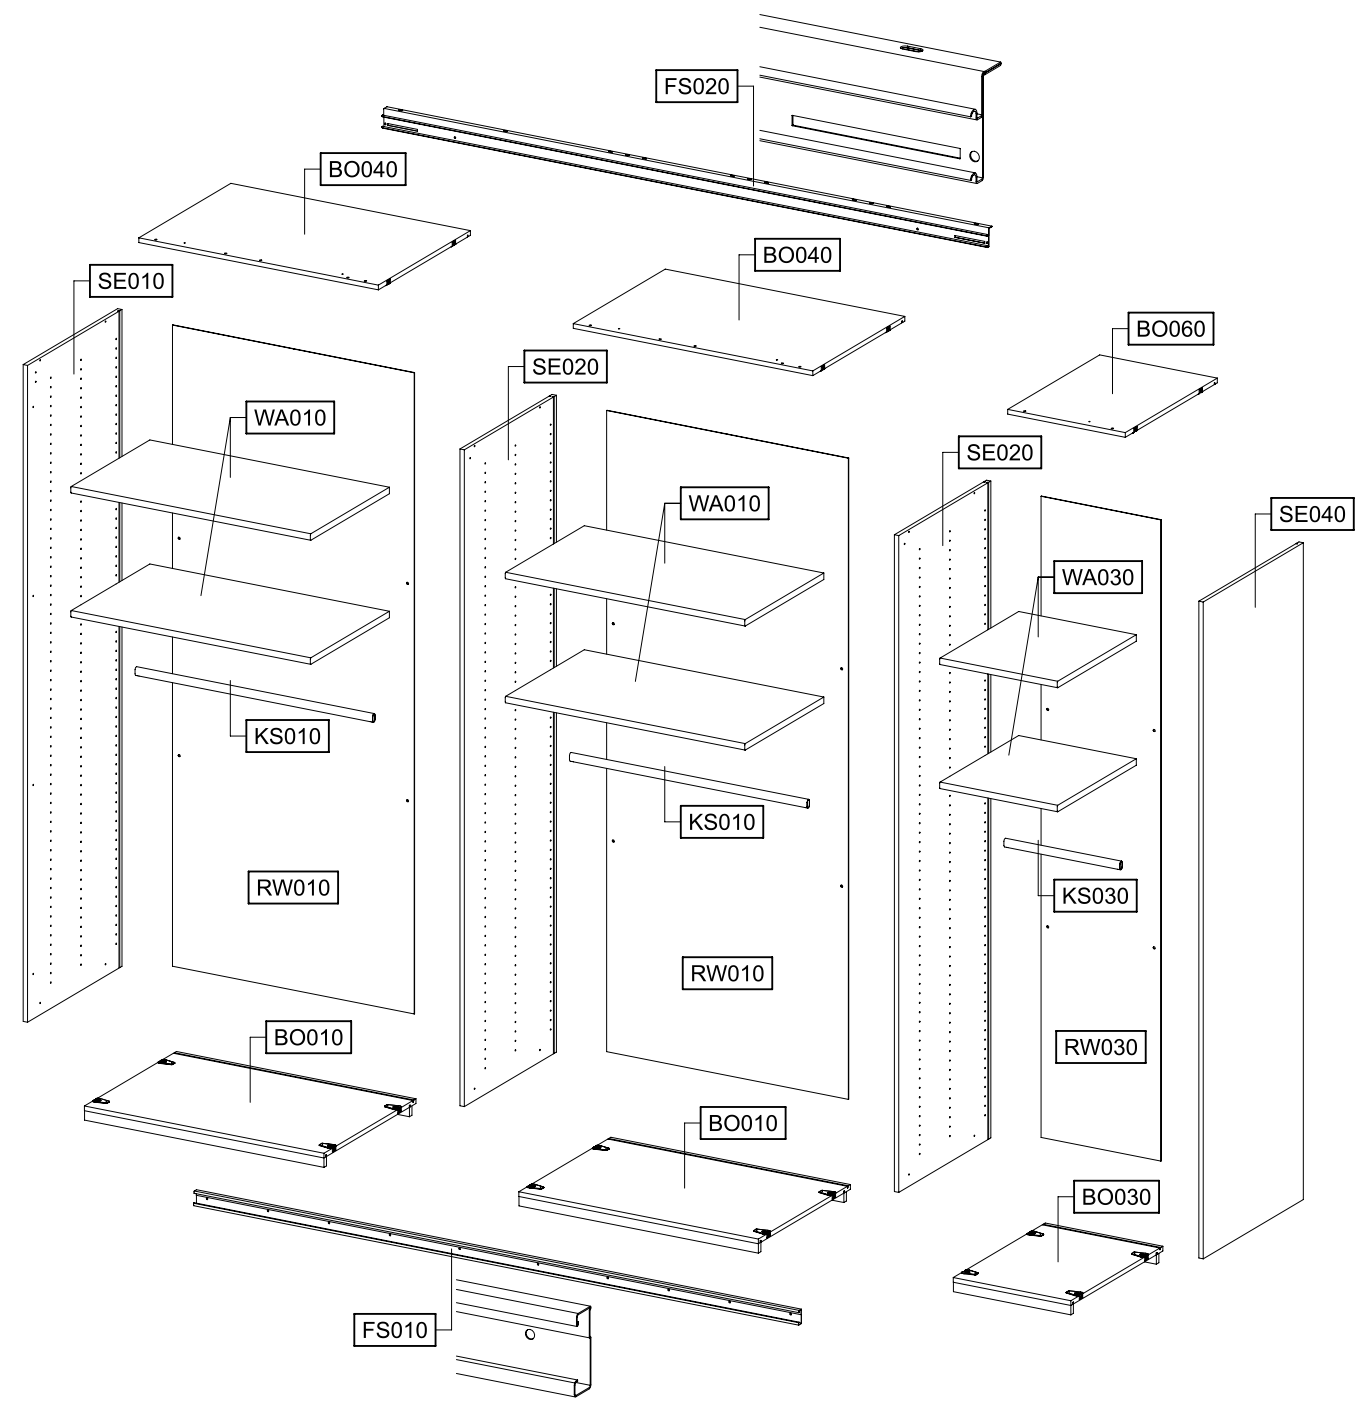



◀ 203cm ▶

◀ 225cm ▶


BO010 = BO030













BO040 = BO060










WA010 = WA030



KS010 = KS030

RW010 = RW030

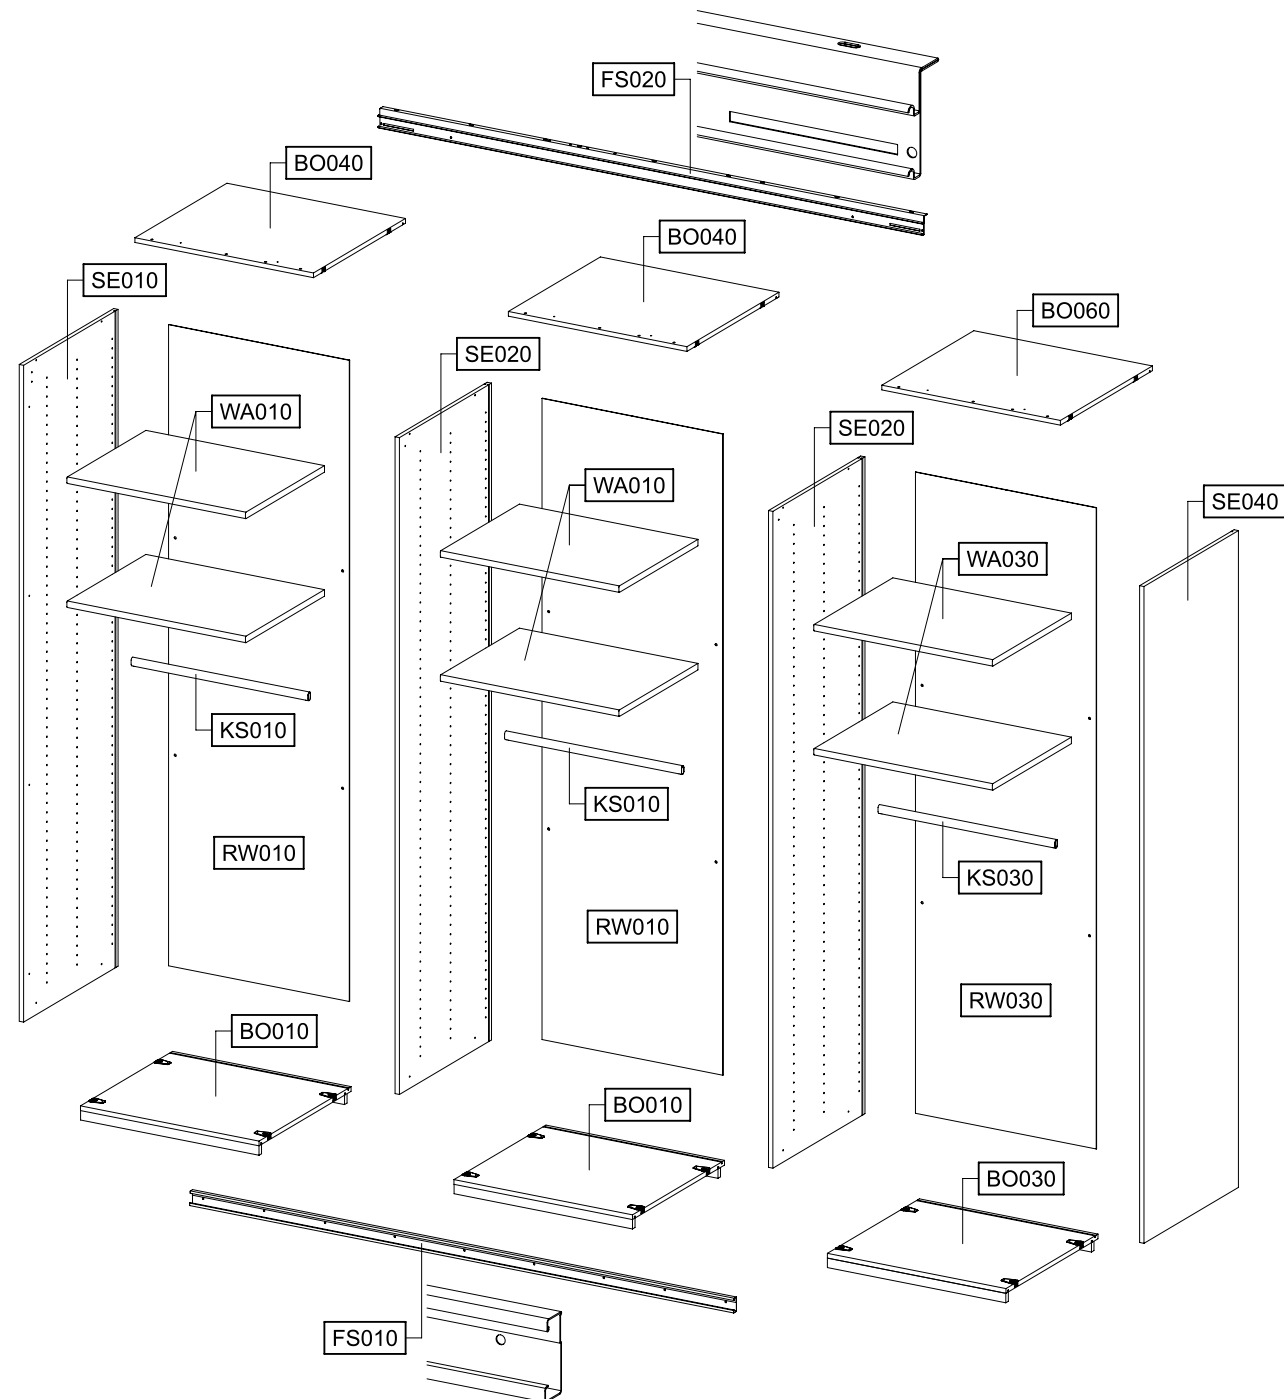

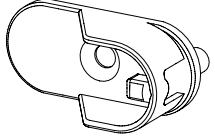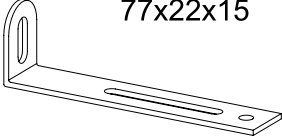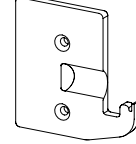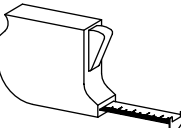0-8x 55x16x6,2  (12)	6x  (29)
12x  (45)	12x  (47)
2x 77x22x15  (68)	4x 4x15  (201)
19-20x 3,5x15  (205)	8-9x M4x12  (211)
8-9x M4  (580)	12x 6,5x12  (779)
8x  (1085)	8x  (1086)
24x  (1089)	1x  (1165)
   	

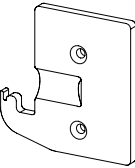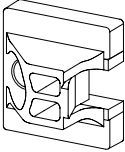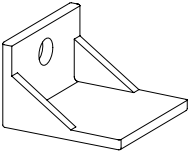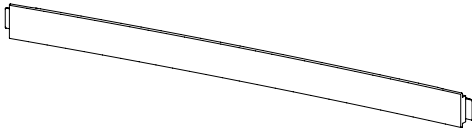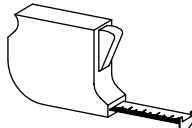


1x  (1166)	2x  (1167)
2x  (1168)	0-2x  (1277)
2x M5x12  (1279)	2x  (1280)
2x M5  (1288)	
   	

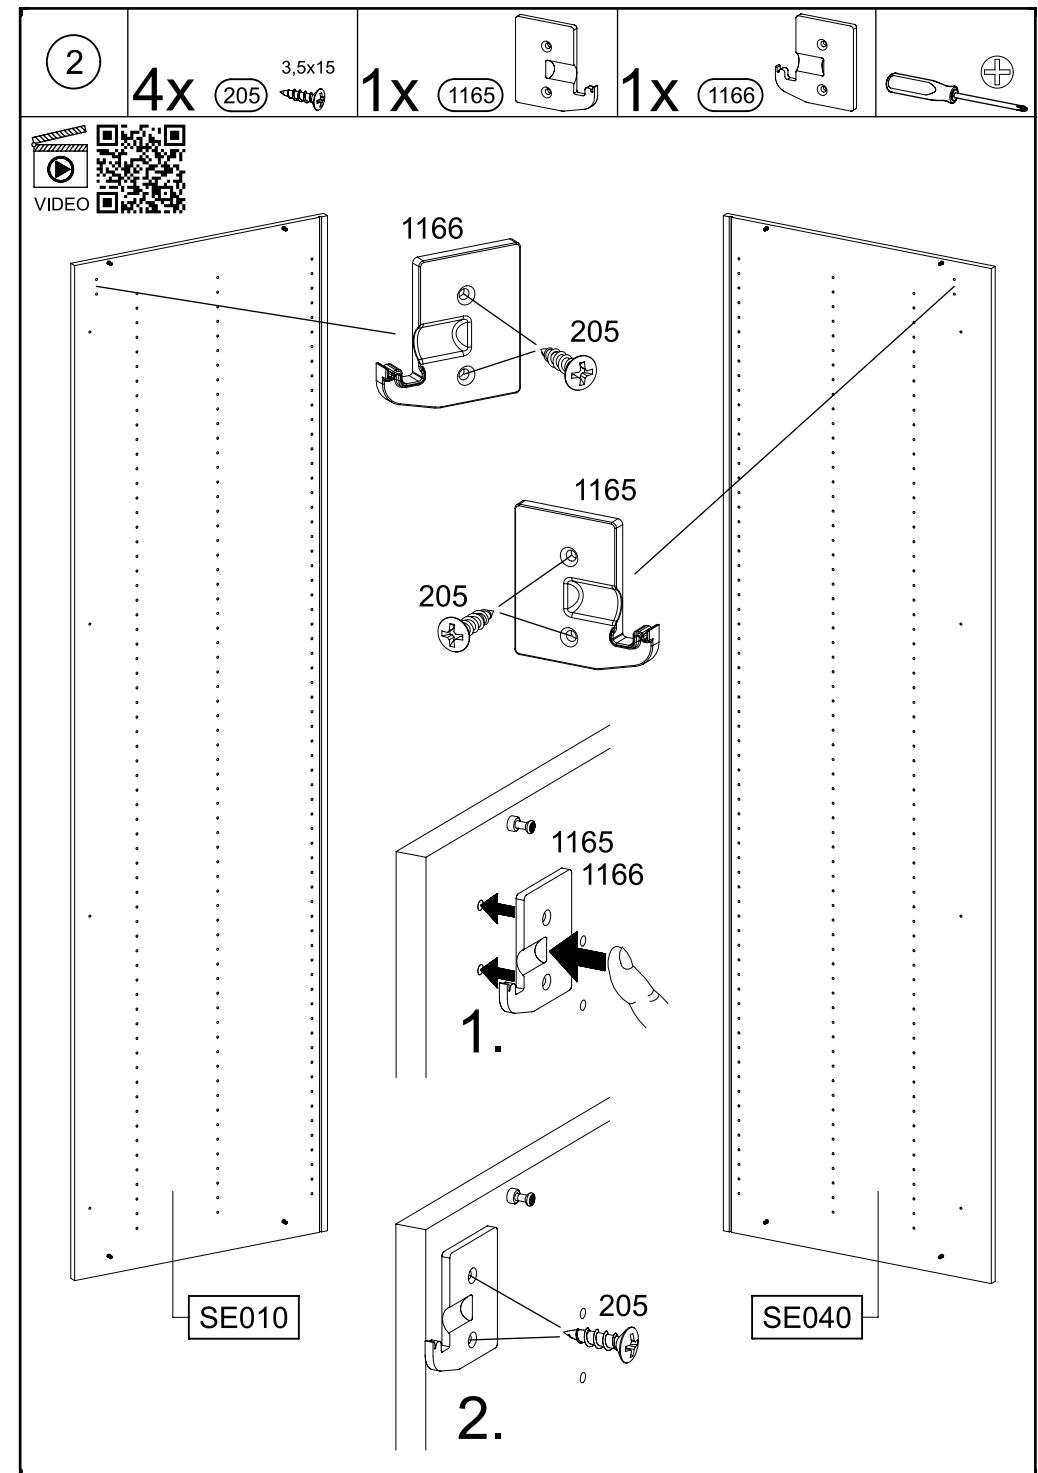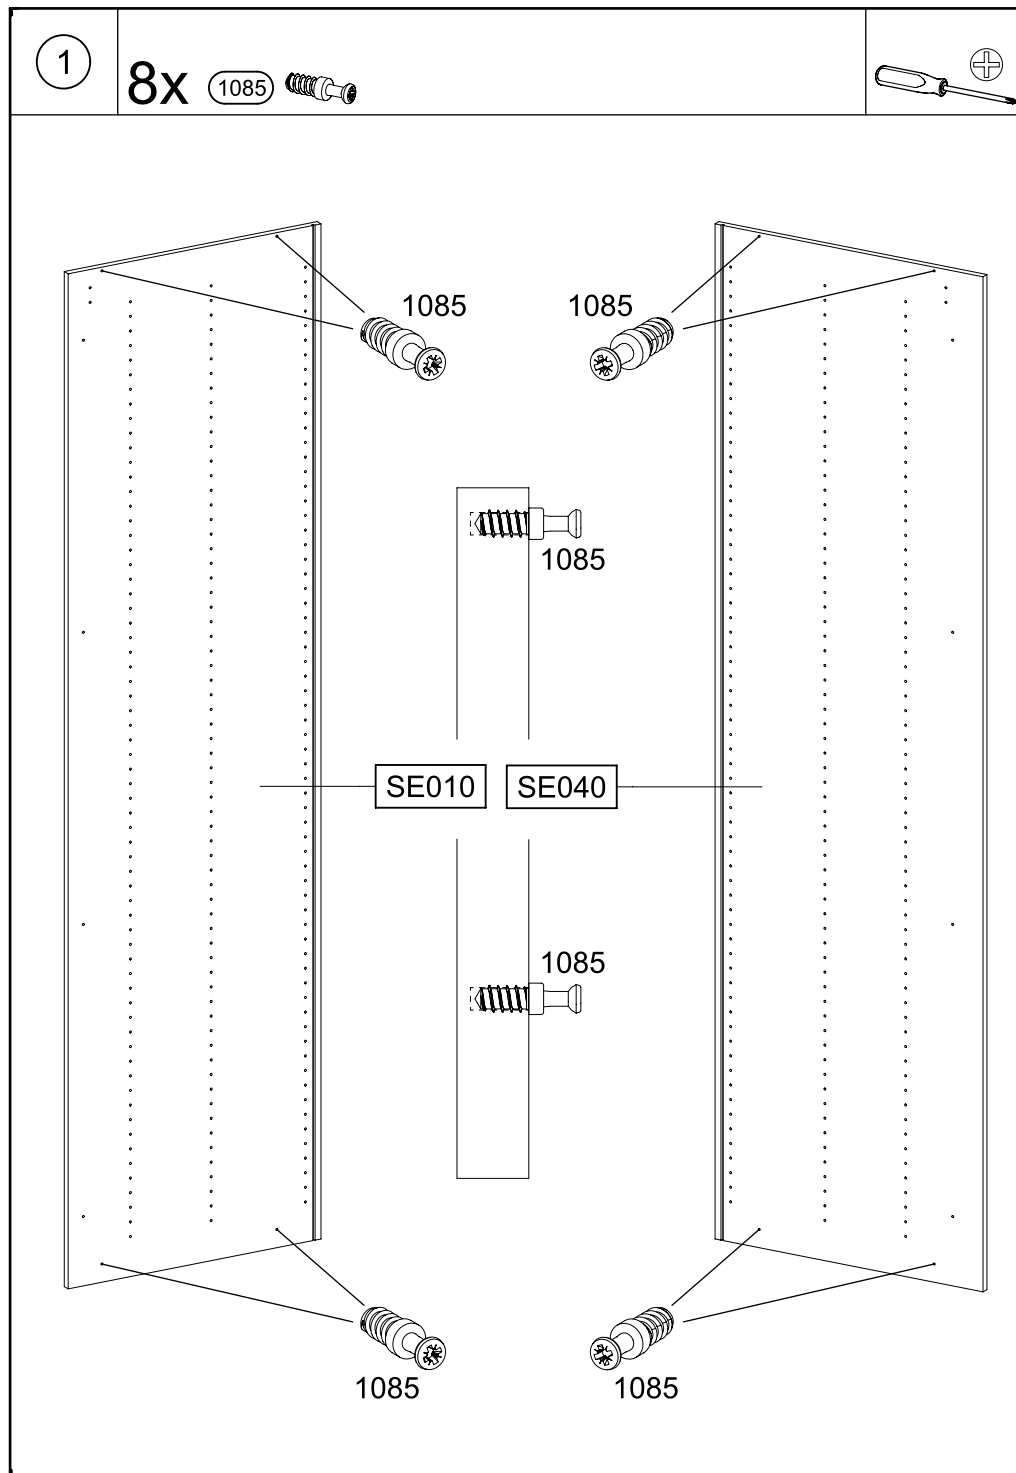



3



8x



1086

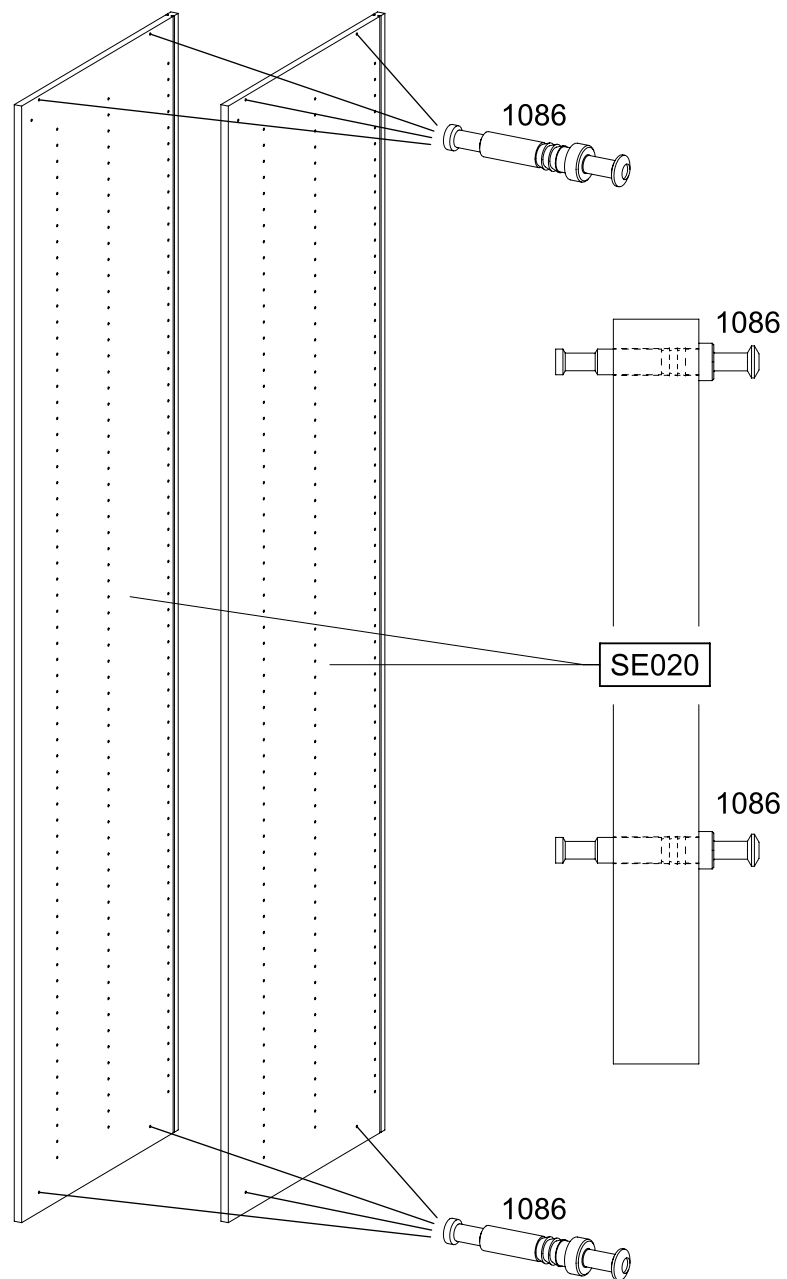





4

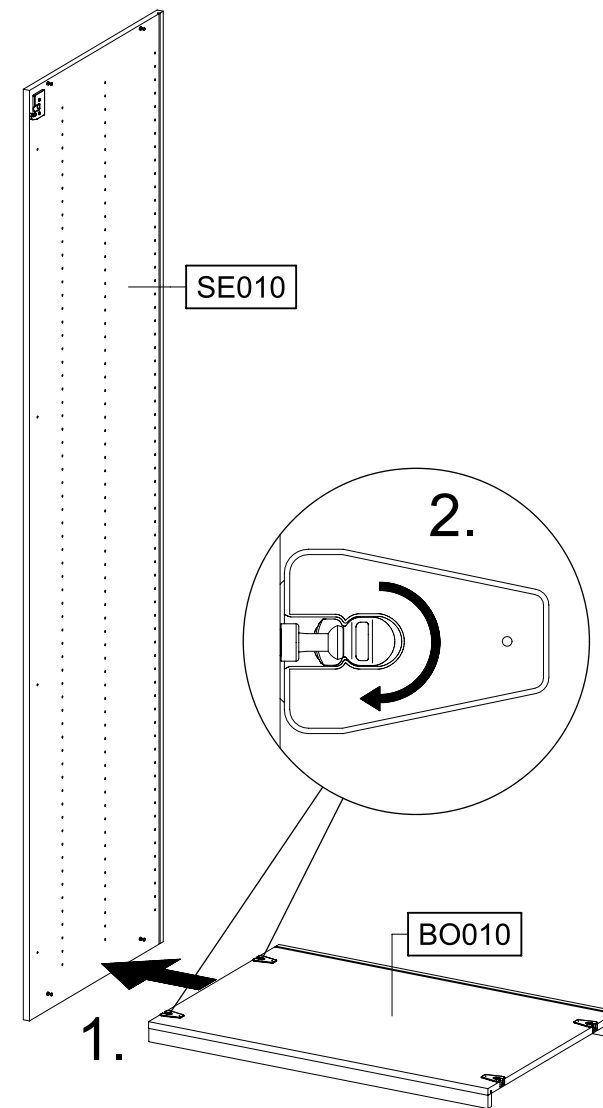



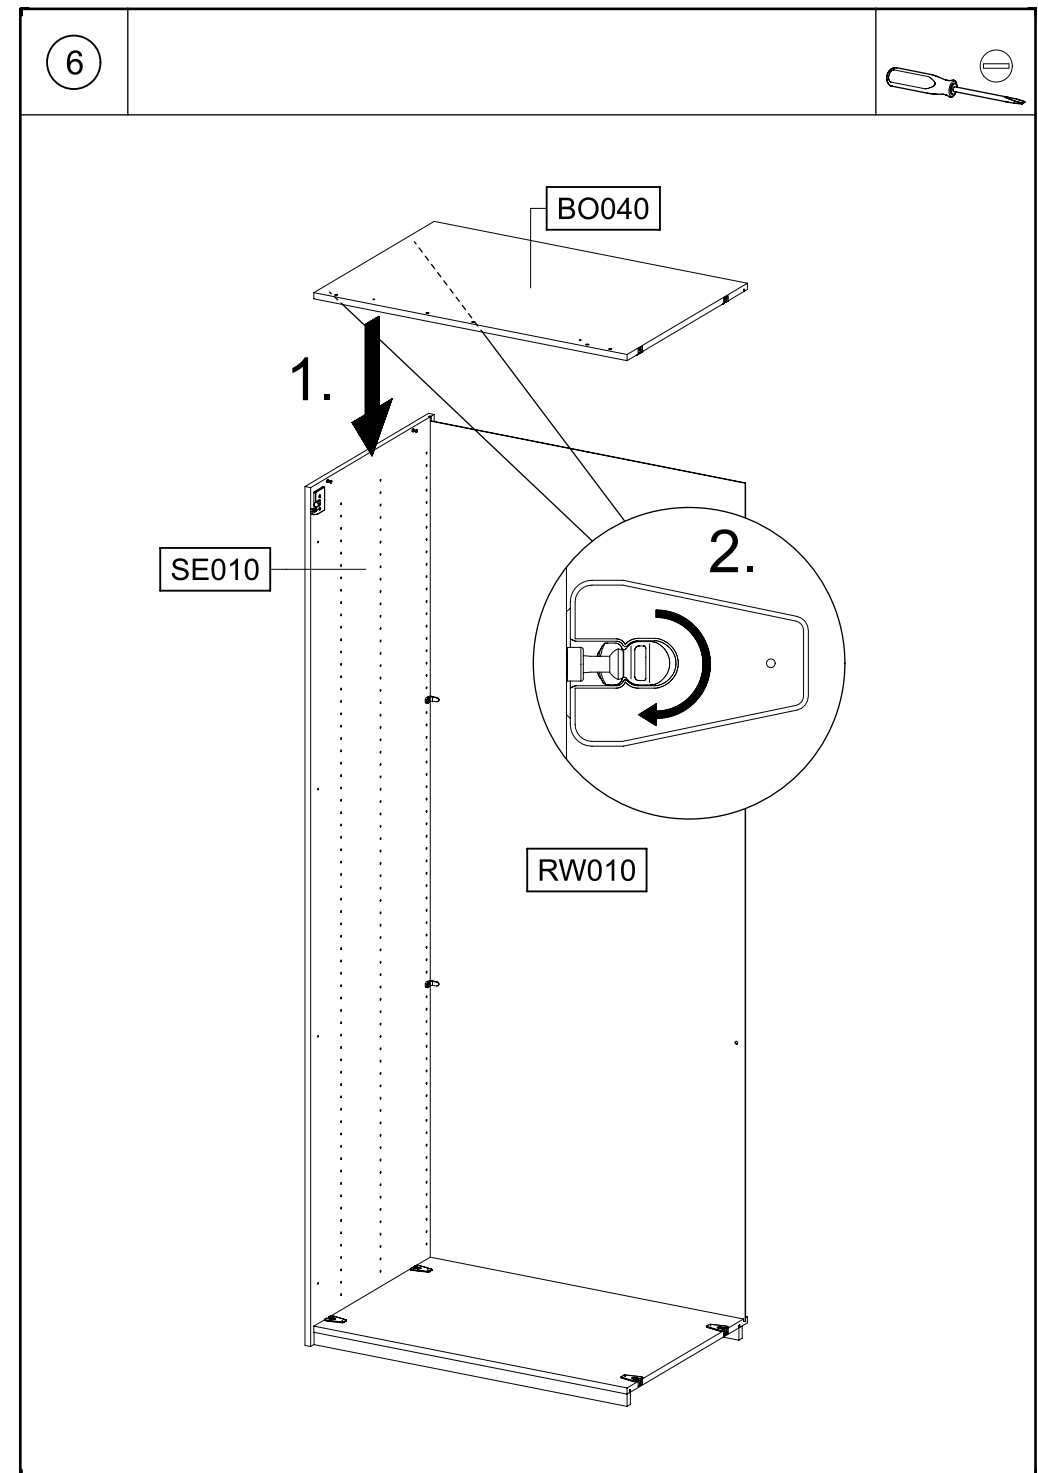
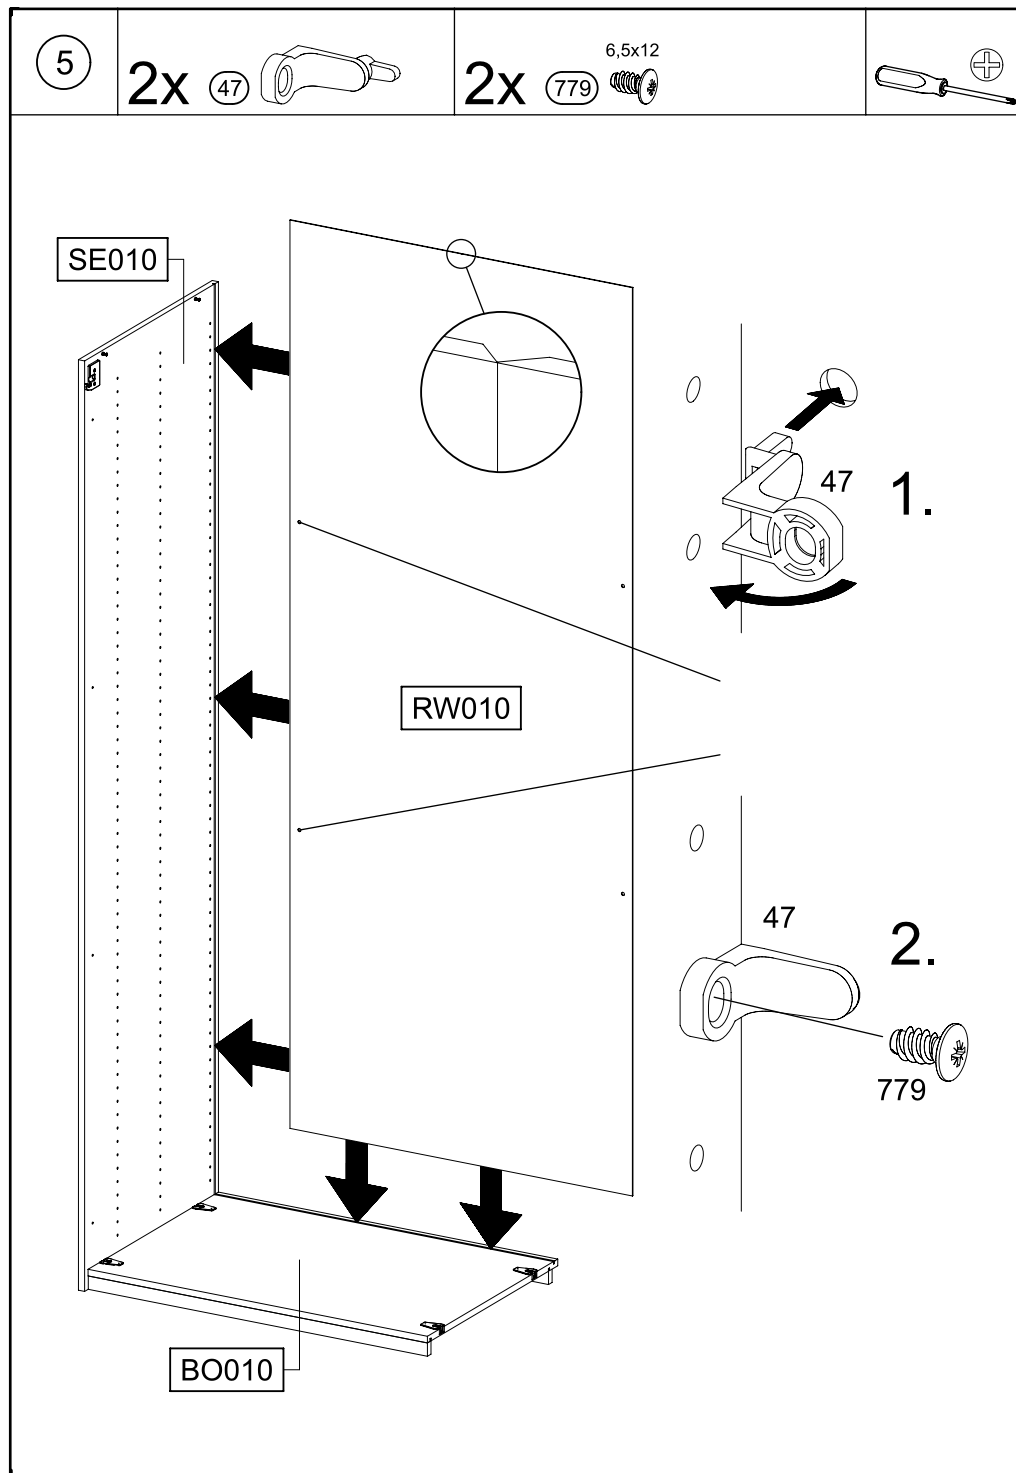


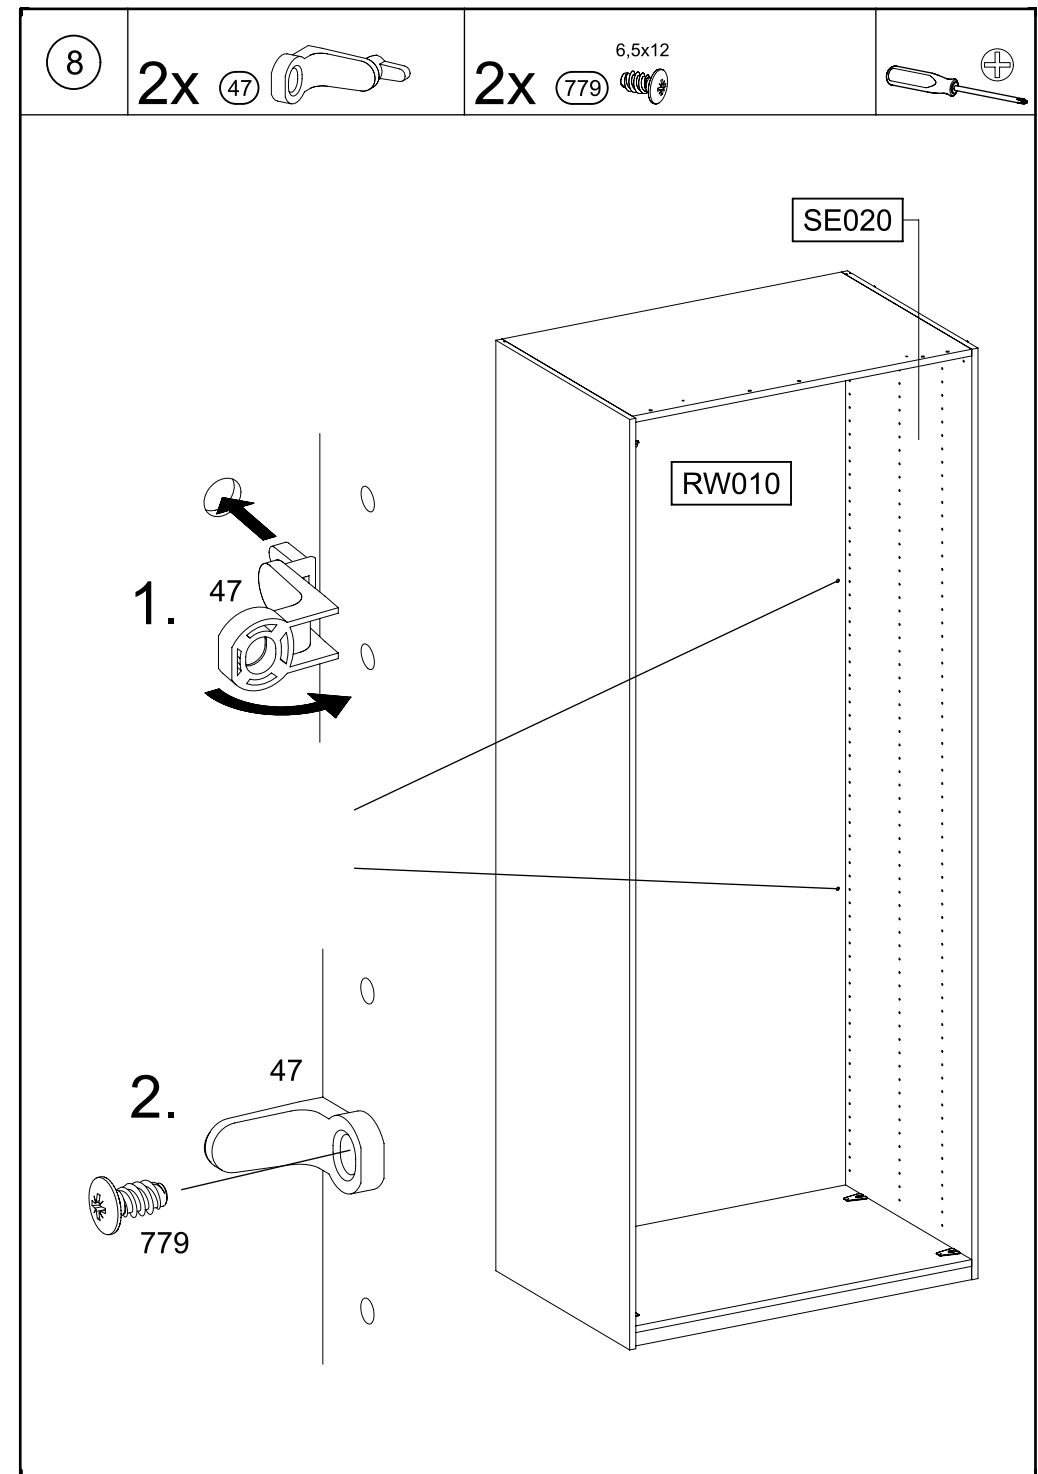
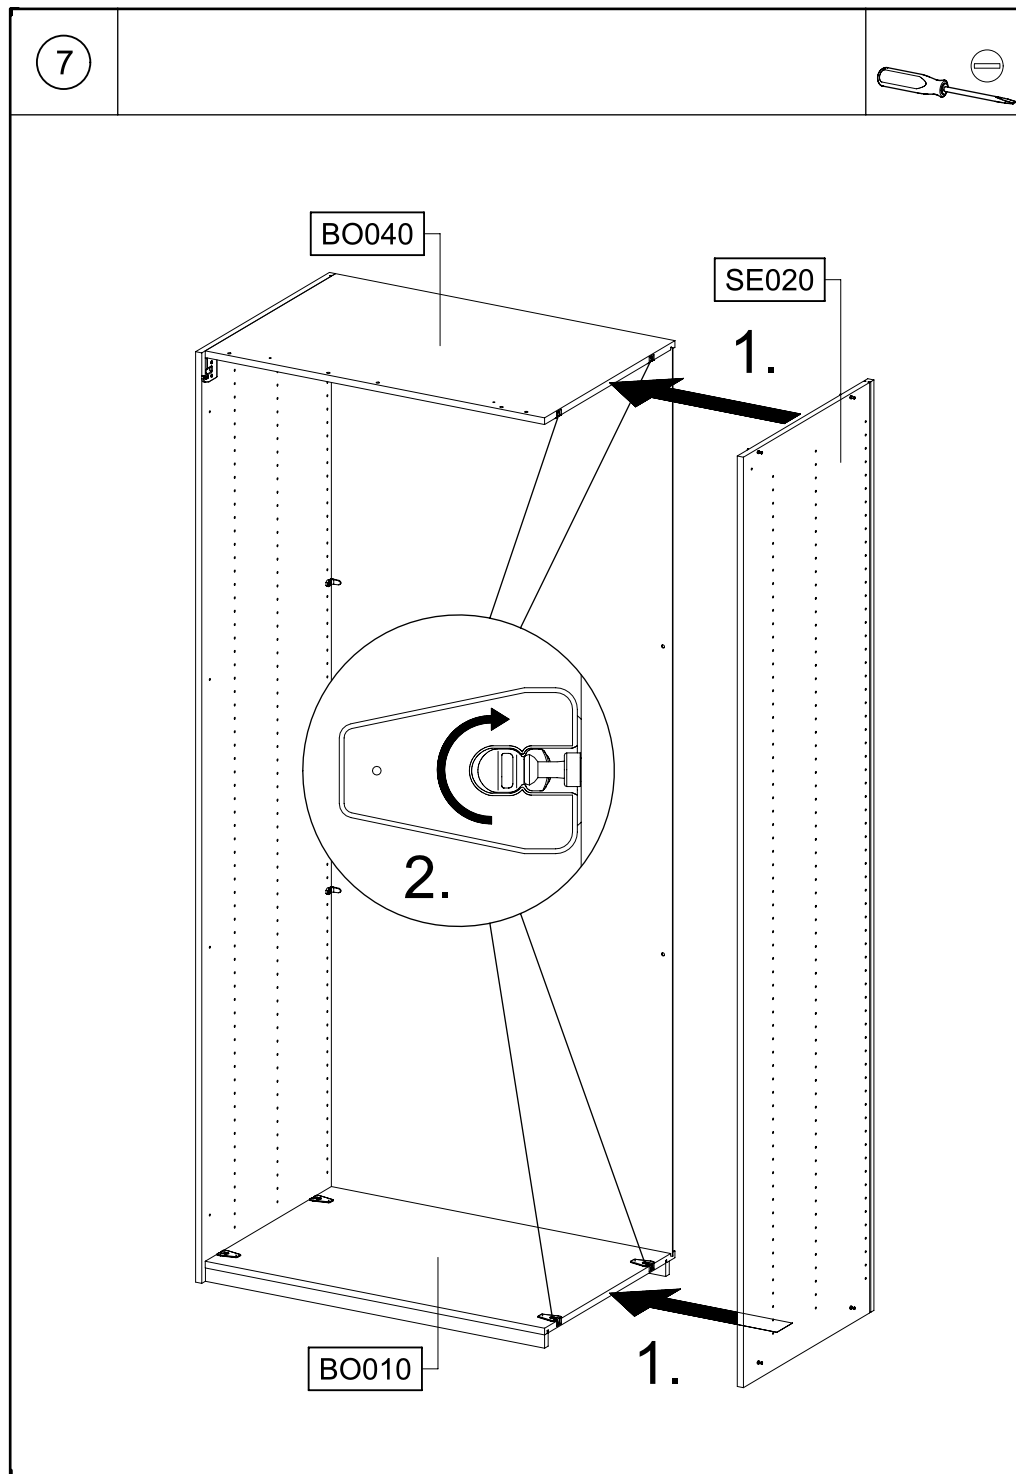


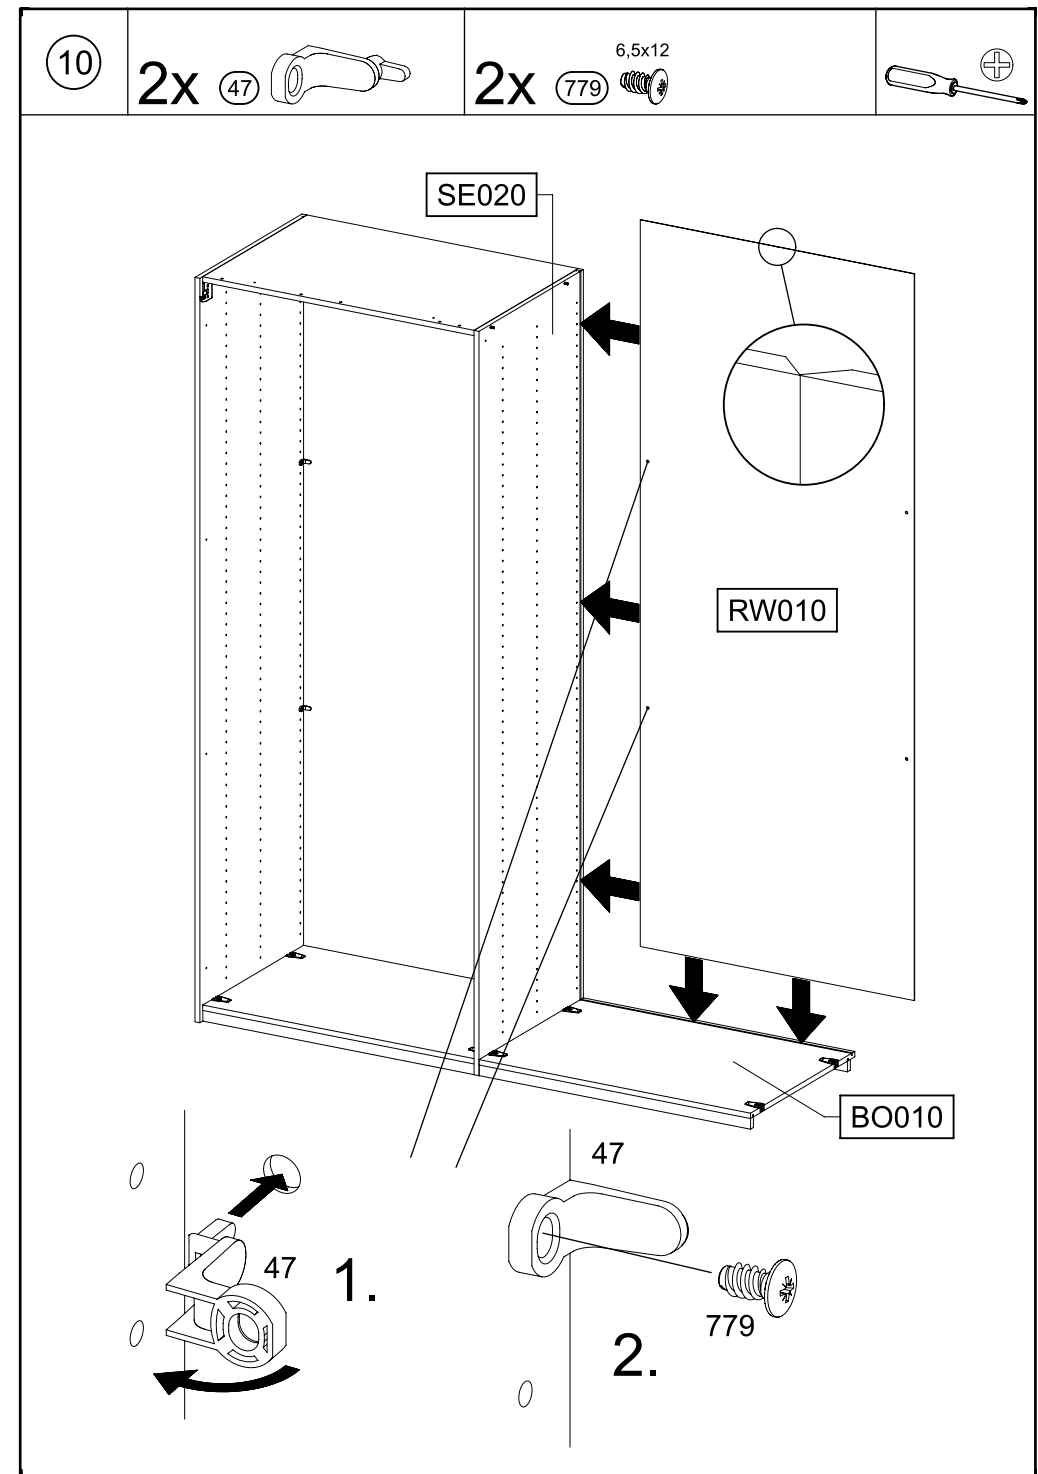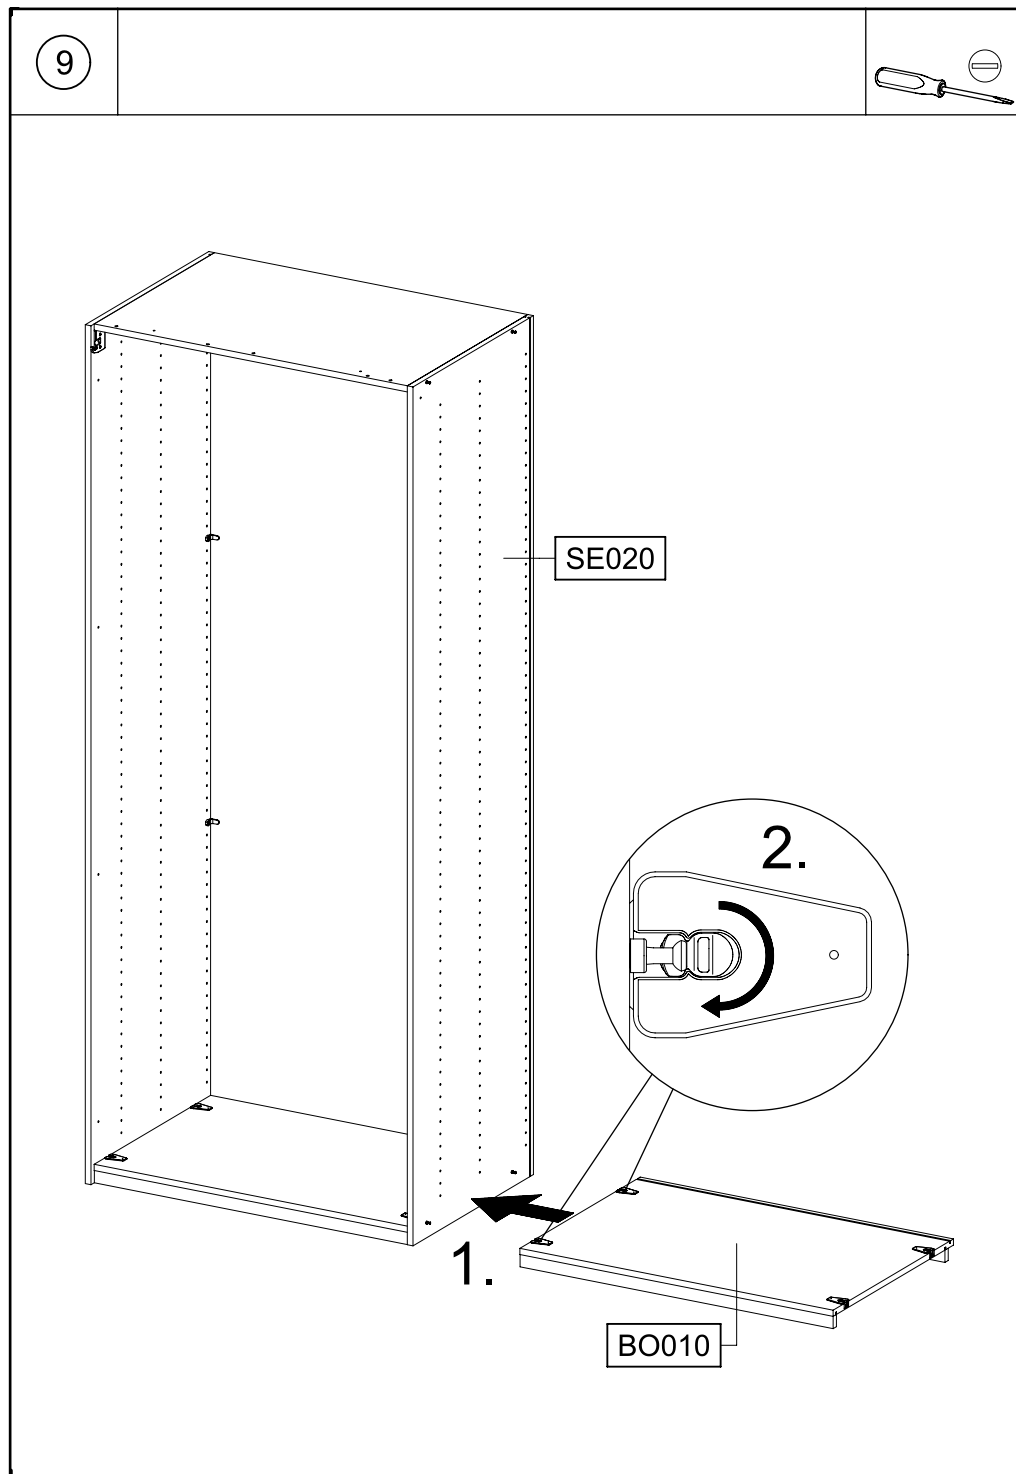

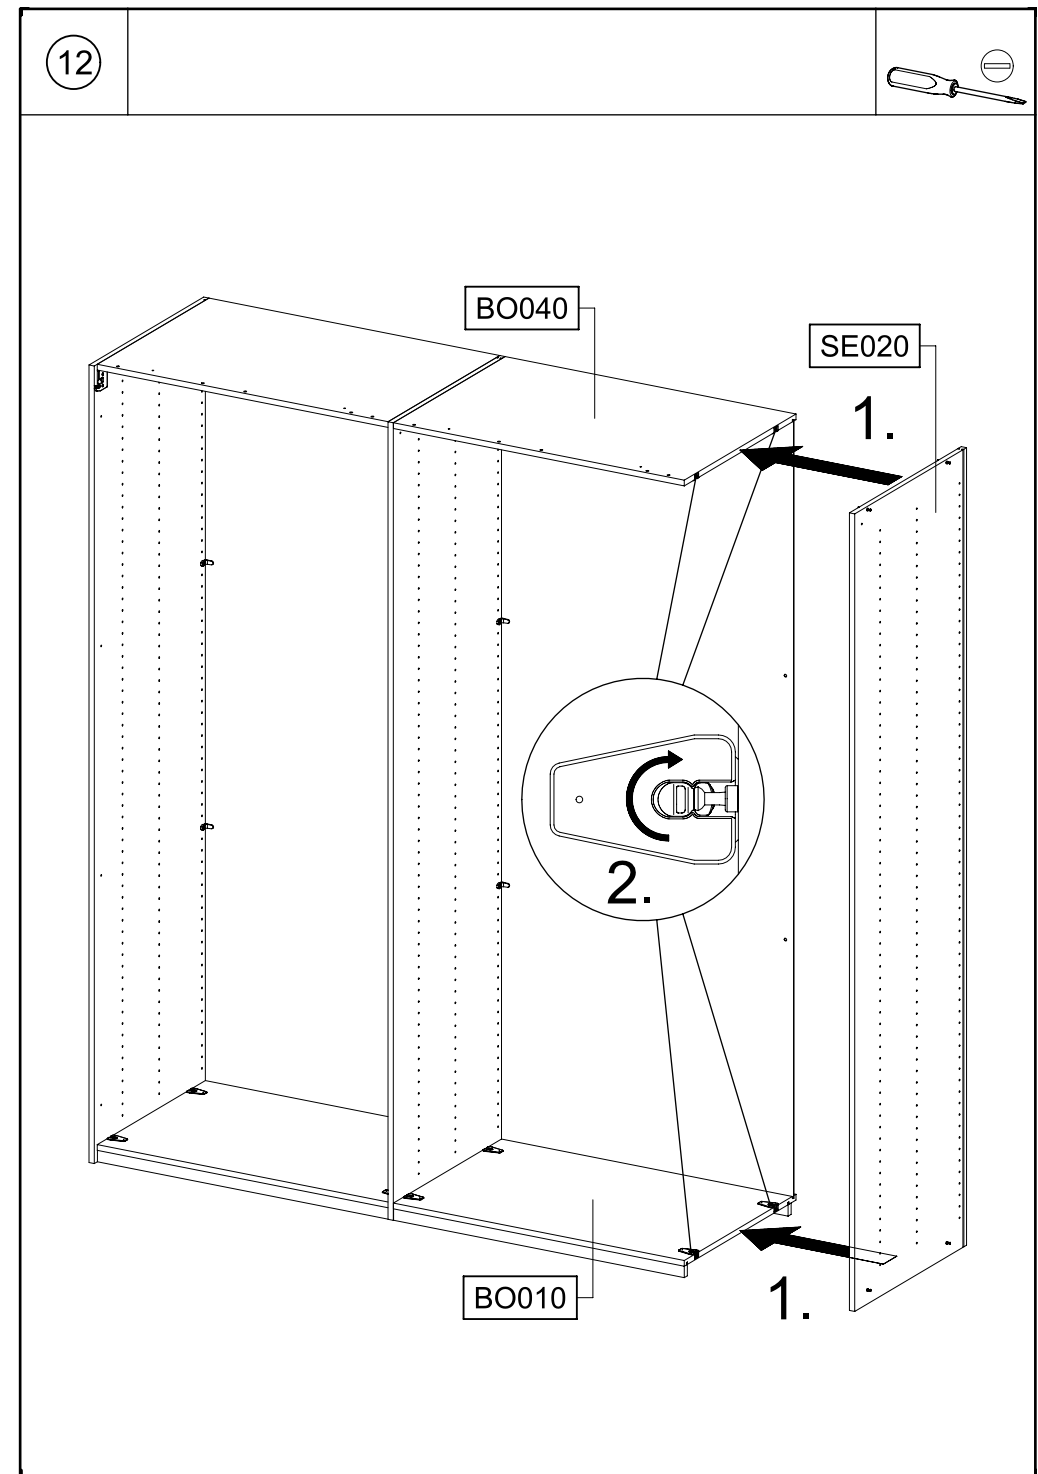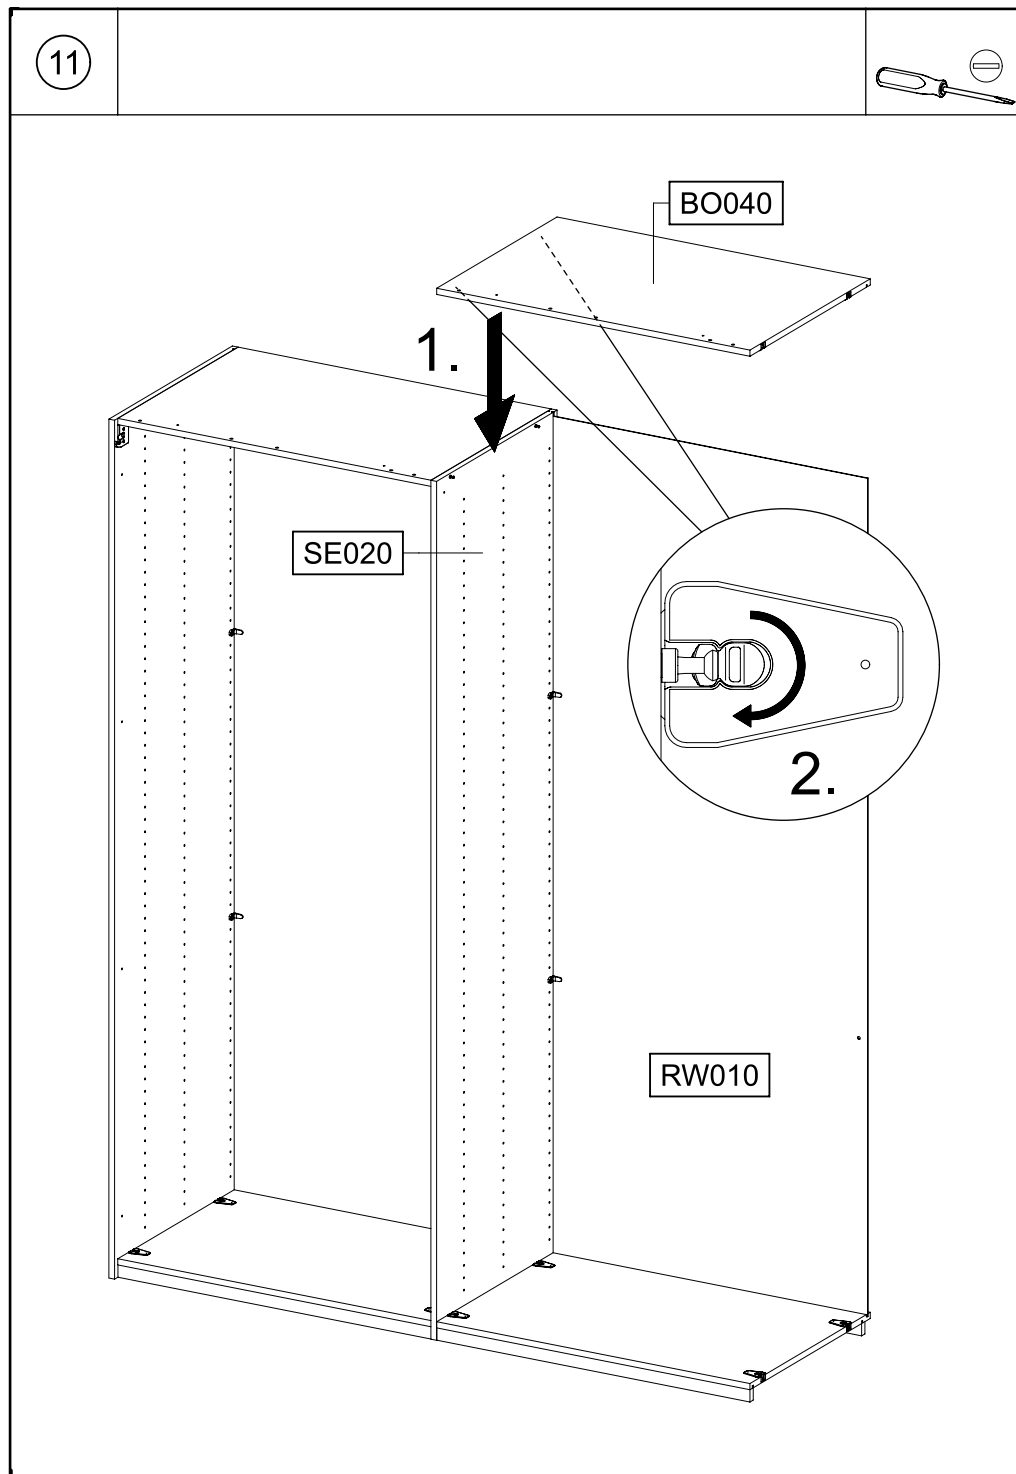

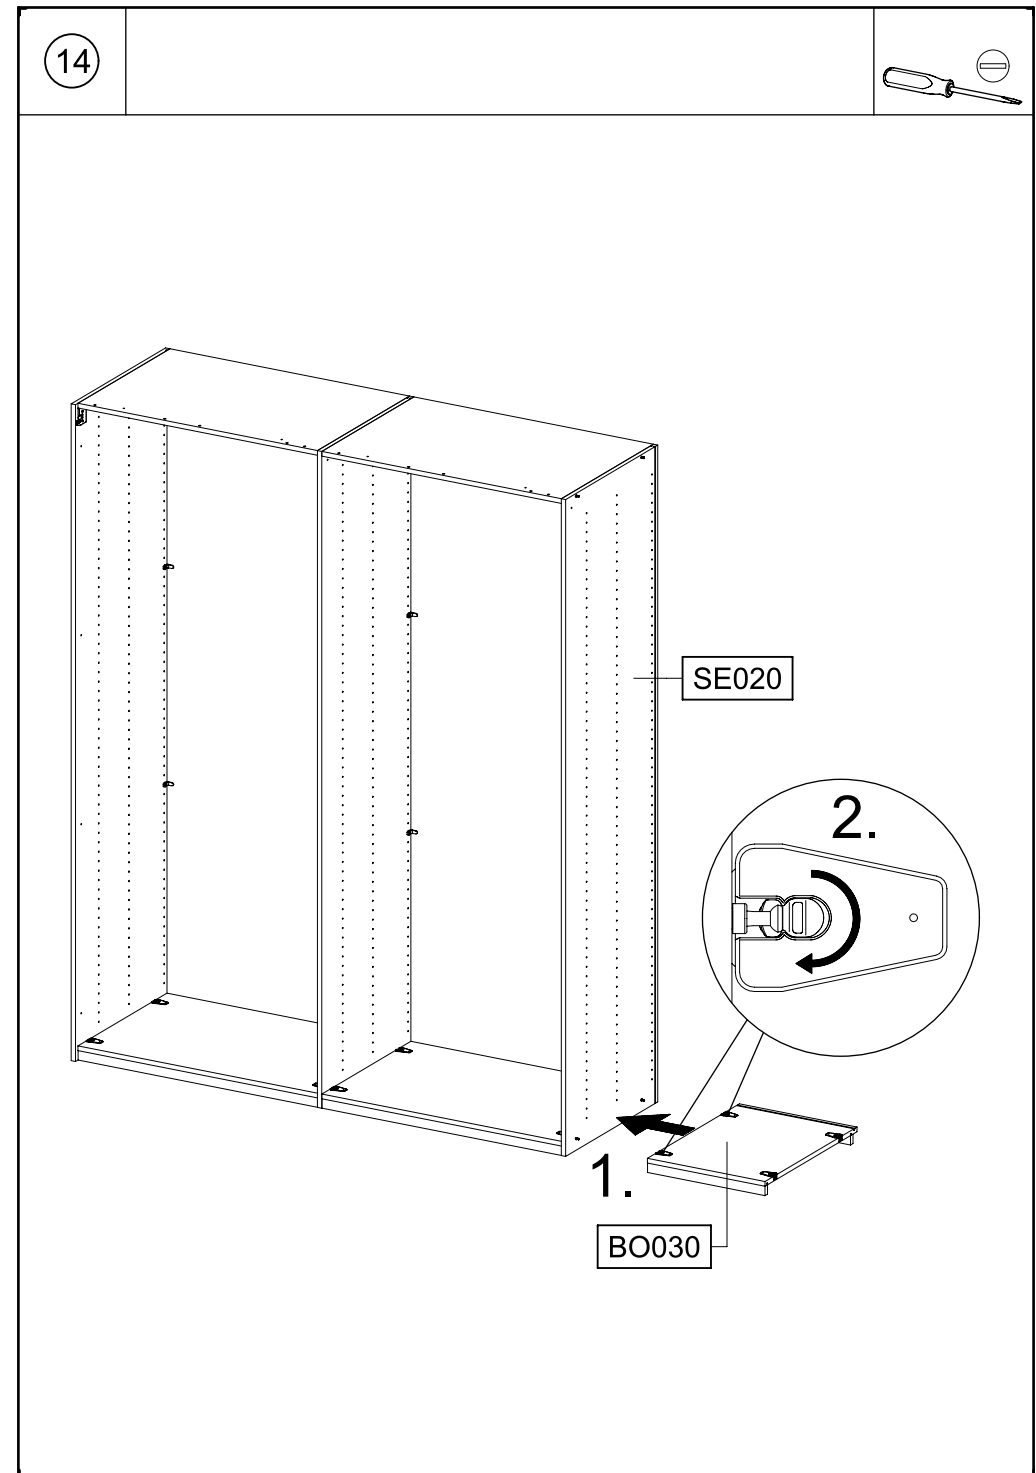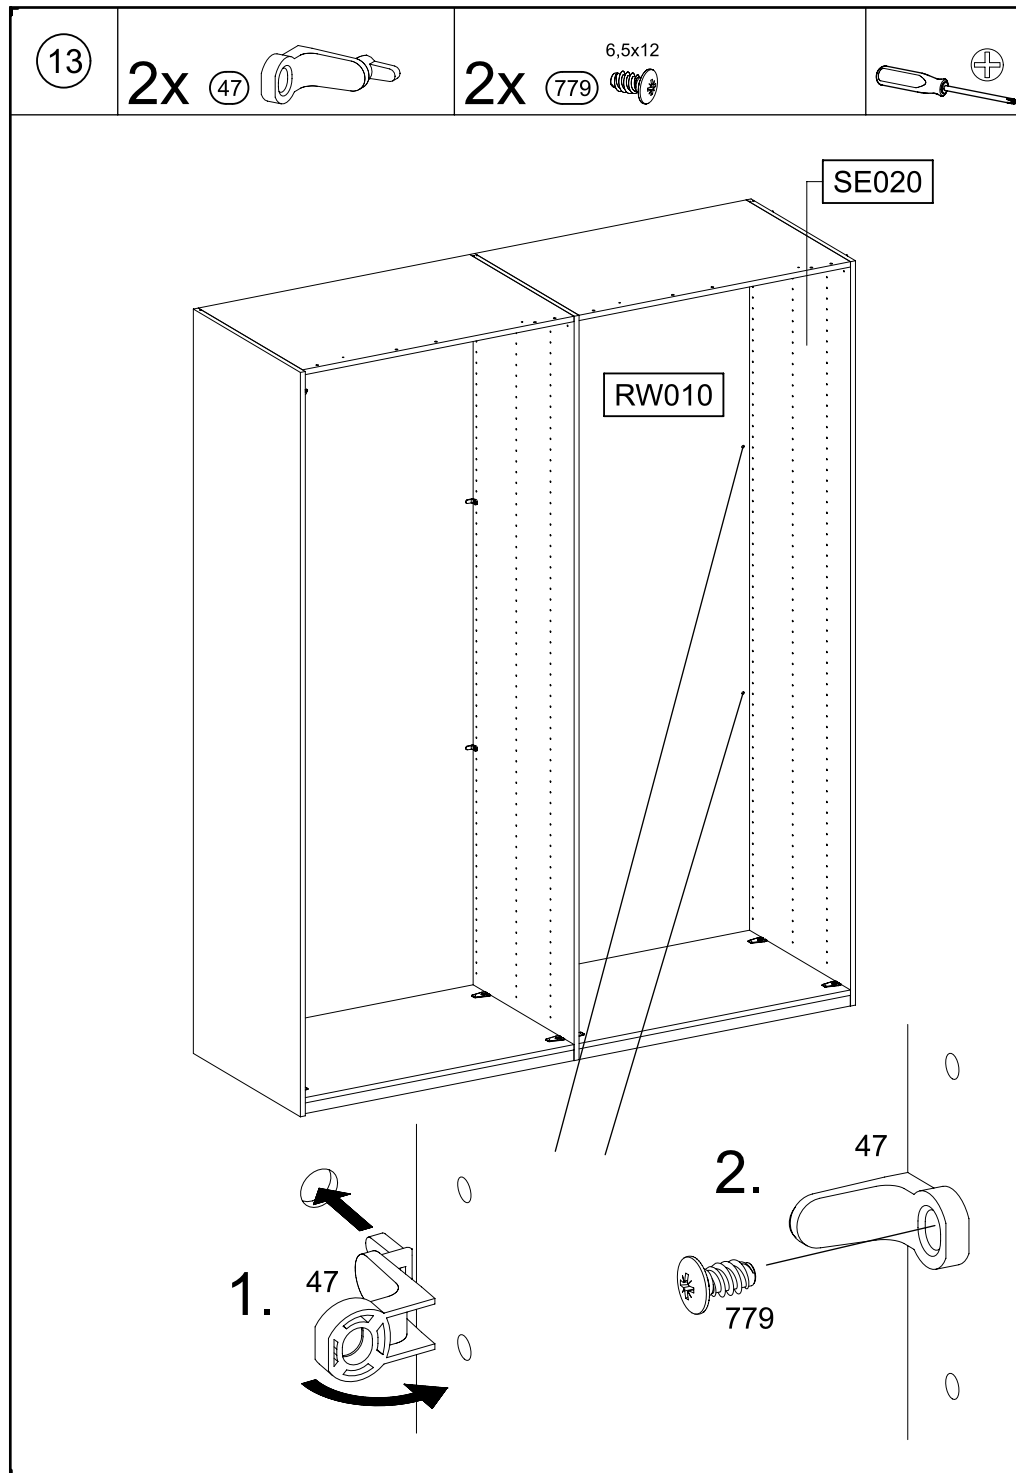

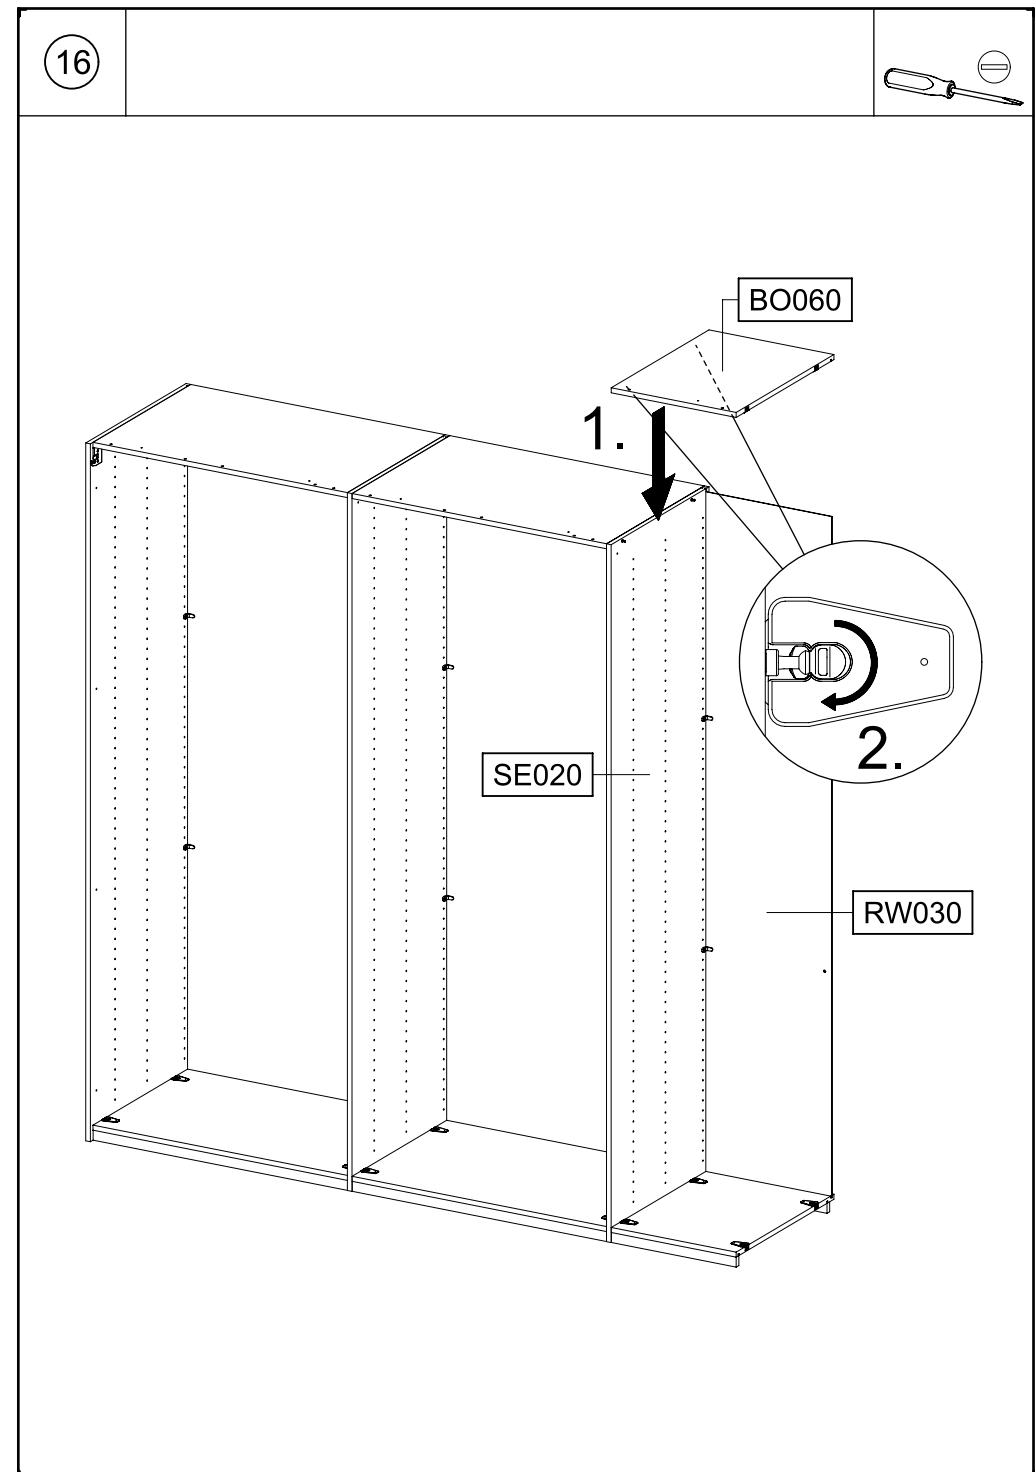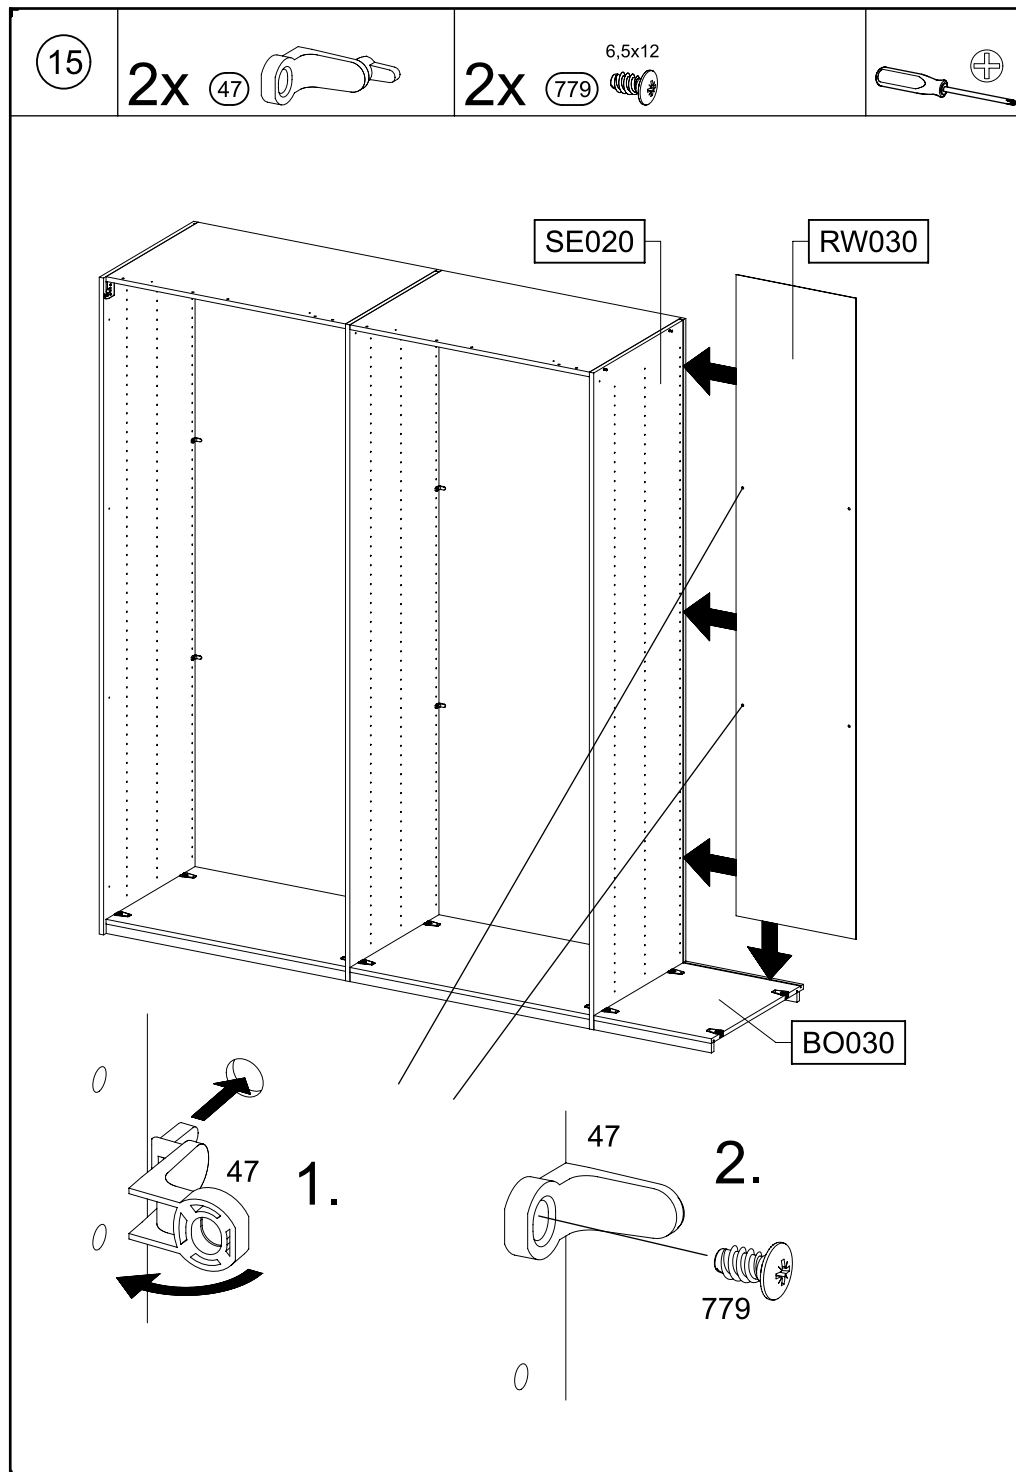


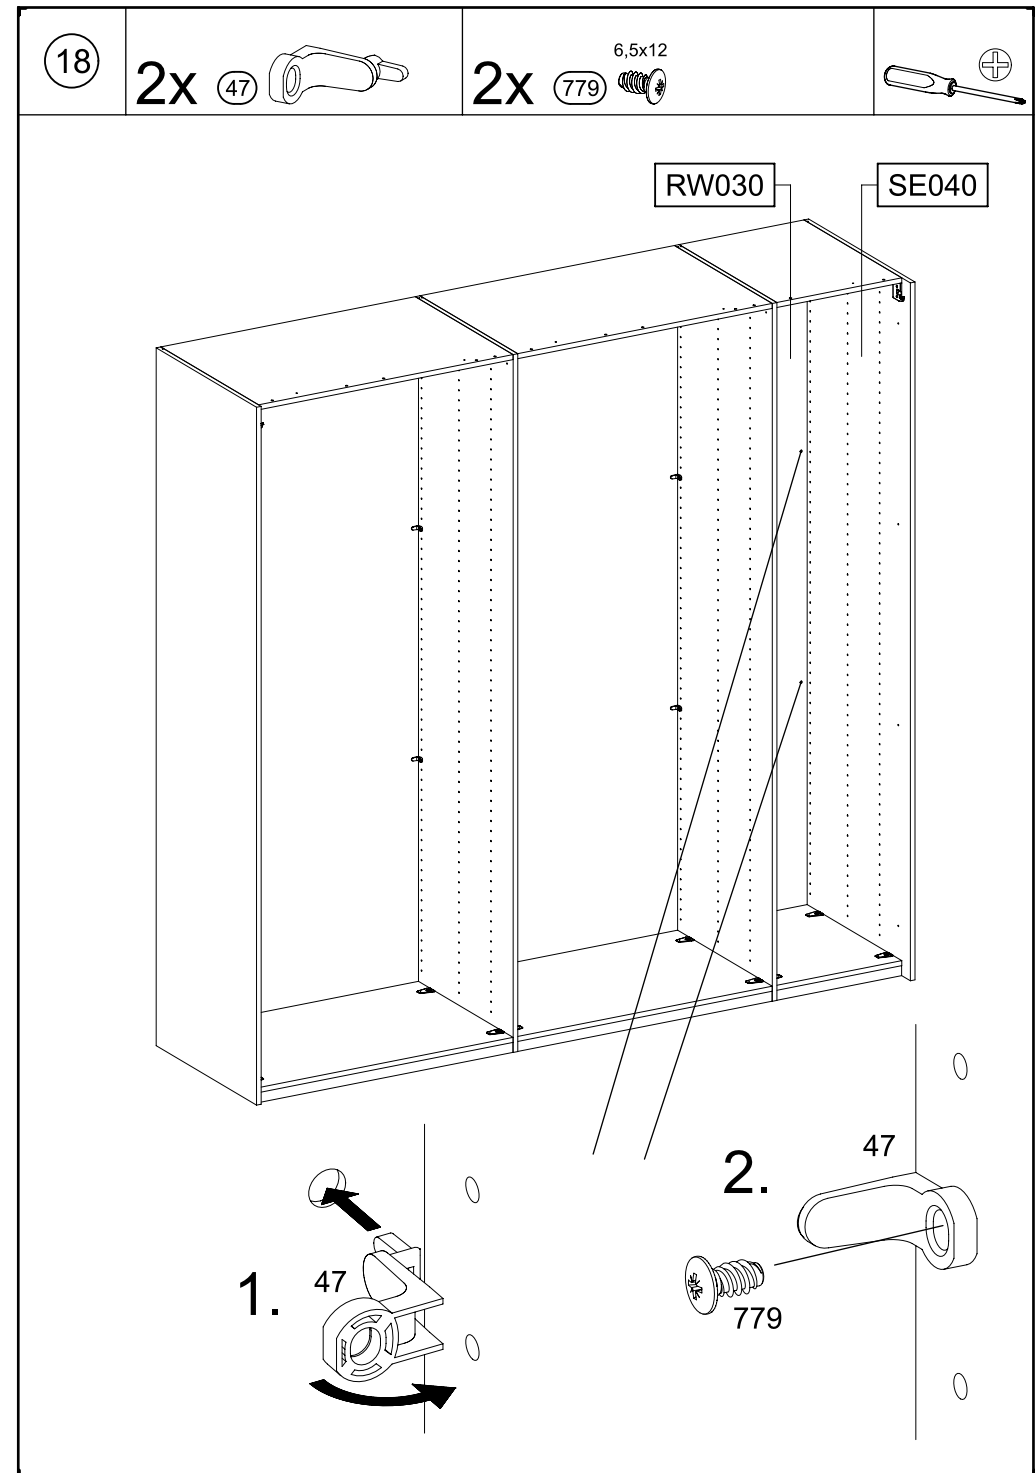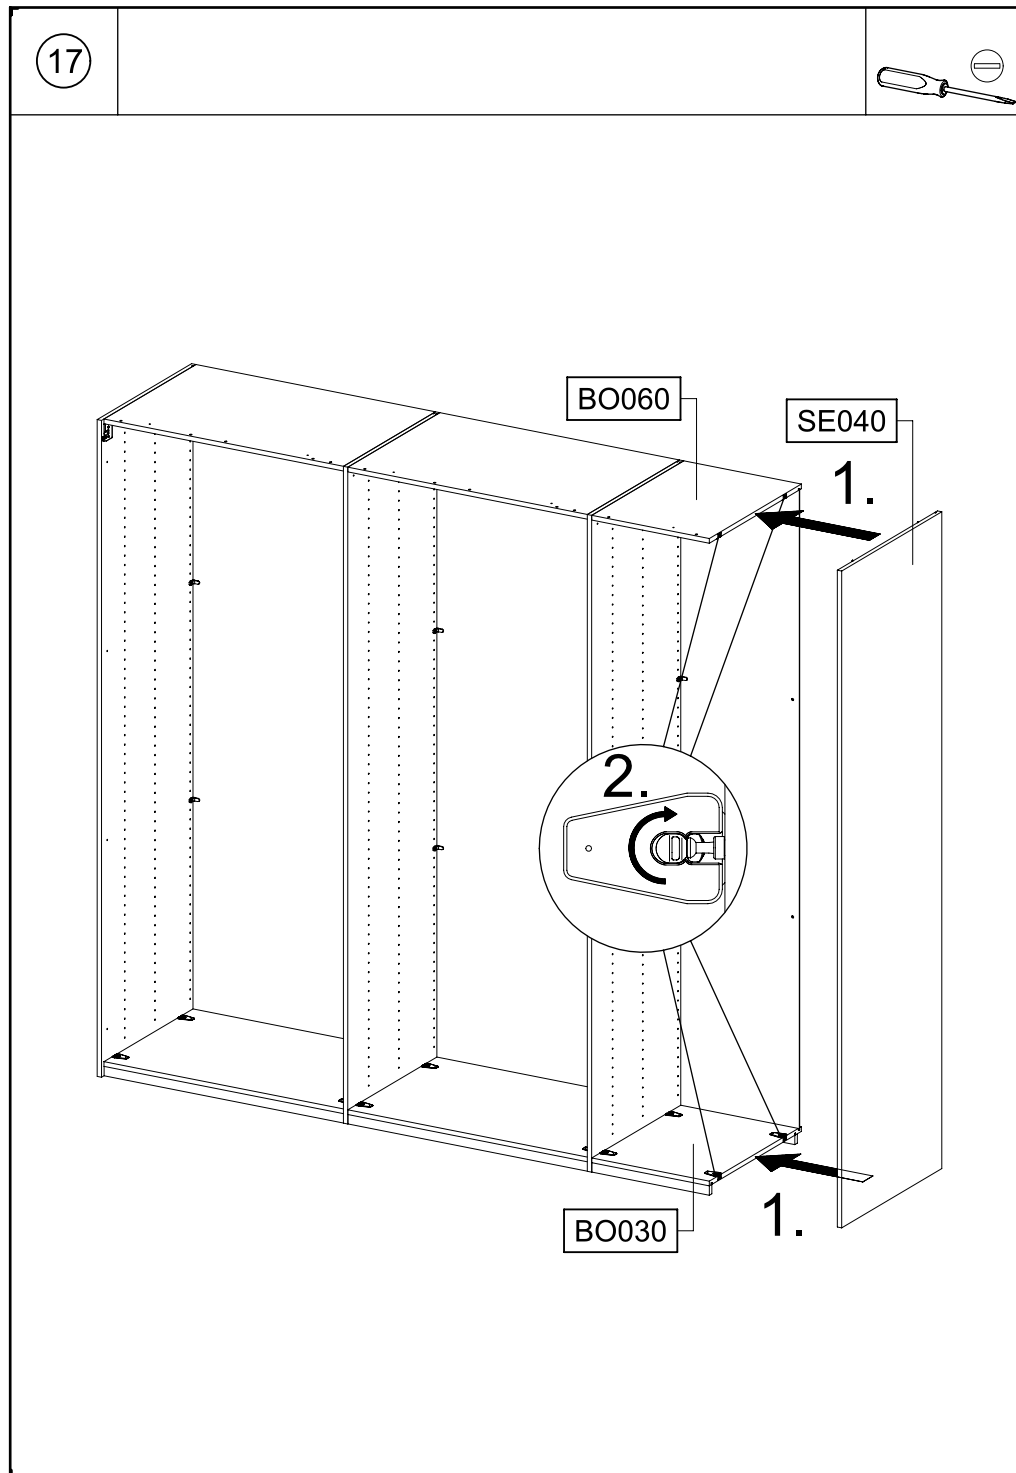

19

24x


1089

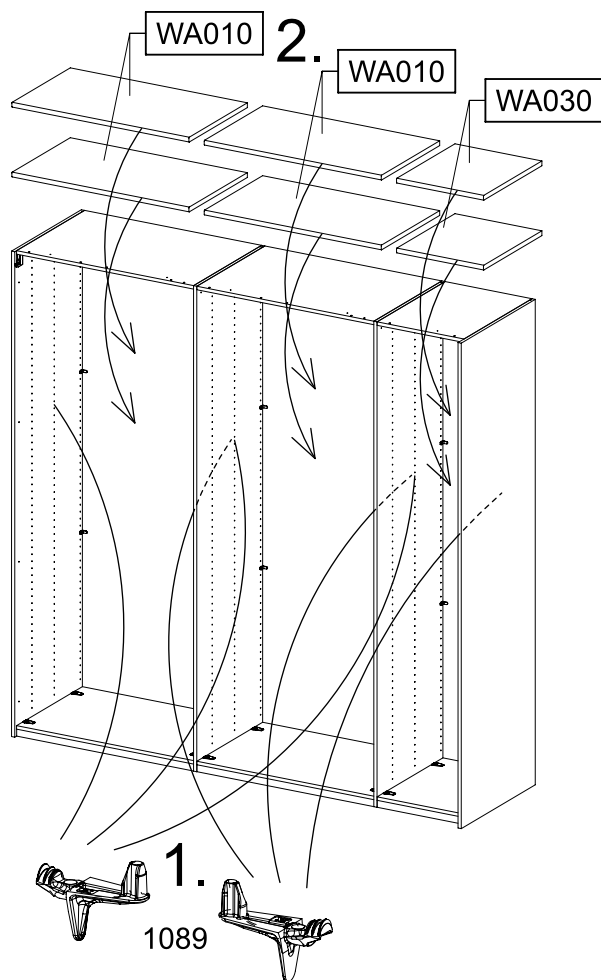

20

6x



29







6x



205

3,5x15

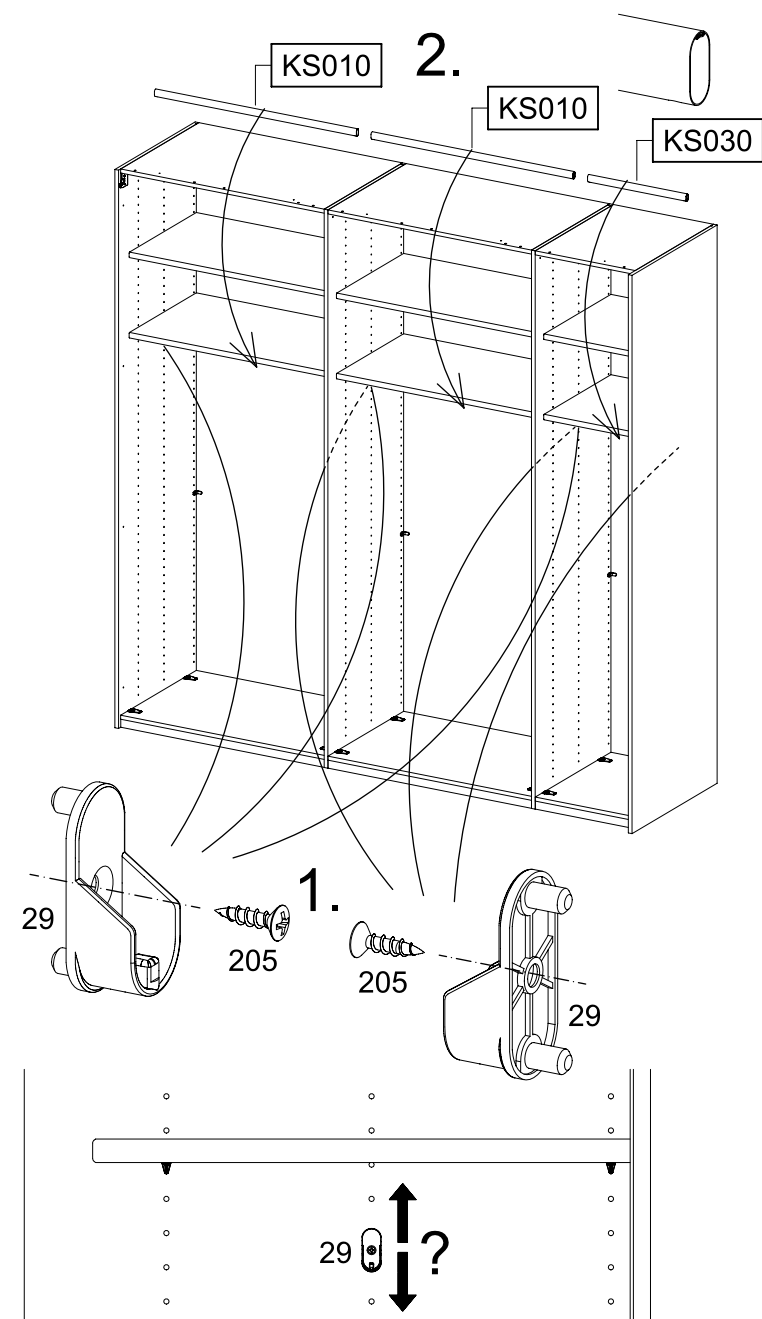

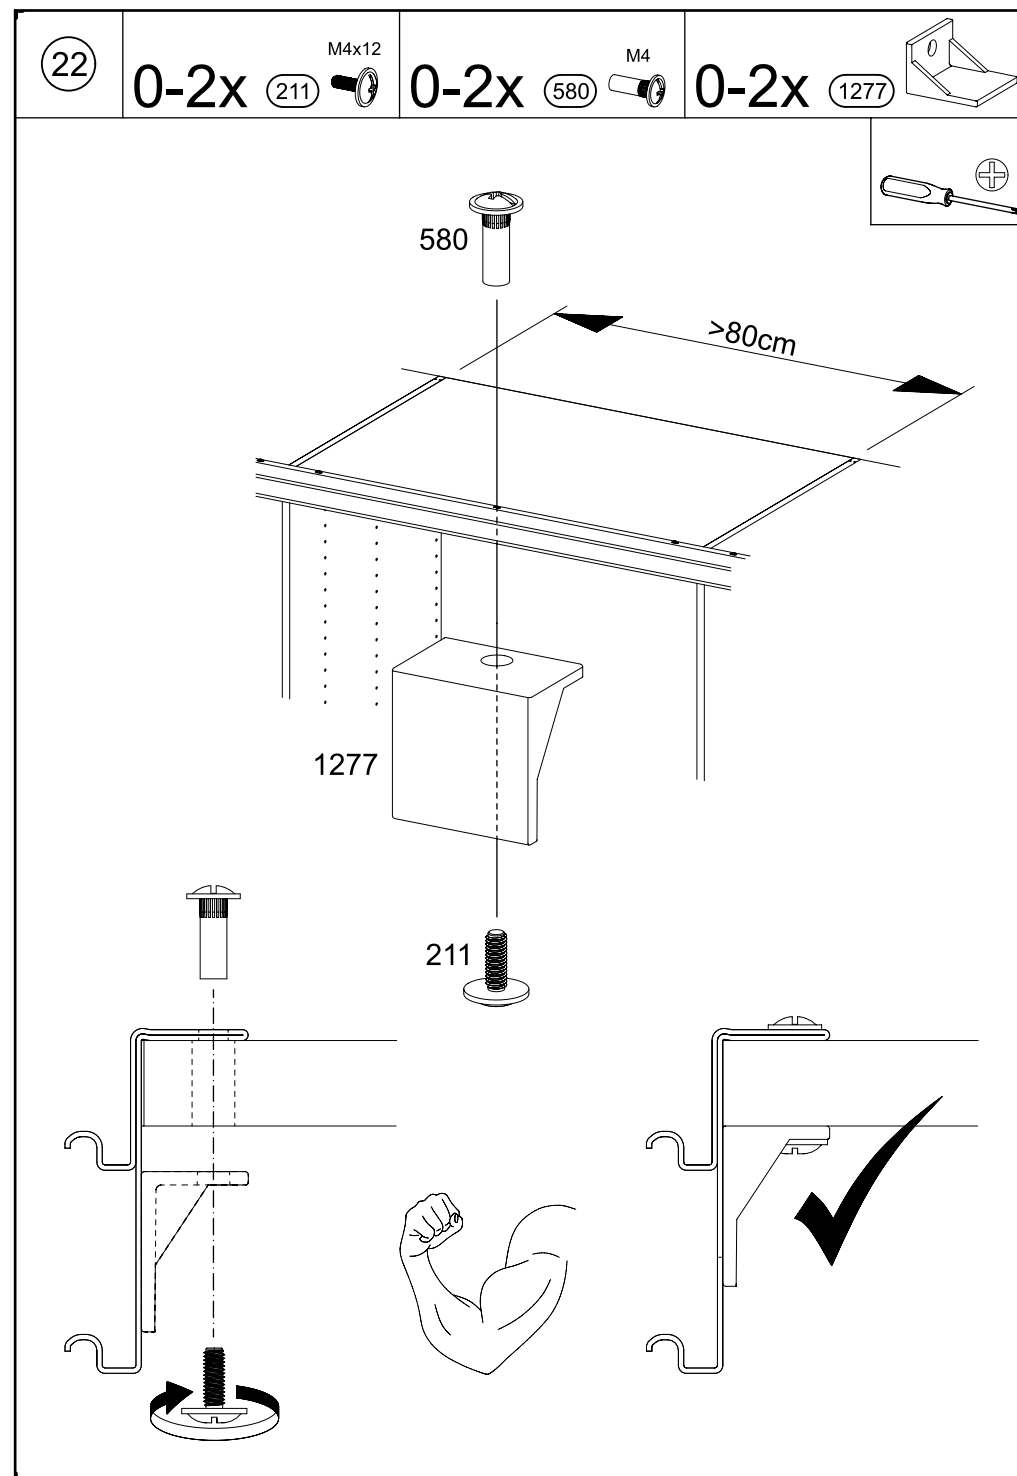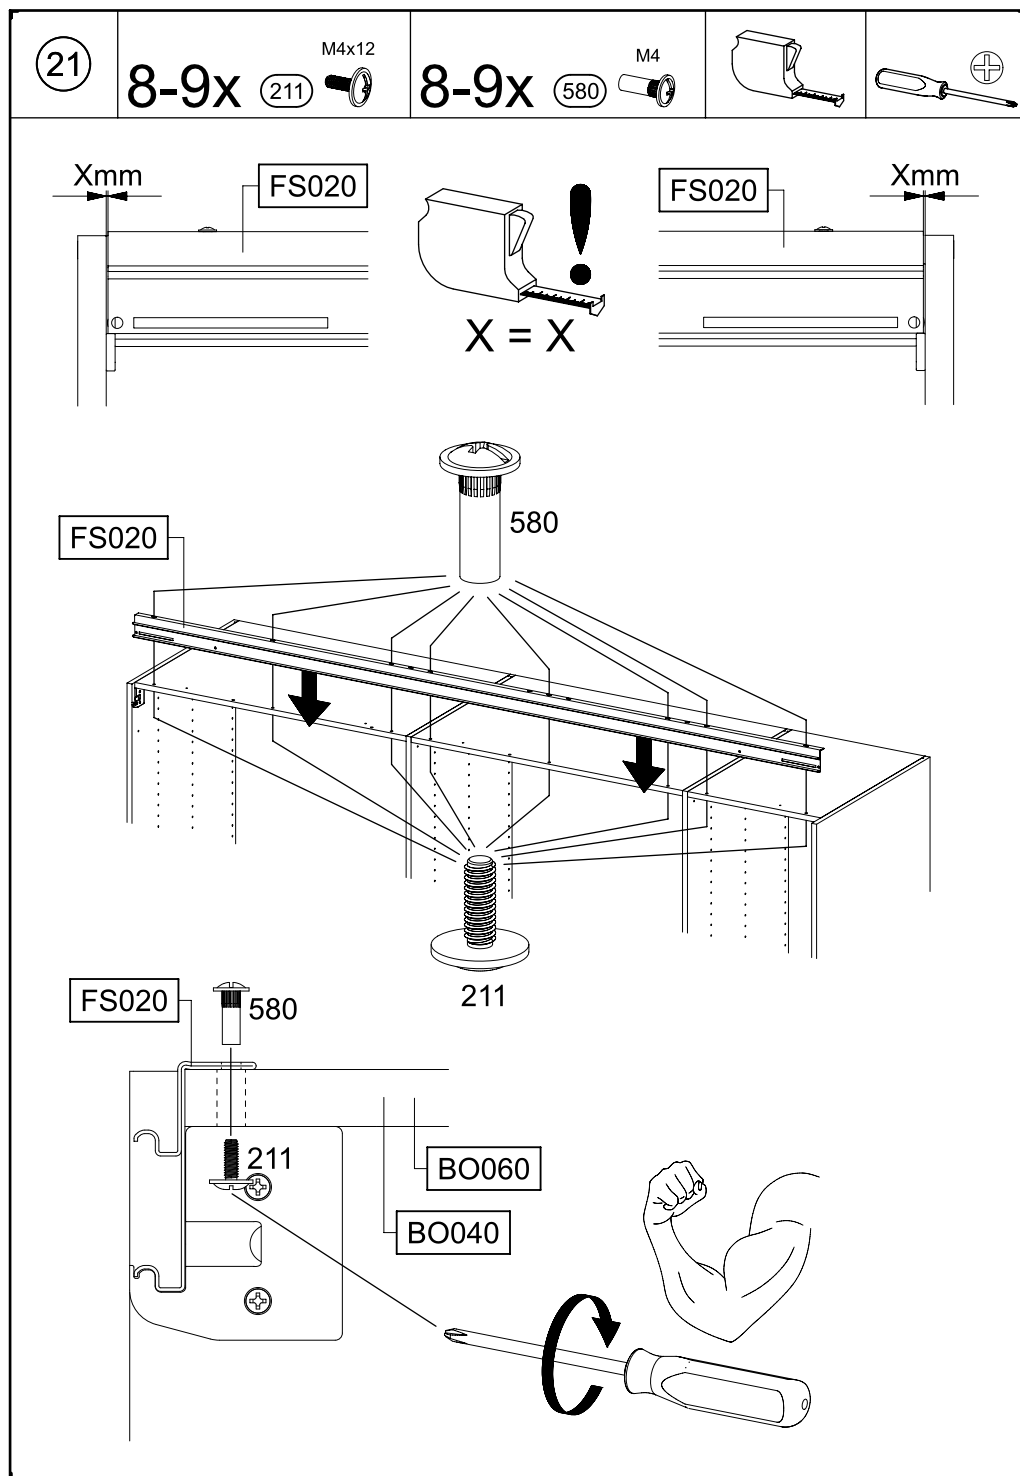

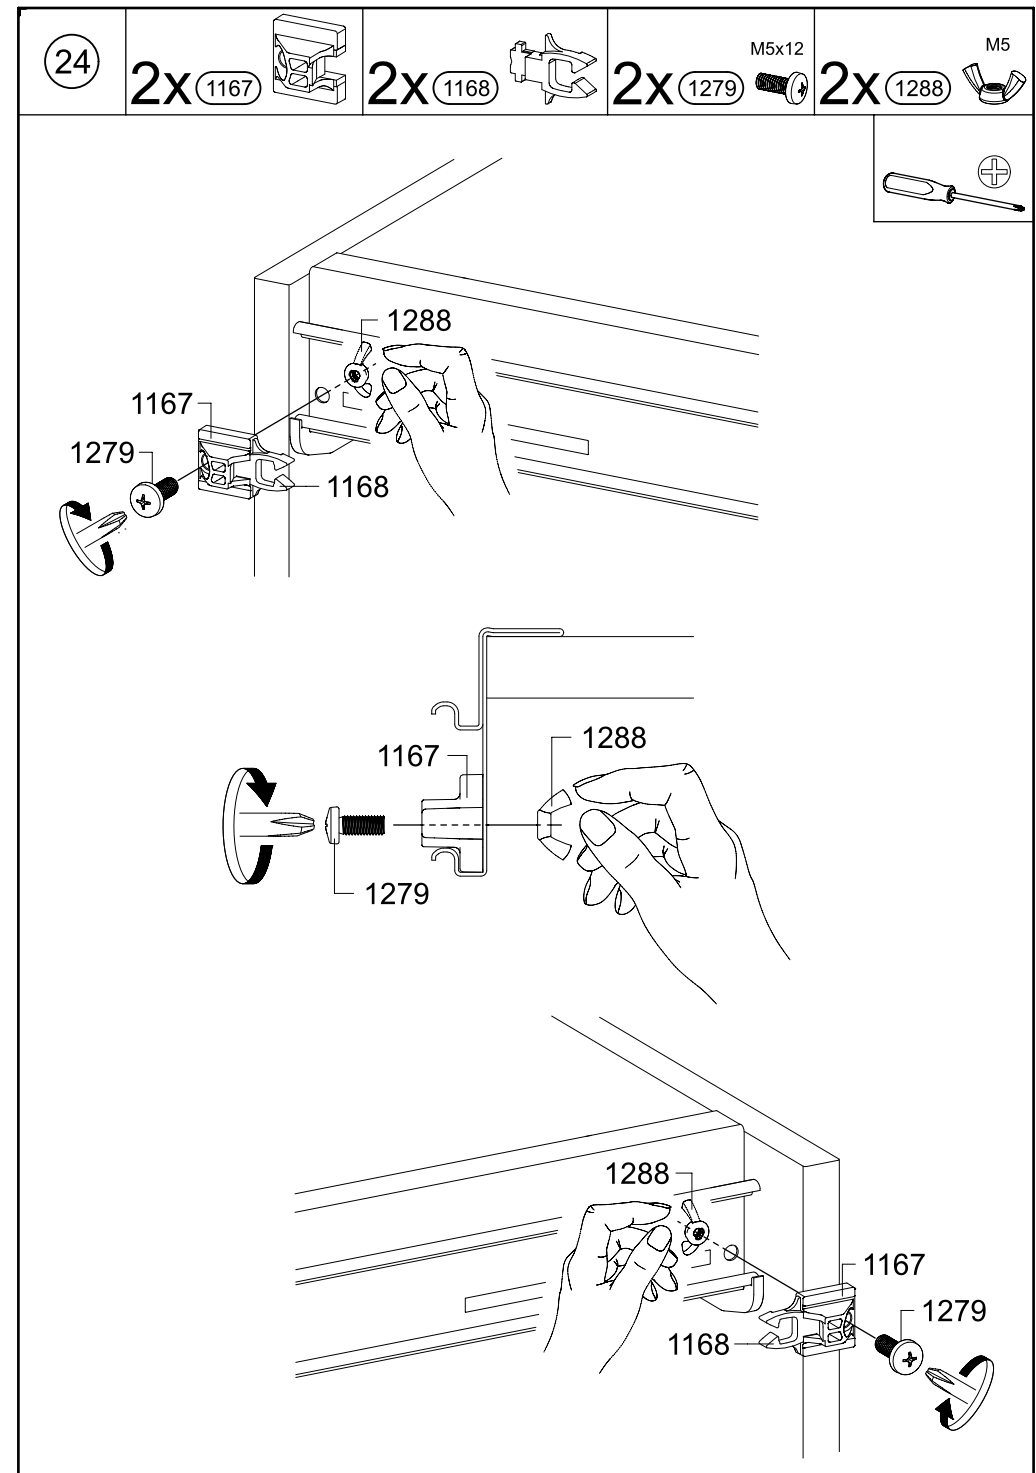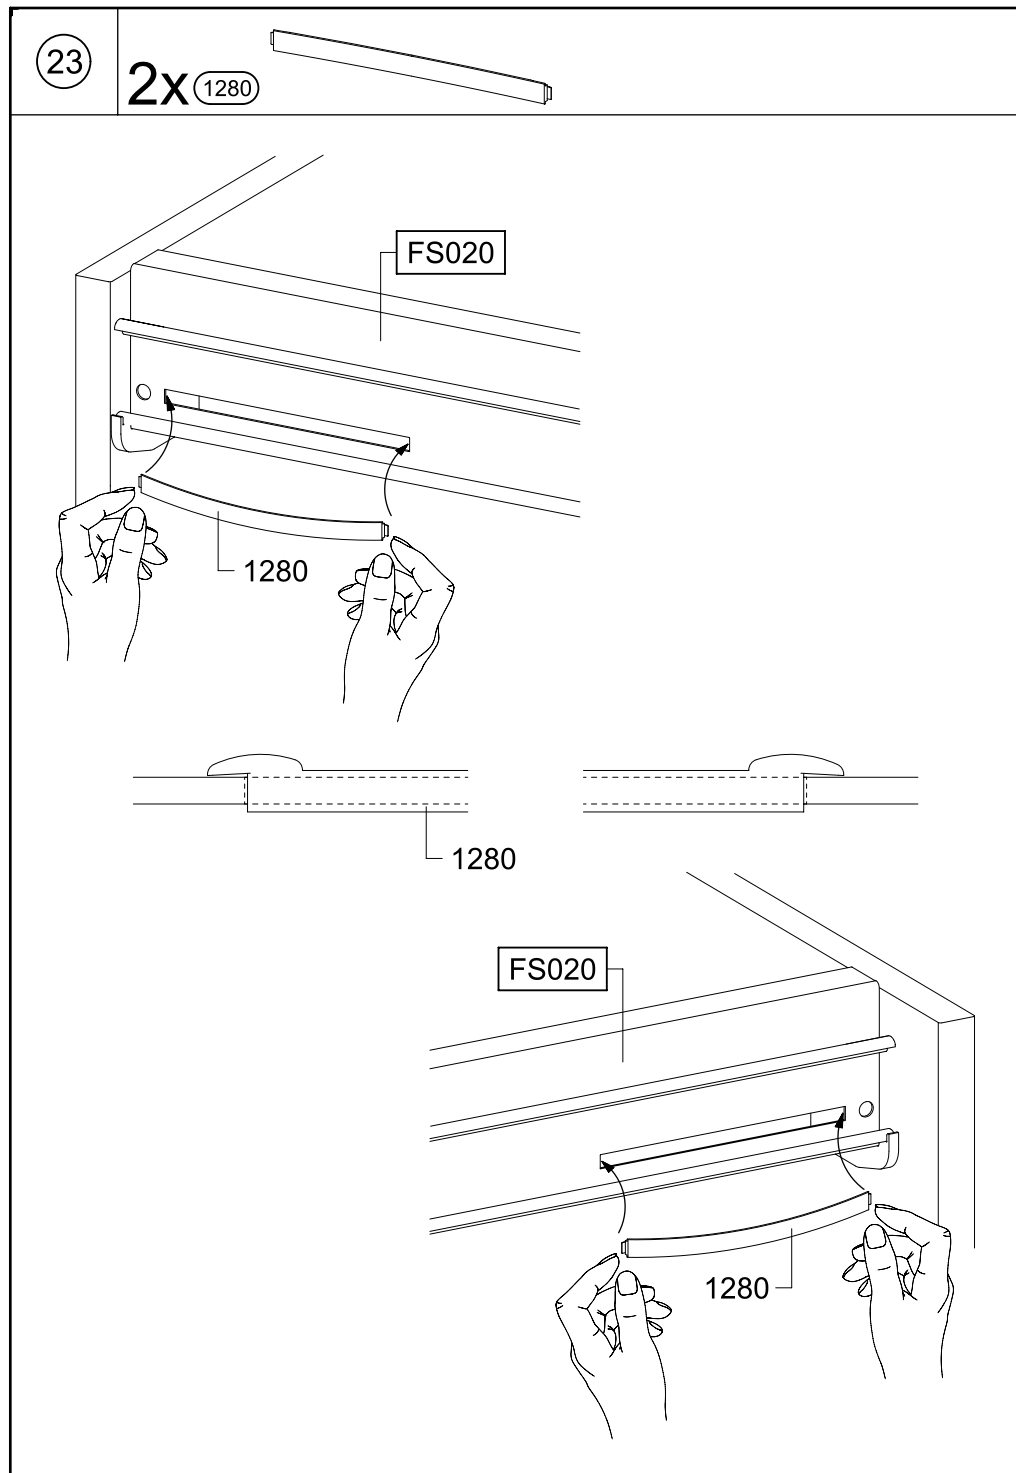

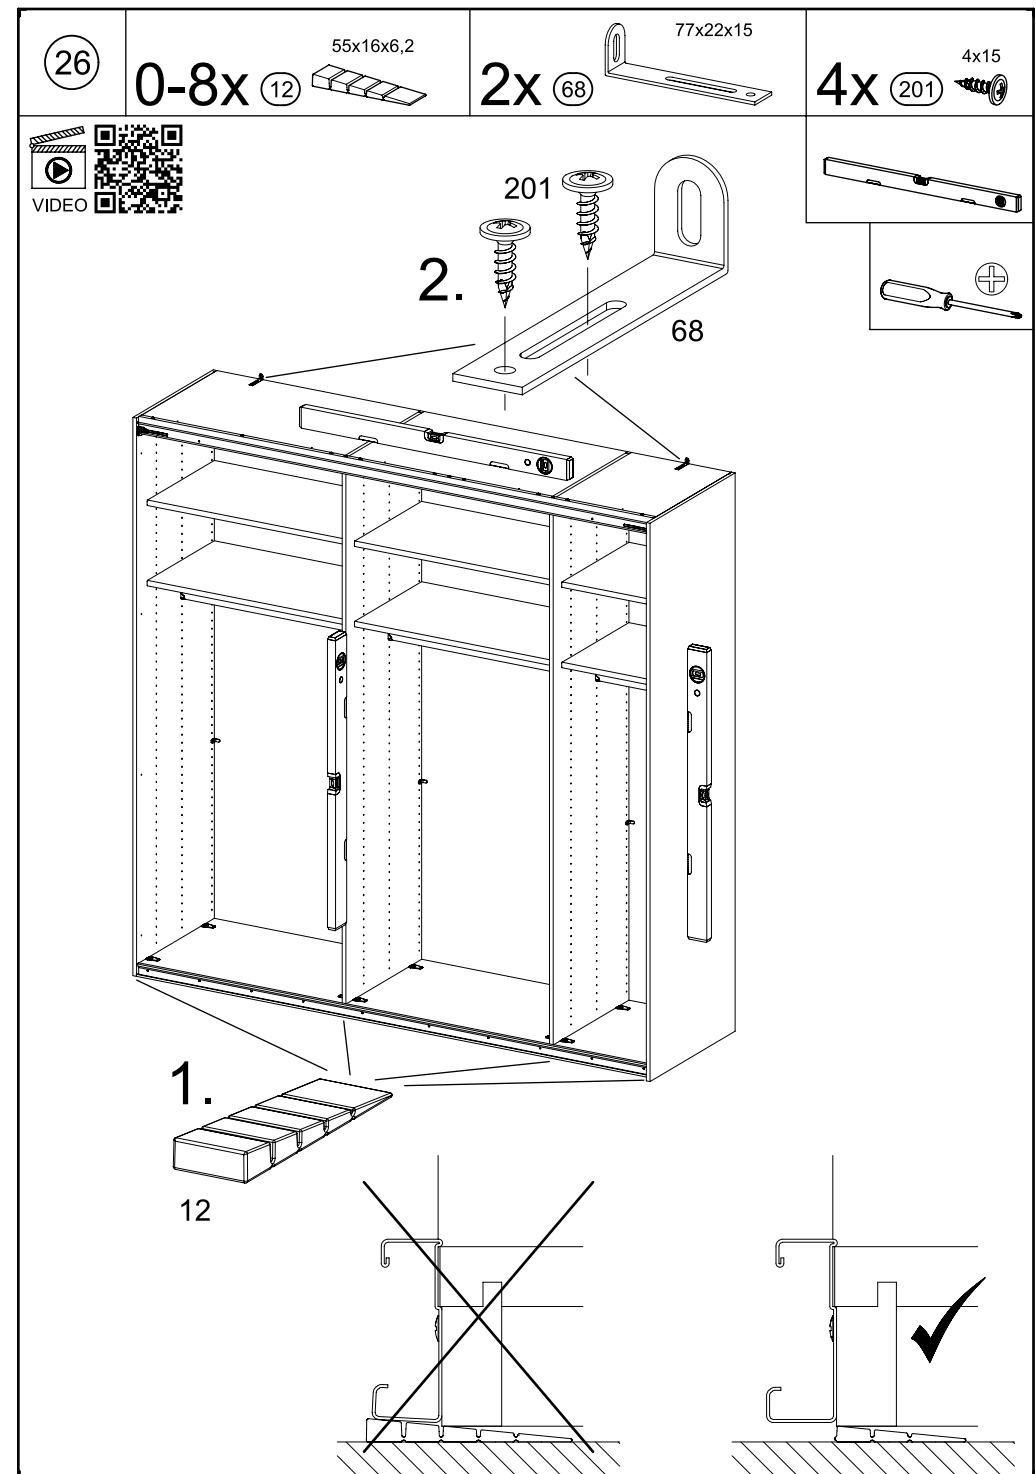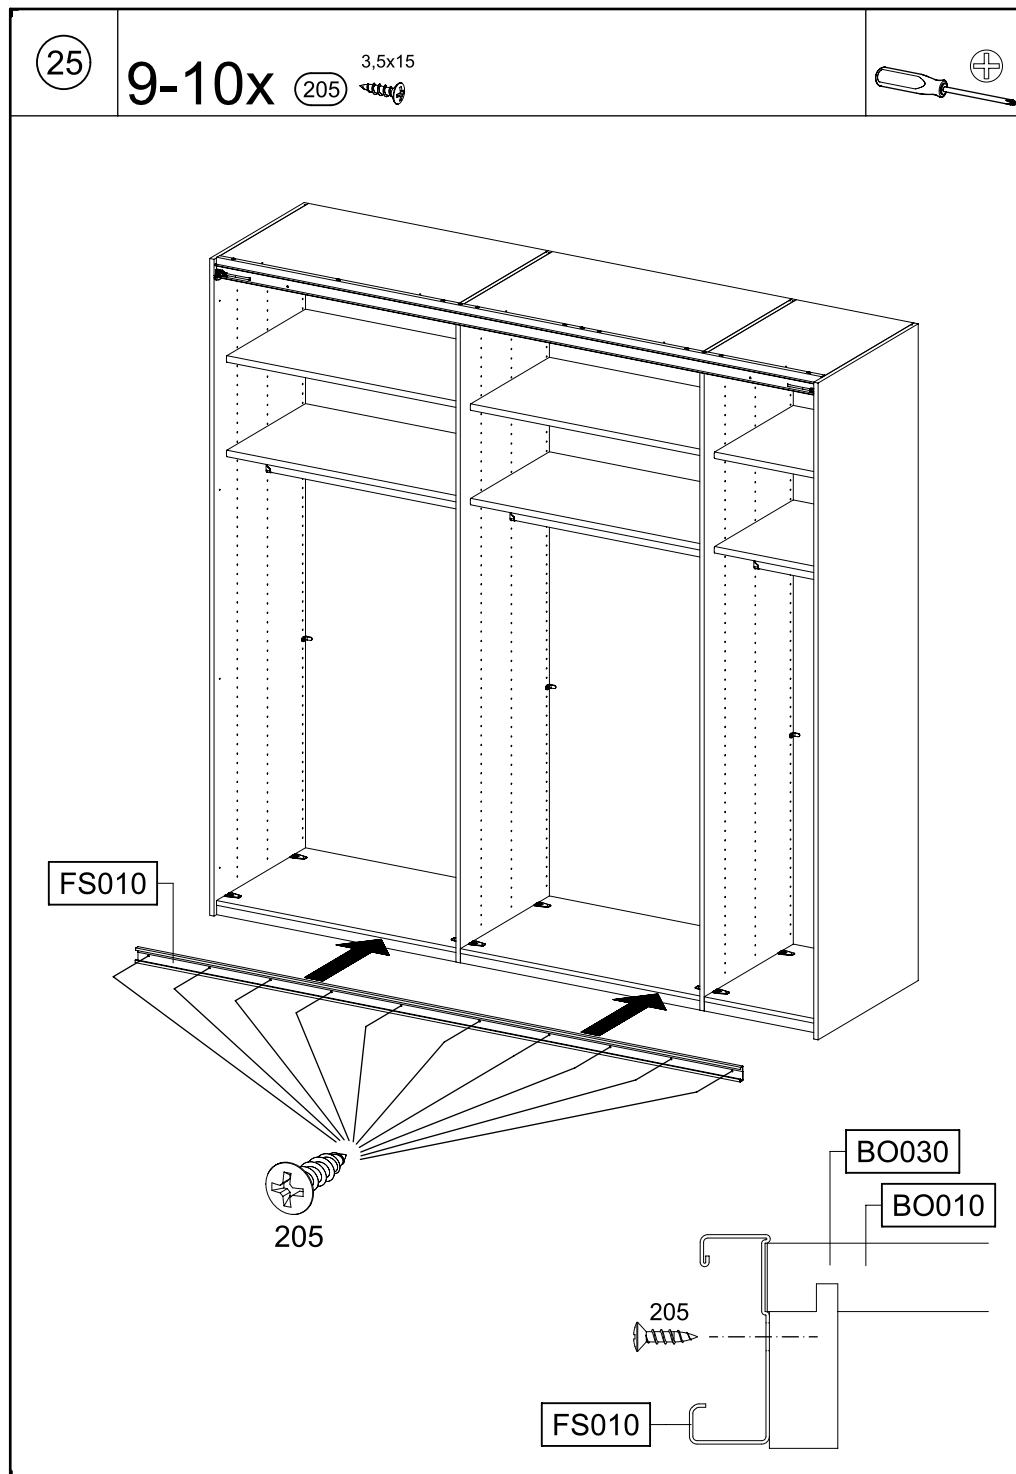

27

12x

45

